

Hybrid recorder
HR-700
(Pen writing type)
Instruction manual

Shinko
North America Ltd.

Web Site: www.shinkona.com

25 Whitefriars Drive
Toronto, Ontario, Canada M3A 2L2
TEL: 416 444-0817
FAX: 416 444-2361
TOLL FREE: 1 888-4SHINKO




Email: sales@shinkona.com


For safety using

Thank you for purchasing our HR-701 type (HR-702 type) Hybrid Recorder.

In order to exhibit all the functions of this instrument effectively and correctly, read and understand this instruction manual thoroughly before using the instrument.

The symbols below are used in this instrument for the cautioning information.

Symbols used in the instrument	
	This shows "Caution for handling". This symbol is used on the parts need to refer to the instruction manual for protecting human body and the instrument.
	This shows "Protective grounding". Be sure to provide protective grounding prior to the operation of this instrument.
	This shows "Risk of electric shock". This symbol is used on the parts, which has a risk of electric shock.

Be sure to observe the following warnings/cautions and those written in this manual in order to secure safety in handling the instrument.	
 WARNING	
General	In order to prevent electric shock; be sure to disconnect this instrument from the main power source when wiring it.
Protective Grounding	(1) In order to prevent an electric shock; be sure to provide protective grounding prior to turning on this instrument. (2) Do not cut a protective grounding conductor or disconnect protective grounding.
Power Source	(1) Make sure that the supply voltage for this instrument conforms to the voltage of the supply source. (2) Attach a protective cover prior to turning on this instrument.
Working Environment	Do not operate this instrument in the environment where it is exposed to a combustible/explosive/corrosive gas or water/steam.
Input and Output Wiring	Provide input and output wiring after turning off the power.



CAUTION

Input and Output Wiring

Do not use unused terminals for other purposes such as relaying, etc.

Transportation

Do not touch the switches, etc. inside this instrument. Also, do not replace the main unit or printed circuit boards. When this is neglected, we cannot guarantee functioning of the instrument. Contact our dealer where you purchased the instrument, or our sales representative.

Inside of Instrument

When transporting this instrument or the equipment with this instrument incorporated in it, take measures to prevent opening the door and falling out the inner module.

[Note]

Instruction Manual

- (1) Deliver this instruction manual to an end user.
- (2) Prior to handling this instrument, be sure to read this manual.
- (3) If you have any questions on this manual or find any errors or omissions in this manual, contact our sales representative.
- (4) After reading this manual, keep it carefully near the instrument.
- (5) When the manual is lost or stained, contact our sales representative.
- (6) It is prohibited to copy or reproduce this manual without our permission.

Installation

- (1) When installing this instrument, put on a protective gear such as safety shoes, helmet, etc. for your safety.
- (2) Do not put your foot on the installed instrument or get on it, because it is dangerous.

Maintenance

Only our servicemen or people authorized by Shinko are allowed to remove and take the inner module, the main unit and printed circuit boards apart.

Disposal

- (1) Dispose the replaced batteries in a correct way.
- (2) Do not incinerate plastics of maintenance parts and replacement parts.
A harmful gas may be produced.

Cleaning

- (1) Use dry cloth to clean the surface of this instrument.
- (2) Do not use any organic solvent.
- (3) Clean the instrument after the power is turned off.

Revisions

This instruction manual is subject to change without prior notice.

Using procedure for this manual

Using procedure



This instruction manual consists of “For safety using”, “Contents” and “Chapter 1 to Chapter 11” as below. Read the corresponding sections for your purpose to use this instrument.

Chapter and TITLE	For purchase and install	For initial setting and change setting	For daily operation	For using communication	For maintenance and trouble-shooting
For safety using (page 1)	◎	◎	◎	◎	◎
1. INTRODUCTION	◎				
2. CONSTRUCTION	○	○	○		○
3. INSTALLATION	◎		○		
4. WIRING	◎	○	○	○	○
5. PREPARATIONS FOR OPERATION		○	◎		
6. OPERATION		○	◎		
7. DEVICE SETTING		◎		○	○
8. COMMUNICATIONS				◎	
9. MAINTENANCE					◎
10. TROUBLESHOOTING		○			◎
11. SPECIFICATIONS	○	○			○

◎ : Be absolutely certain to read this.

○ : Be certain to read this if you need.

The symbols below are used on the warning and cautioning information in this manual.

Symbols used in this manual	
 WARNING	Failure to observe this information could result in death or injury. Be absolutely certain to read this.
 CAUTION	Failure to observe this information could damage the instrument. Be certain to read it.
[Note]	This is cautionary information for correct use of the instrument. Be certain to read it.
[Reference]	This is information to help you use the functions of this instrument more effectively.

Guide of Instruction manual

The instruction manuals of this instrument are as the table below.

	Name	Part No.	Outline
This manual →	1 HR-700 Hybrid Recorder (Pen type) instruction manual	HR72E	Explanation for installing, wiring, standard operation. And setting or operation for using this instrument.
	2 HR-700 Hybrid Recorder Communication Command instruction manual	HR7CE	Explanation for reading and writing data of the recorder by communication function.

CONTENTS

1. INTRODUCTION.....	6	6.5.1 Auto Display<Auto>	46
1.1 Checking the Accessories.....	6	6.5.2 Manual Display<MAN>	46
1.2 Checking the Type and Specifications	8	6.5.3 Date Display<DATE>	46
1.3 Temporary Storage.....	9	6.5.4 Time Display<TIME>	46
1.4 Indication Card.....	9	6.5.5 Display Off<OFF>	46
2. CONSTRUCTION	10	7. DEVICE SETTING.....	47
2.1 Appearance	10	7.1 Setting the Setup Mode	47
2.2 Display Screen and Operation Keys	11	7.1.1 Setting the Range.....	50
2.2.1 Display Screen.....	11	(1) Setting method.....	50
2.2.2 Operation Keys	12	(2) HOLt (Current/Voltage), tC (Thermocouple), rtD (Resistance Temperature Detector)	51
3. INSTALLATION.....	13	(3) SCALE (Scaling)	53
3.1 External Dimensions and		(4) SQrt (Square Root)	55
Panel Cutout Dimensions.....	13	(5) dECAd (Decade).....	57
3.2 Mounting to the Panel	14	(6) dELt (Difference), Si Gt (Sum), AEAr (Average).....	59
3.2.1 Procedure for Mounting to the Panel.....	14	(7) SkI P (Skip)	60
3.2.2 Mounting to the Panel		7.1.2 Setting the Alarm.....	61
in compliance with the IP65.....	15	7.1.3 Setting the Unit	63
4. WIRING	16	(1) Character Code Table	64
4.1 Terminal arrangement and Power Wiring.....	16	7.1.4 Setting the Chart Speed.....	65
4.1.1 Terminal Layout	16	7.1.5 Setting the Date and Time	66
4.1.2 Power Wiring	16	7.1.6 Copying the Setting Data	67
4.1.3 Wiring Procedure.....	17	7.1.7 Setting the Other Functions	68
4.2 Input Wiring.....	18	(1) Zone (Zone Recording).....	69
4.2.1 Wiring Procedure.....	18	(2) PARt (Partial Compression/Expansion)	70
4.3 DI function/Alarm Output Wiring (Option).....	20	(3) PrI nt (Digital Print)	71
4.3.1 DI function/Alarm Output Wiring Example.....	20	(4) tAG (Tag)	72
4.3.2 Alarm Output Wiring Procedure.....	21	(5) CmT (Comment Words)	73
4.3.3 DI function Wiring Procedure	21	7.2 Setting the Engineering Mode to	
4.4 Communication Wiring	22	use this more smoothly.....	74
4.4.1 RS-232C Wiring.....	22	7.2.1 Alarm Hysteresis	77
4.4.2 RS-485 Wiring	22	7.2.2 Burnout ON/OFF	77
5. PREPARATIONS FOR OPERATION	23	7.2.3 Channel Offset.....	78
5.1 Setting the Chart Paper.....	23	7.2.4 Reference Junction Compensation	78
5.2 Setting the Cartridge Pen.....	30	7.2.5 Digital Filter	80
5.3 Setting the Ribbon Cassette	32	7.2.6 Settings Related to Recording.....	80
6. RUNNING.....	37	(1) Recording start/stop trigger setting	80
6.1 Running.....	37	(2) Tag/channel print selection.....	81
6.1.1 Status after Initial Screen	37	(3) Alarm print ON/OFF	81
6.2 Recording.....	38	(4) Logging print ON/OFF	82
6.2.1 Recording Colors	38	(5) Logging print Synchronous/Asynchronous.....	82
6.2.2 Printing Color	38	(6) Print gap correction ON/OFF	83
6.2.3 Pen Gap	38	7.2.7 Setting the Communication Function	84
6.2.4 Gaps between Pens and Printer.....	38	7.2.8 Initializing the Setup Data	84
6.2.5 Print gap collection	39	7.2.9 DI functions.....	85
6.3 How to Record.....	39	7.2.10 Temperture Unit.....	85
6.3.1 Starting/Stopping Recording Operation.....	39	7.2.11 Point Calibration	86
6.3.2 Feed the Chart Paper.....	39	7.2.12 Data Calibration.....	87
6.3.3 Print Sample	40	7.3 Terminating the Engineering Mode.....	89
6.4 Digital Print.....	41		
6.4.1 Manual Print.....	41		
6.4.2 List Print	42		
6.4.3 Engineering List Print	44		
6.5 Changing the Display	46		

8.COMMUNICATIONS.....	90		
8.1 General Description.....	90		
8.1.1 General Description of Functions	90		
8.1.2 Transmission Specifications.....	90		
8.1.3 Data Construction	90		
8.2 Opening/Closing the Link	91		
8.2.1 Open Command	91		
8.2.2 Close Command.....	92		
8.3 Outputting the Process Variable	92		
8.3.1 Specifying the Process Variable Output	92		
8.3.2 Updating the Data.....	92		
8.3.3 Specifying the Process Variable Data Output Order (At BINARY Mode Output) ..	92		
8.3.4 Outputting the Data	92		
8.3.5 Process Variable Data Transmission Format (ASCII)	93		
8.3.6 Process Variable Data Transmission Format (BINARY)	94		
8.4 Outputting the Unit and Decimal Point Position Data	95		
8.4.1 Specifying the Unit and Decimal Point Position Data Output	95		
8.4.2 Updating the Data.....	95		
8.4.3 Outputting the Data	95		
8.4.4 Data Format	95		
8.5 Outputting the Status.....	96		
8.5.1 Status Output Command	96		
8.5.2 Status Output	96		
8.6 Data Reception Example	97		
9. MAINTENANCE.....	98		
9.1 Inspection.....	98		
9.2 Cleaning	98		
9.3 Replacing Consumables	99		
9.4 Adjusting the Pen Recording Position (Point Calibration)	99		
9.5 Calibration (Data Calibration).....	99		
(1) Calibration of Voltage.....	100		
(2) Calibration of Resistance temperature detector	100		
(3) Calibration of Reference Junction Compensation.....	101		
10. TROUBLESHOOTING	102		
10.1 Troubleshooting.....	102		
10.1.1 Trouble Items	102		
10.1.2 When the Recorder Does not Work at All	102		
10.1.3 When There is a Big Error.....	103		
10.1.4 When the Pen Recording Deflected	103		
10.1.5 When Prints Nothing	104		
10.1.6 When Printing is Faint	104		
10.1.7 When the Chart Paper is not Fed at All	105		
10.1.8 When the Chart Paper is not Fed Properly	105		
10.2 Self Diagnosis Function (ERROR)	106		
10.2.1 Self Diagnostic Items.....	106		
10.2.2 Error Display	107		
11. SPECIFICATIONS	108		
11.1 Common Specifications.....	108		
11.1.1 Input Signal	108		
11.1.2 Performance and Characteristics.....	108		
11.1.3 Structure.....	109		
11.1.4 Power Source	109		
11.1.5 Normal Operating Conditions	109		
11.1.6 Alarm Output (Option : LH3)	110		
11.1.7 Safety Standard and EMI Standard.....	110		
11.1.8 DI Function (Option : RE1).....	110		
11.1.9 Paper-empty Detecting Function (Option : FL)	110		
11.2 Standard Setting Specifications.....	111		
11.2.1 Measurement Range.....	111		
11.2.2 The Accuracy at the Computation	114		
(1) Scaling	114		
(2) Square root computation.....	114		
(3) Decade.....	115		
(4) Difference, Sum, and Average	115		
11.2.3 Individual Specifications	116		
11.2.4 Standard Functions	117		
11.3 Standard Setting Functions.....	118		
11.3.1 Standard Setting Functions.....	118		
11.4 Optional Functions	118		
11.4.1 Remote Function of DI	118		
11.4.2 Alarm Board	118		
11.4.3 Communication Unit	118		

INTRODUCTION

1.1 Checking the Accessories

Upon delivery of this instrument, unpack and check its accessories and appearance.

If there are any missing accessories or damage on the appearance, contact our dealer where you purchased the instrument, or our sales representative.

Following accessories should be attached.

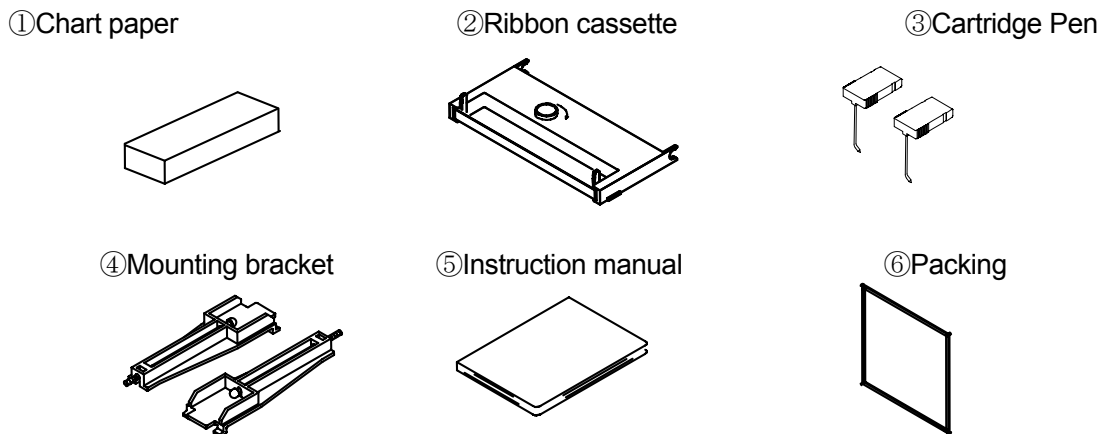


Fig. 1.1 Accessories

Table 1.1 List of Accessories

No.	Part Name	Type	Quantity		Remarks
			1 pen	2 pen	
1	Chart paper	H-10100	1	1	100 equal divisions
2	Ribbon Cassette	HPSROO1H0002C	1	1	
3	Cartridge Pen	WPSR196A000001A	1	1	For 1 pen (Red)
		WPSR196A000002A	—	1	For 2 pen (Green)
4	Mounting	H4A14175	2	2	Panel mounting bracket
5	Instruction	HR72E	1	1	This manual
6	Packing	H4H14900	1	1	For IP65


[Note]

The ribbon cassette has been set in the instrument when this is shipped.

[Note]

- ① This instrument is equipped with the ribbon cassette in back of the chart holder. Open the door and pull out the chart holder to check it. (See Section 5.1 about taking out the chart holder.)
- ② The chart paper and the cartridge pen are contained in the chart holder. Take the chart holder out and open the chart cover to check it.
- ③ Maximum angle of the door is 135 degrees when the door is fully open. Do not open the door further, or the hinge will be broken.

This instrument is shipped with the ribbon cassette in the back of the chart holder.

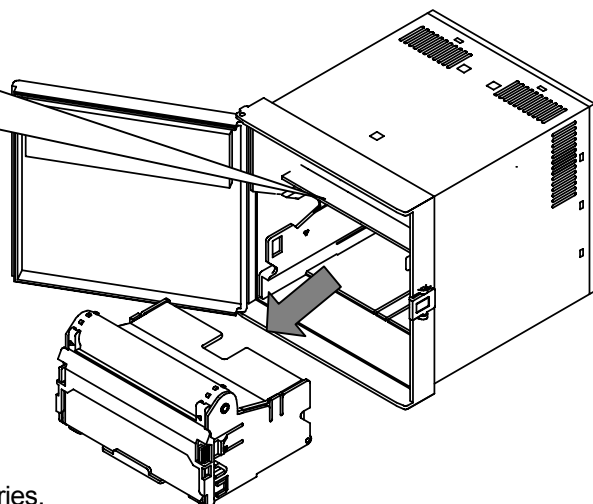

Take the chart holder out to check its accessories.

See Section 5.1 “Setting the Chart Paper” for pulling out the chart holder.

Fig. 1.2 Position of the Ribbon Cassette

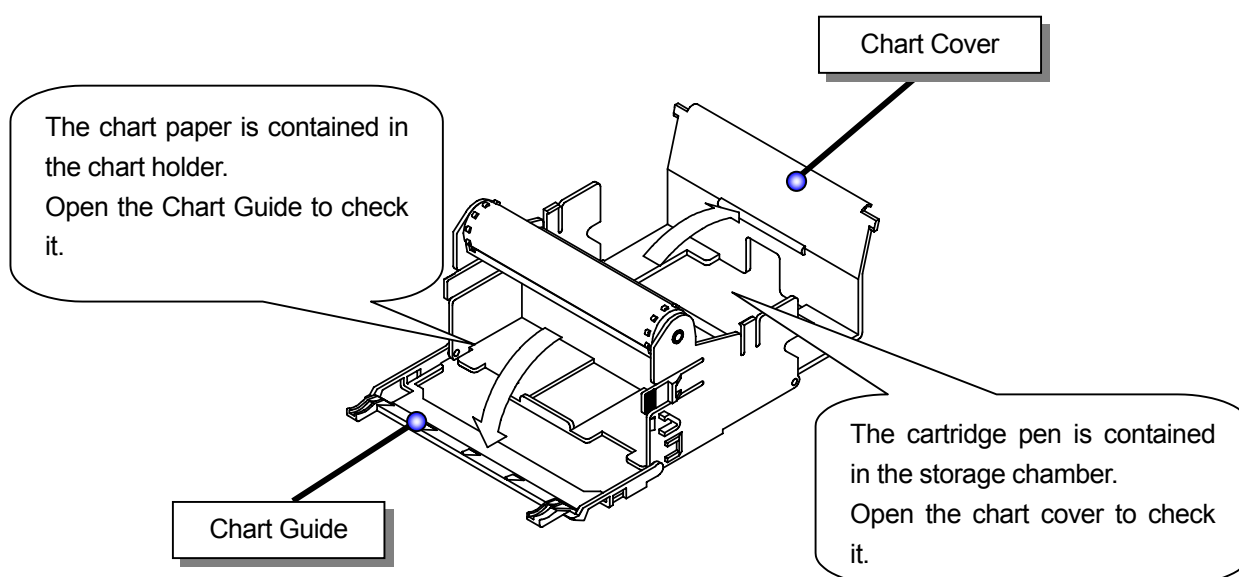


Fig. 1.3 Position of the Chart Paper and the Cartridge Pen

1.2 Checking the Type and Specifications

A nameplate is put on the inside of the instrument. Remove the chart holder and make sure that the nameplate is put in the middle far side of the instrument.

Make sure that this instrument meets your requested specification, seeing the following tables.

Table 1.2 Type

H R-7 0 □, □ □ □		1 4 4 (W) × 1 4 4 (H) × 1 5 0 (D) mm	
Measuring point	1		1 points
	2		2 points
Options		C 5	Communication function (RS-485)
		R E 1	DI function
		F L	Out of paper detection function
		L H 3	Alarm output function

1.3 Temporary Storage

Store the instrument in the following environment.

When incorporated in the equipment, store it in the following environment as well.



CAUTION

Storage in a poor environment may damage the appearance, functions, and service life of the instrument.

Storage Environment

- A place with little dust.
- A place free from combustible, explosive, or corrosive gases (SO₂, H₂S, etc.).
- A place free from vibrations or shocks.
- A place free from water or steam or high humidity (95% RH max.).
- A place free from direct sunlight or high temperature (50°C max.).
- A place free from an extremely low temperature (-20°C min.).

1.4 Indication Card

An indication card has been affixed to the door upon delivery. Enter a name as required.



CAUTION

Note that if a non-original nameplate is attached, it may damage the door or mounting part.

Appearance

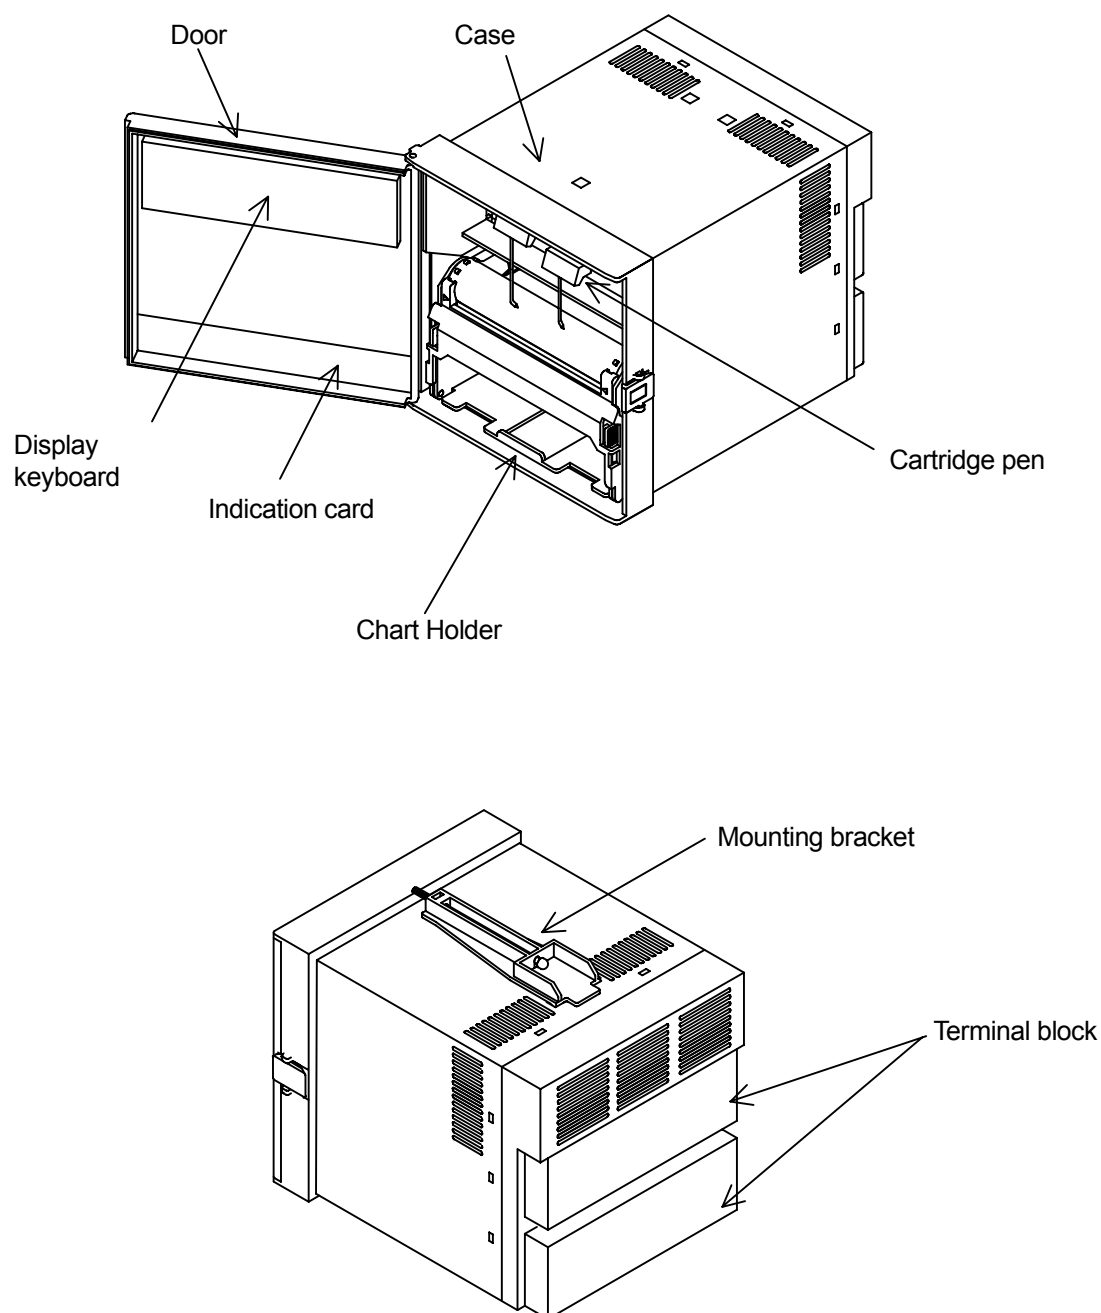


Fig. 2.1 Appearance

2.2 Display Screen and Operation Keys

2.2.1 Display Screen

The following describes the display screen. Since the channel numbers and data are indicated by a 7-segment LED, alphabets are symbolized to represent them.

For the LED display, see "Symbolized Alphabets for Display" at [Reference] below.

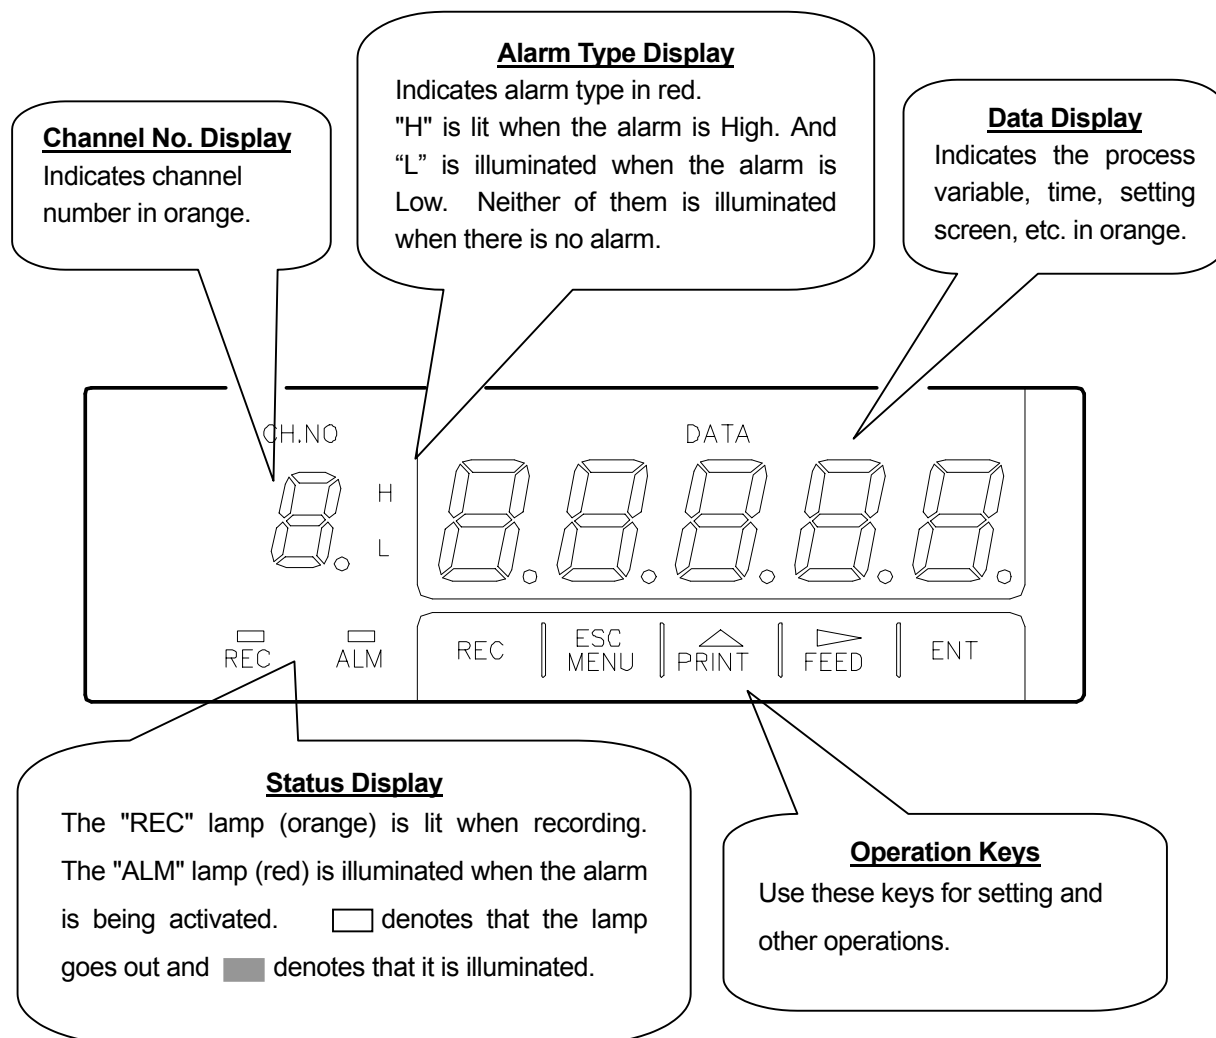


Fig. 2.2 Display

[Reference] Symbolized Alphabets for Display

Display	A	b	C	d	E	F	G	H	h	I	J	K	L	l
Alphabet	A	B	C	D	E	F	G	H	h	I	J	K	L	l
Display	M̄	n	O	P	q	r	S	t	U	V	W	X	Y	Z
Alphabet	M	N	O	P	Q	R	S	T	U	V	W	X	Y	Z

2.2.2 Operation Keys

The following describes the functions of each operation key.

The actual operation keys are represented as shown in the figure below in this manual.

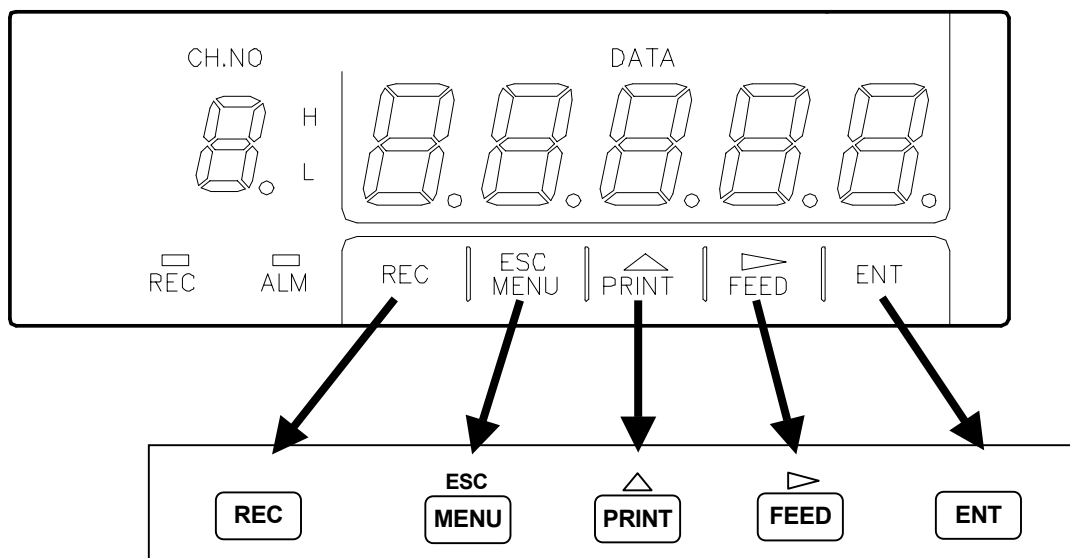


Fig. 2.3 Operation Keys in This Manual

Table 2.1 Names of Operation Keys and Their Functions

Key	Name	Function	
	"REC" key	Starts/stops recording. To stop, press the "REC" key for 3 seconds or more. (Puts out the "REC" lamp.) To start, press the "REC" key. (Lights the "REC" lamp.)	
	"MENU" key	MENU function	Selects engineering list print and changes the mode to the setting mode.
	"ESC" key	ESC function	Exits that menu halfway while selecting a function.
	"PRINT" key	PRINT function	Used to perform manual print or list print.
	"Δ" key	Δ function	Used to select a setting parameter (numeral or built-in command)(ascending direction).
	"FEED" key	FEED function	The chart paper is fed while the key is pressed, and stopped when released.
	"▷" key	▷ function	Used to shift a digit in setting a numeral.
	"ENT" key	Used to register a setting parameter (numeral or built-in command) after selecting it, or executing a function. Pressing this key executes the setting.	

INSTALLATION

3.1 External dimensions and panel cutout Dimensions

Unit : mm

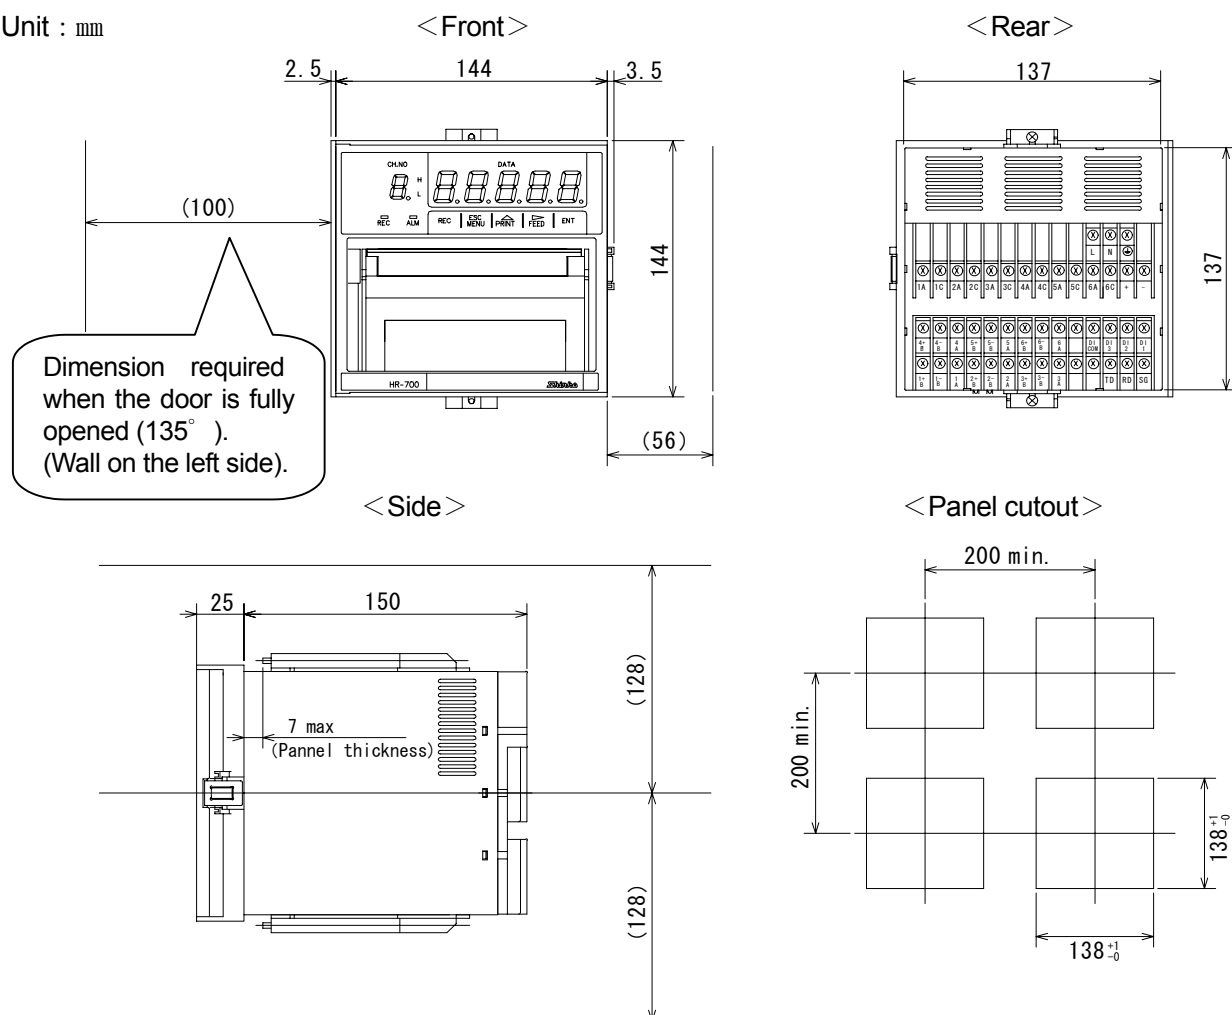


Fig. 3.1 External dimensions and panel cutout



CAUTION

For maintenance and using the instrument safely, it is recommended that spaces larger than the size written in the bracket be secured per unit.

3.2 Mounting to the Panel



WARNING

Do not install the instrument in a place exposed to a combustible, explosive, or corrosive gas (SO₂, H₂S, etc.).



CAUTION

Install the instrument in the following places

- A place without rapid humidity change.
- A place of normal temperature (25°C or so).
- A place exposed to as little mechanical vibrations as possible.
- A place with as little dusts as possible.
- A place affected by the electromagnetic field as little as possible.
- A place not directly exposed to high radiant heat.
- A place where the altitude is up to 2000m.
- Humidity has an effect on the chart paper and ink. Use the instrument in a humidity range of 20 to 80%RH (60%RH is optimum).
- This instrument needs the inside installation.

Mounting to the Panel

- A steel plate not thinner than 1.2mm is recommended as a mounting panel.
- The maximum thickness of the mounting panel is 7mm.

Inclination

- Install the instrument horizontally.

The instrument should be installed so that its inclination should be 0° at the front and within 30° at the

3.2.1 Procedure for Mounting to the Panel

- 1) Assemble the mounting bracket referring to Fig.3.2.
- 2) Insert this instrument through the front of the panel.
- 3) Hook the claws of the mounting bracket at the square holes in the top and bottom surfaces of the case.
- 4) Tighten the screw of the mounting bracket with a screwdriver to attach it to the panel.

When the mounting unit does not move back and forth any more, tighten a screw by 180°.

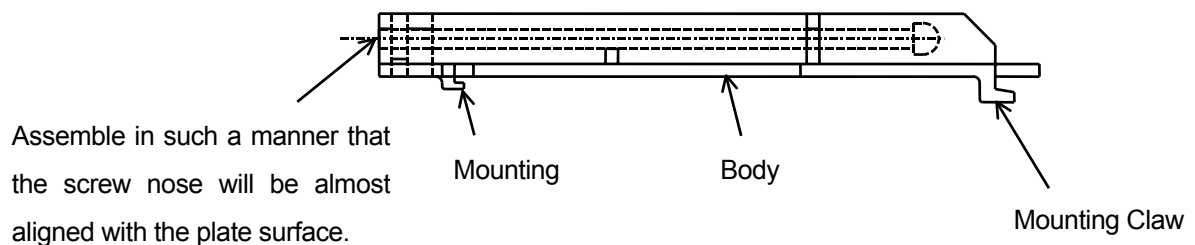


Fig. 0.2 Mounting bracket

[Note]

If it is tightened with an excessive force, the case may be distorted and the mounting bracket may be deformed. An adequate tightening torque is about 0.2 to 0.3 N·m (2~3 kgf·cm).

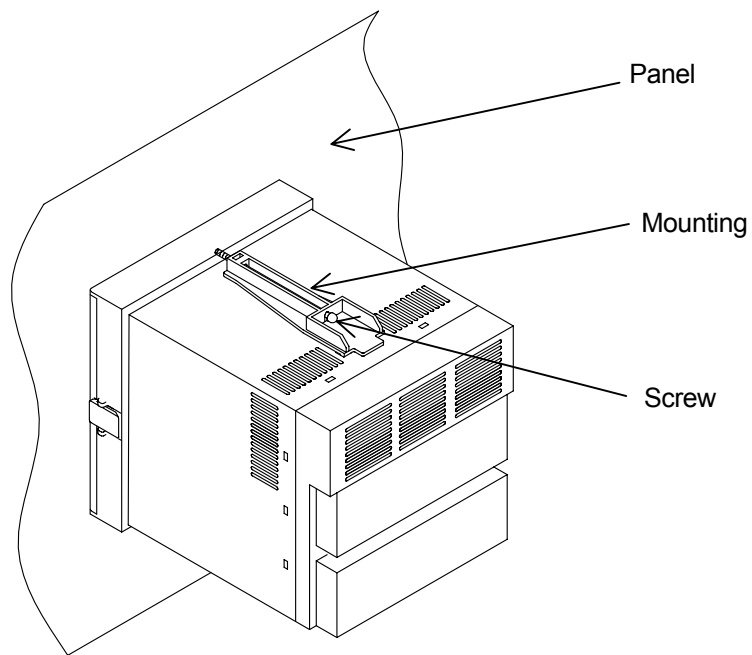


Fig. 3.3 Mounting to the Panel

3.2.2 Mounting to the Panel in compliance with the IP65

Prior to mounting the instrument to the panel, attach packing to the position shown in the figure.

The rest of the procedure is the same.

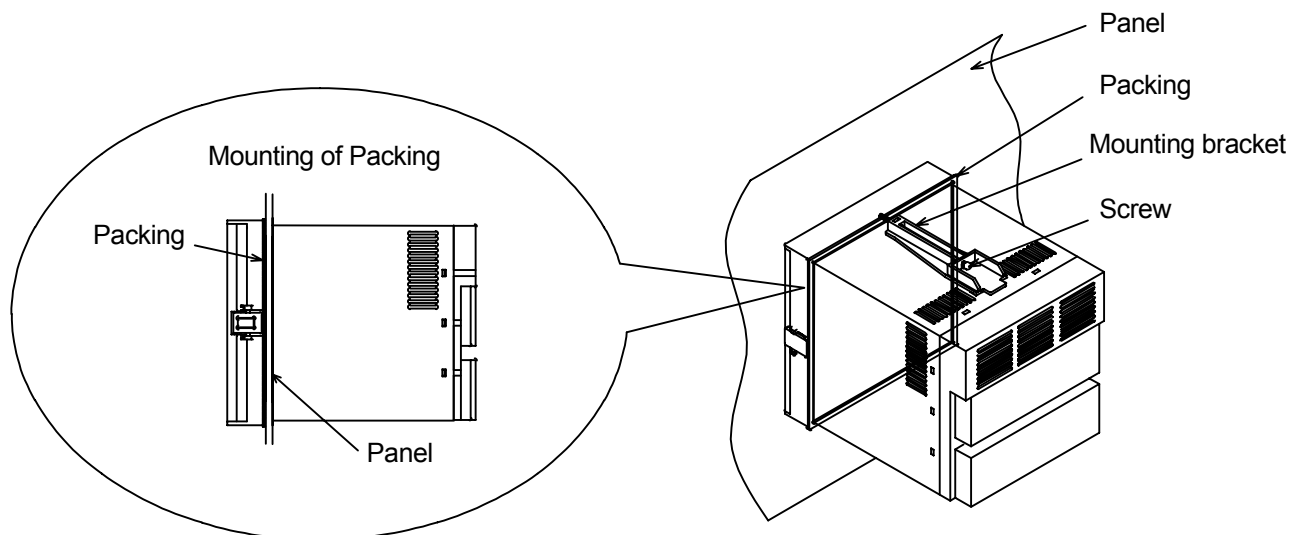


Fig. 3.4 Mounting to the Panel (in compliance with the IP65)

4. WIRING

4.1 Terminal arrangement and Power Wiring

4.1.1 Terminal arrangement

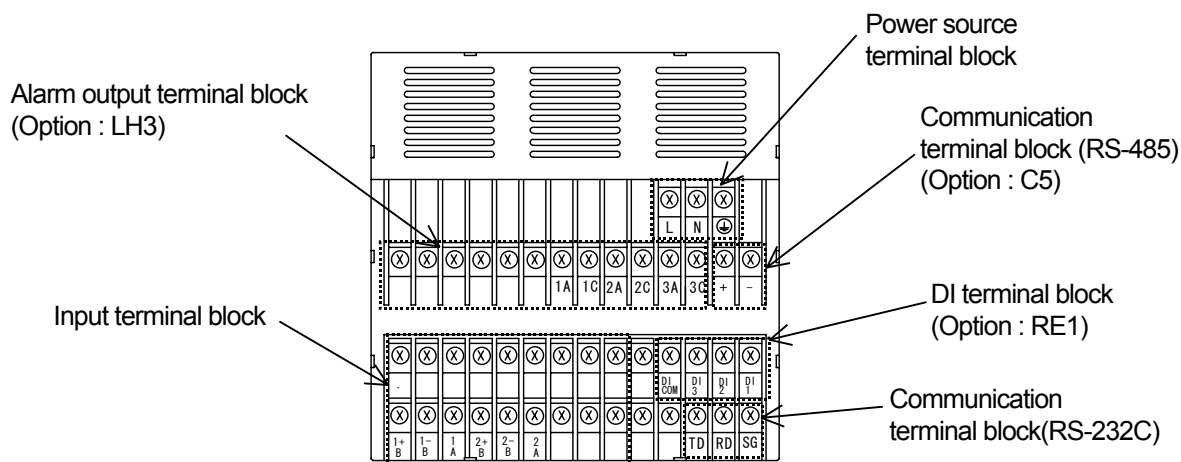


Fig. 4.1 Terminal Layout (Rear view)

4.1.2 Power Wiring



WARNING

- ① In order to prevent an electric shock, be sure to provide protective grounding prior to the power supply to the instrument.
- ② Do not cut a protective grounding conductor or disconnect protective grounding.
- ③ Make sure that the supply voltage for the instrument conforms to the voltage of the supply source.
- ④ Attach a transparent protective cover prior to turning on the POWER of the instrument.
- ⑤ Any interruption of the protective conductor inside or outside the instrument or disconnection of the protective grounding terminal is likely to make the instrument dangerous under some fault conditions. Intentional interruption is prohibited.



CAUTION


- ① As an electric wire for the power source, use a 600 V vinyl insulated wire (IEC 227-3) or its equivalent or above.
- ② Attach a round press-fitting terminal with insulated sleeve (for M3.5) to the end of the electric wire.
- ③ Connect a protective grounding (resistance: 100 Ω or lower, a minimum diameter of a grounding conductor: 1.6mm) to the protective grounding terminal.
- ④ If other instrument shares the protective grounding conductor, there may be an effect caused by noise coming from the grounding conductor. It is recommended not to share it with other instrument.
- ⑤ In order to comply with the requirements of safety standard EN61010, the recorder shall have one of the following as a disconnecting device, fitted within easy reach of the operator, and labeled as the disconnecting device.
 - a. A switch or circuit breaker which complies with the requirements of IEC60947-1, IEC60947-2 and IEC60947-3.
 - b. A separable coupler which can be disconnected without the use of a tool.
 - c. A separable plug, without a locking device, to mate with a socket outlet in the building.
- ⑥ This product has been designed to conform to IEC1010-1 installation category II and pollution degree 2.

4.1.3 Wiring Procedure



CAUTION

The transparent protective cover should surely remove the left and right (both sides) hooks simultaneously. If it removes by turns, there is a possibility that it may be damaged.

- 1) Put your fingers on the left and right (both sides) hooks of the transparent protective cover on the power source terminal block. Pushing them inside, pull out the cover to this side.
- 2) Connect the power source electric wire referring to Fig. 4.2. Connect the protective grounding to the  terminal. Connect the non-grounding side of the power source to "L" terminal. Connect the grounding side to the "N" terminal.
- 3) Put on the transparent protective cover.
- 4) Make sure that protective grounding is properly done.

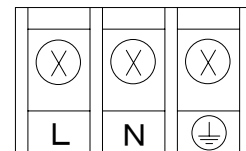


Fig. 4.2 Power source Terminal block

4.2 Input Wiring



CAUTION

① Precautions for the input electric wire

- See to it that no noise is mixed in input wiring. For input wiring, it is recommended a shielding wire or twisted wire effective for noise be used.
- In the case of thermocouple input, connect a thermocouple wire directly or use a compensating lead wire. It is recommended a shielded input line be used.
- In the case of resistance temperature detector input, dispersion of 3-wire line resistance should be less than the below mentioned values. It is recommended to use a shielded input line.

For Pt 100, JPt 100 ; 50m Ω max.

- When it is likely to be affected by induction noise, particularly when wiring near the high-frequency power source, it is recommended a shielded twisted wire be used.
- Attach a round press-fitting terminal with insulated sleeve (for M3.5) to the end of the electric wire.

② Precautions for wiring

- The wiring between the instrument and measurement point should be kept away from the power circuit (25V or higher circuit or DO circuit).
- Short-circuit unused input terminals. (Short-circuit between "+" and "-" in the case of mV, V, or thermocouple input, and short-circuit among A, B, and B in the case of resistance temperature detector input.)
- Be sure to ground the shield of connecting wire.

4.2.1 Wiring Procedure



CAUTION

The transparent protective cover should surely remove the left and right (both sides) hooks simultaneously. If it removes by turns, there is a possibility that it may be damaged.

- 1) Put your fingers on the left and right (both sides) hooks of the transparent protective cover on the input terminal block. Pushing them inside, pull out the cover.
- 2) Wire the input lines referring to Fig. 4.3, Fig. 4.4 and Fig. 4.5 (Page 19).
- 3) Put on the transparent protective cover.

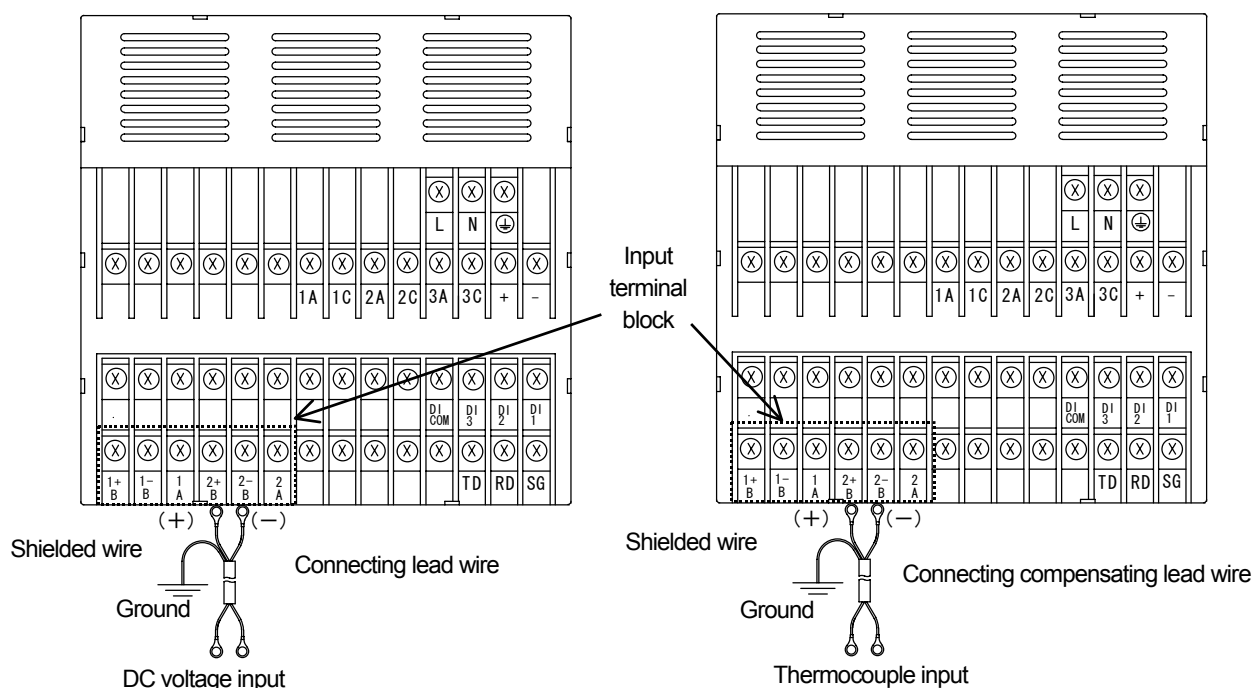


Fig. 4.3 Input Wiring (For mV, V and Thermocouple inputs)

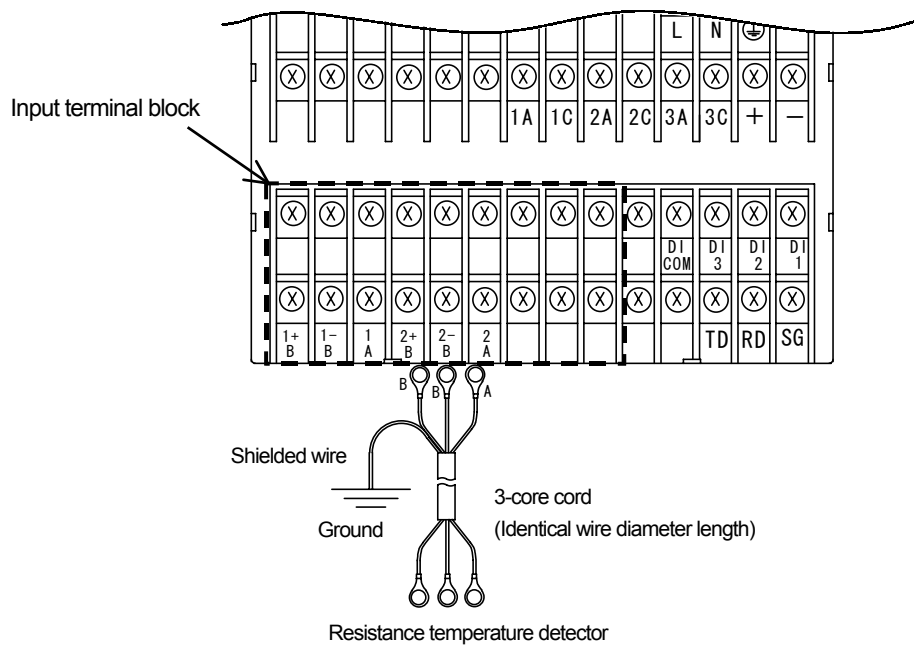


Fig. 4.4 Input Wiring (For Resistance temperature detector)

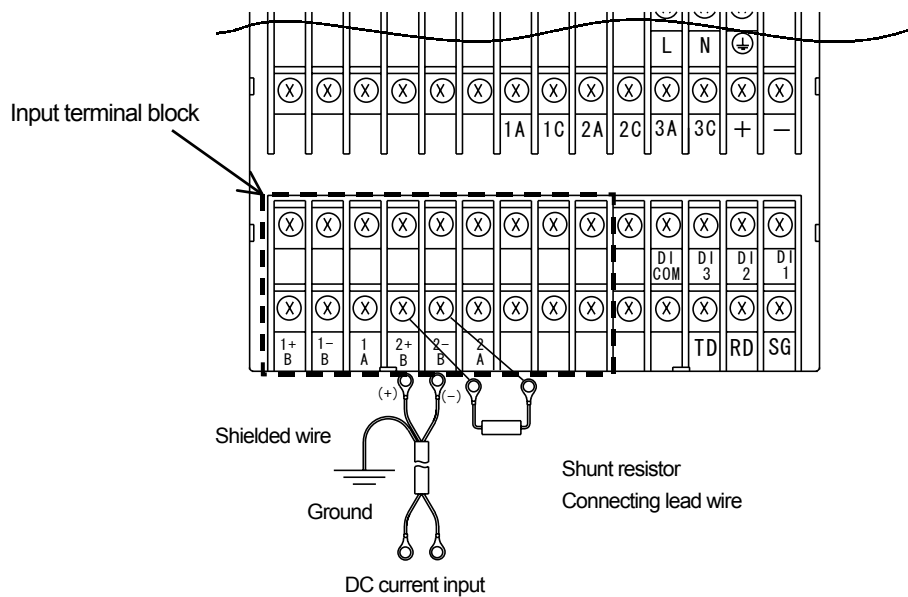


Fig. 4.5 Input Wiring (For mA input)



CAUTION

- ① Attach the shunt resistor to the input terminal block of the instrument.
- ② A shunt resistor influences input accuracy. Use the following recommended resistor.
Resistance: 250 Ω Rated power: 1/4W Tolerance: $\pm 0.1\%$ max.
Temperature coefficient: $\pm 50\text{ppm}$ max.

4.3 DI function/Alarm Output Wiring (Option)



WARNING

- ① Be sure to wire after turning off the POWER.
- ② When the power source has been connected to the Alarm output, turn off that power source.
- ③ When a hazardous voltage is supplied to alarm terminal:
 - a) Never touch terminals preventing from electric shock.
 - b) Attach covers to terminals.
 - c) Wires should be double shielded.
 - d) Adept round pressure terminal connectors with insulation cover for wire, preventing from loses connection.



CAUTION

Precautions for Wiring the DI function

- ① DI function input has the built-in drive power source. Do not apply a voltage to a DI function input terminal from the outside.
- ② A DI function input contact capacity should be a withstanding voltage of 50Vdc, 16mA or more, ON resistance of 20 Ω max.(wiring resistance included).
- ③ Do not use unused terminals as relay terminals.

Precautions for Wiring the Alarm Output

- ① An alarm output contact capacity is as follows.

250Vac	3A at maximum (Resistive load)
30Vdc	3A at maximum (Resistive load)
125Vdc	0.5A at maximum (Resistive load)

 0.1A at maximum L/R= 7ms at maximum (Inductive load)
- ② Attach an anti-surge protective circuit (surge absorbers, etc.) to an output terminal, when required.
- ③ Attach a round press-fitting terminal with insulated sleeve (for M3.5) to the end of an electric wire.
- ④ Keep alarm output wiring away from input wiring.
- ⑤ Do not use unused terminals as relay terminals.

4.3.1 DI function/Alarm Output Wiring Example

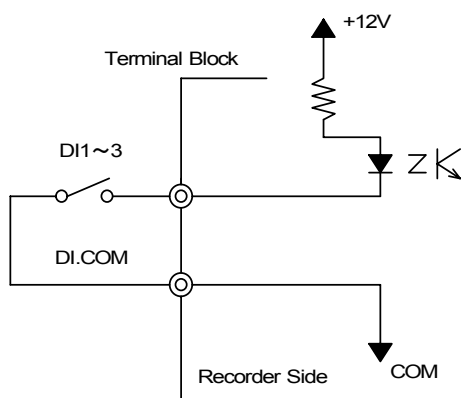


Fig. 4.6 DI function Wiring Example

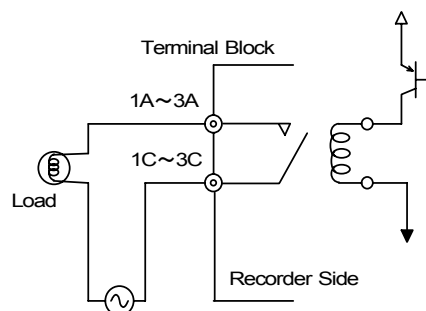


Fig. 4.7 Alarm Output Wiring Example



CAUTION

The DI function (Option : RE1) consists of a combination of 3 Digital inputs. The alarm output consists of 3-Relay output (Normally open).

4.3.2 Alarm Output Wiring Procedure

Wire the Alarm output (option : LH3) referring to Fig.4.8.

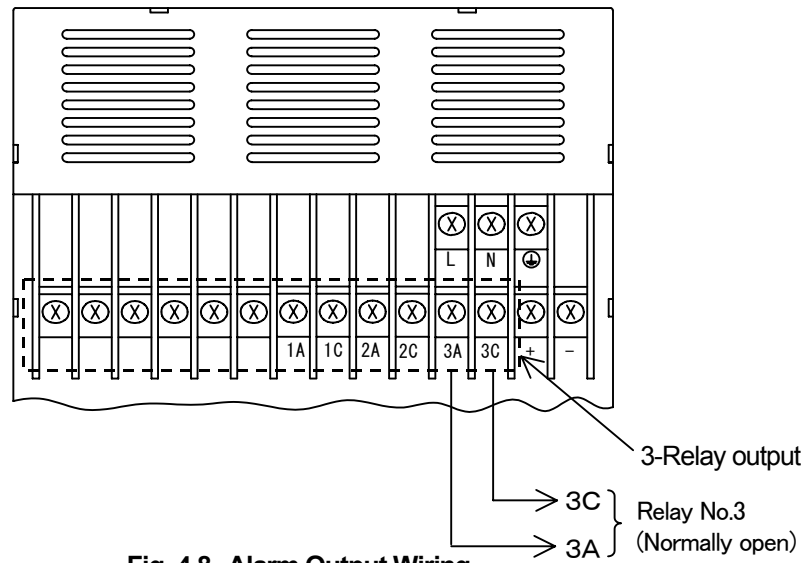


Fig. 4.8 Alarm Output Wiring

4.3.3 DI function Wiring Procedure

Wire the DI function (option : RE1) referring to Fig.4.9.

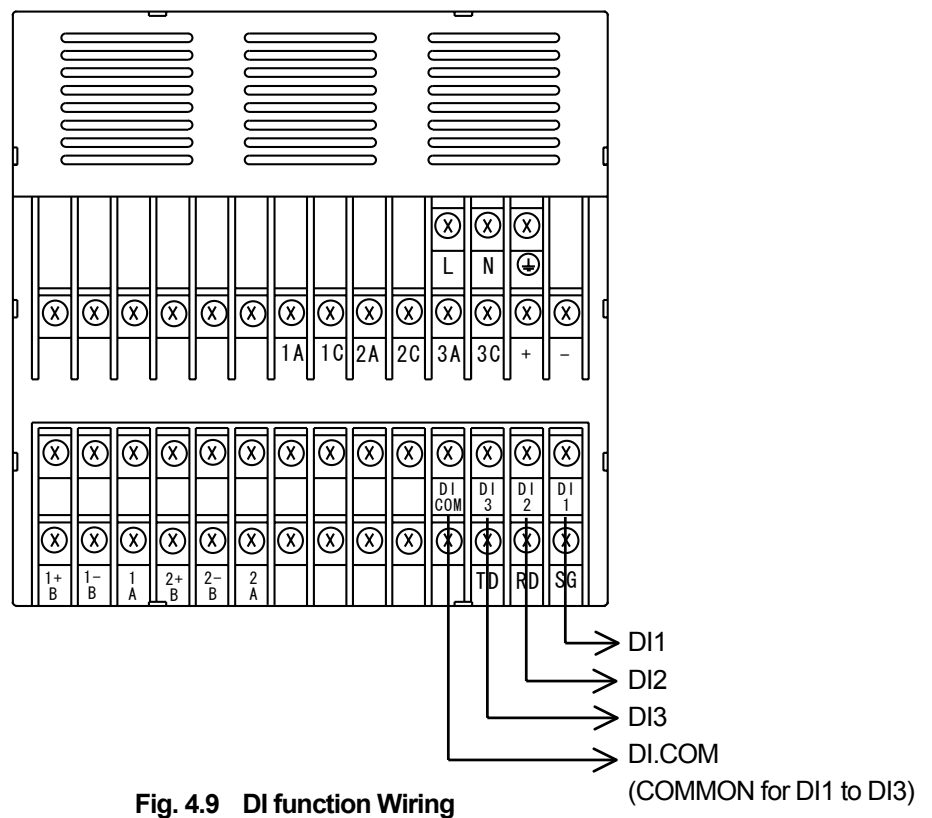


Fig. 4.9 DI function Wiring

4.4 Communication Wiring



CAUTION

Precautions for the communication wiring

- See to it that no noise is mixed in communication wiring. For communication wiring, it is recommended a shielding wire effective for noise be used.
- When it is likely to be affected by induction noise, particularly when wiring near the high-frequency power source, it is recommended a shielded twisted wire be used.
- Attach a round press-fitting terminal with insulated sleeve (for M3.5) to the end of the electric wire.
- Be sure to ground the shield of a connecting wire.

4.4.1 RS-232C Wiring

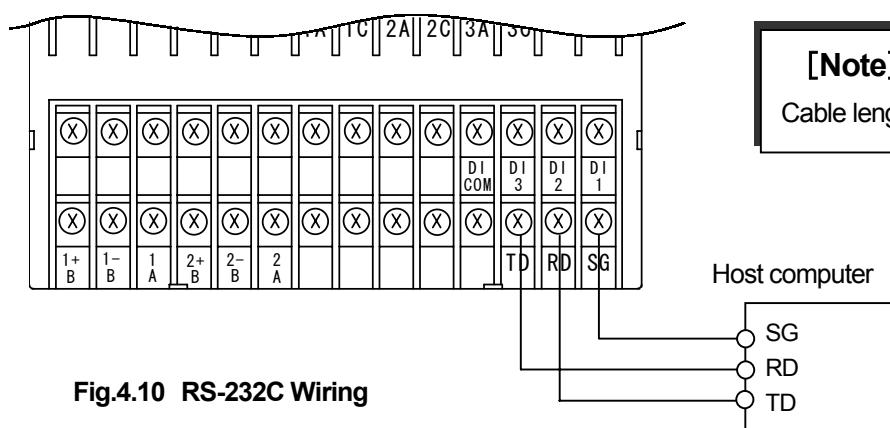


Fig.4.10 RS-232C Wiring

[Note]

Cable length is a maximum of 15m.

4.4.2 RS-485 Wiring

Wire RS-485 referring to Fig.4.11.

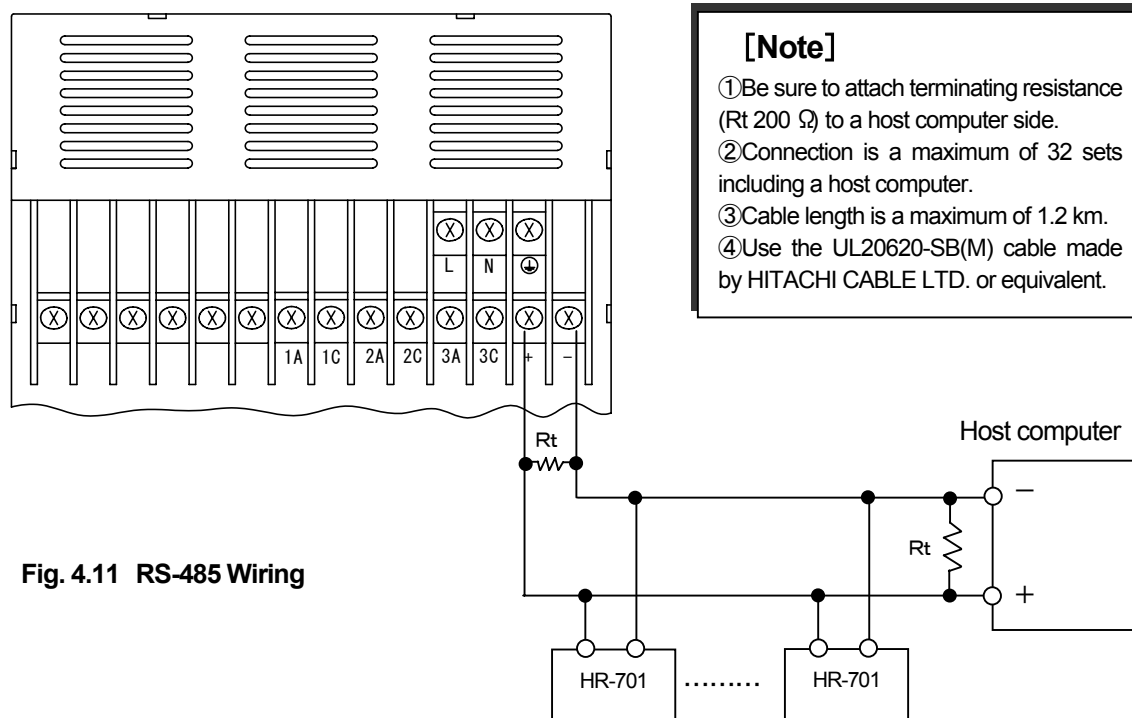


Fig. 4.11 RS-485 Wiring

[Note]

- ① Be sure to attach terminating resistance (R_t 200 Ω) to a host computer side.
- ② Connection is a maximum of 32 sets including a host computer.
- ③ Cable length is a maximum of 1.2 km.
- ④ Use the UL20620-SB(M) cable made by HITACHI CABLE LTD. or equivalent.

5. PREPARATIONS FOR OPERATION

5.1 Setting the Chart Paper



CAUTION

It is recommended our original chart paper be used to ensure proper recording. If the chart holder is taken out with recording operation being activated, the ink ribbon may be damaged. To replace the chart paper, be sure to press the “REC” key to stop recording. Be sure to move up the cartridge pen. Otherwise, it will be damaged.

(1) Pressing the “REC” key for 3 seconds or more

Stop recording operation. With the power turned on, press the REC key for 3 seconds or more.

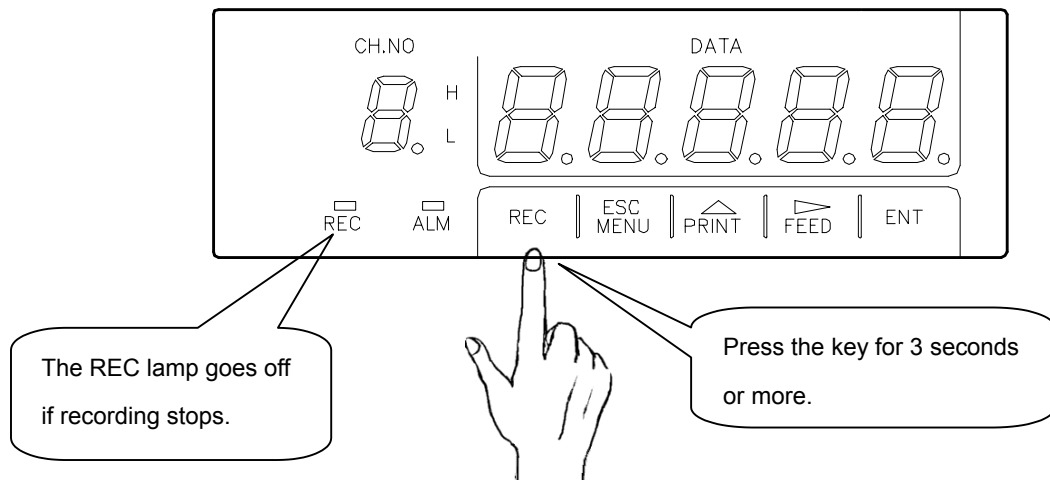


Fig. 5.1 Pressing the “REC” key

If recording stops, the pen and printer will move automatically, discontinuing paper feed. The No. 1 pen(red) records the left side(approx. 15 %) and No. 2 pen(green) records the right side(approx. 85 %), respectively.

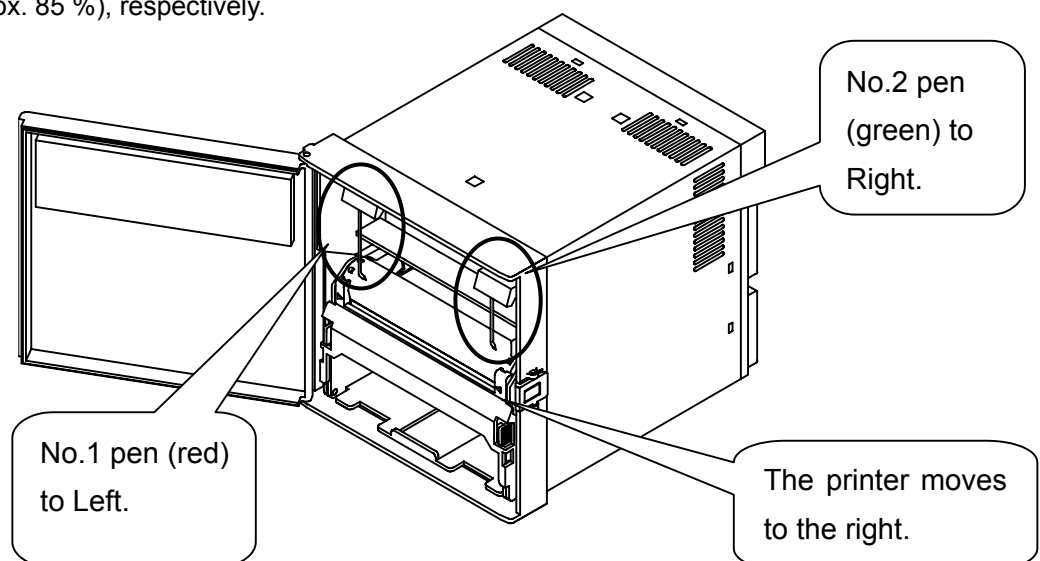


Fig. 5.2 Automatically moves the 2 Pens and Printer

(2) Opening the Door



CAUTION

Maximum angle of the door is 135 degrees when the door is fully open. Do not open the door further, or the hinge will be broken.

Push the door hook to unlock the door. Pull the door to open it.

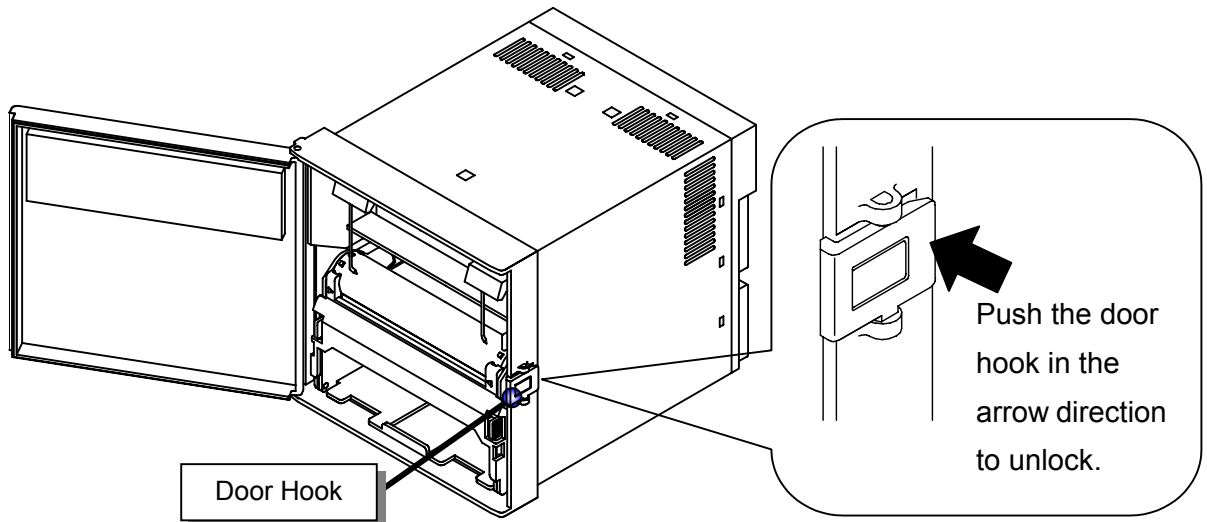


Fig. 5.3 Opening the Door

(3) Pushing up the Pen

Push up the pen-up lever to move a pen tip away from the chart paper. (Move up the pen)

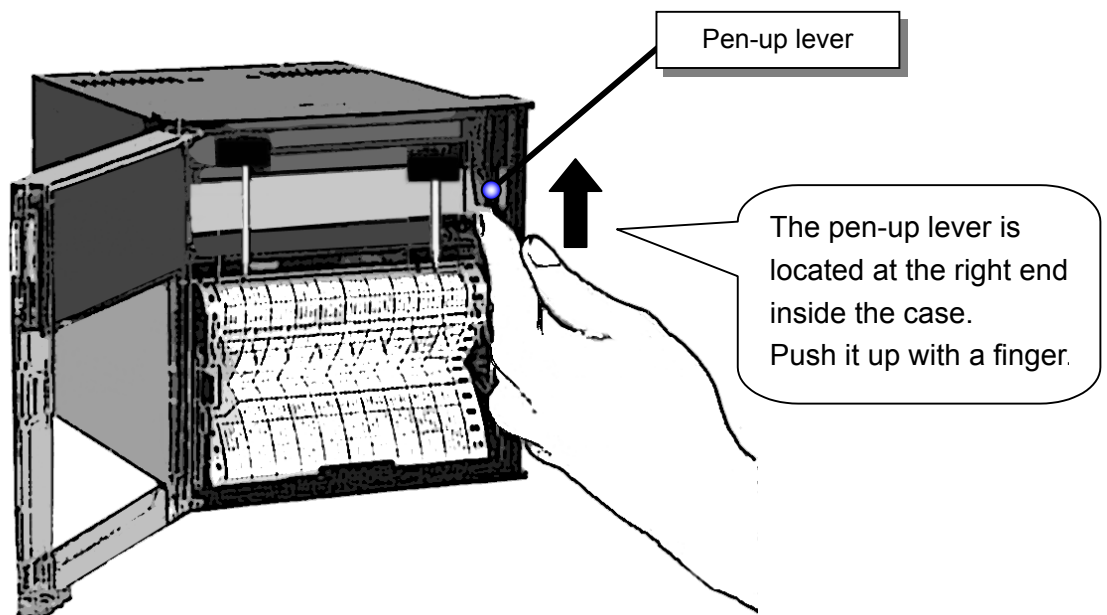


Fig. 5.4 Moving up the Pen

(4) Pulling out the Chart Holder

Put your fingers onto the levers at both sides of the chart holder and pull it out.

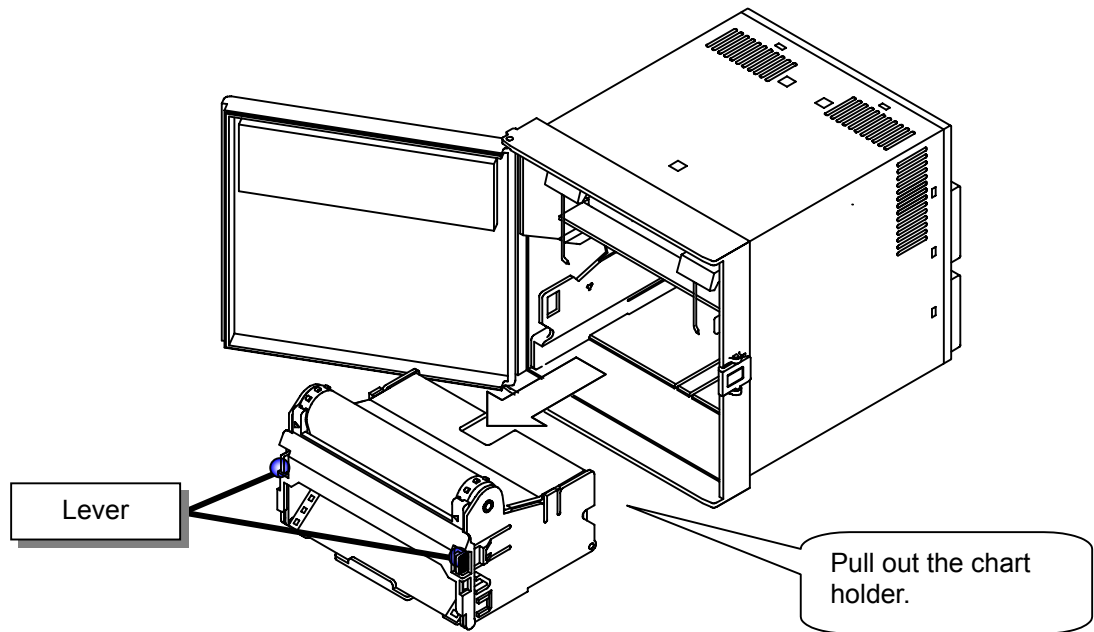


Fig. 5.5 Pulling out the Chart Holder

(5) Opening the Chart Cover and Chart Guide

Open the chart guide and the chart cover outward.

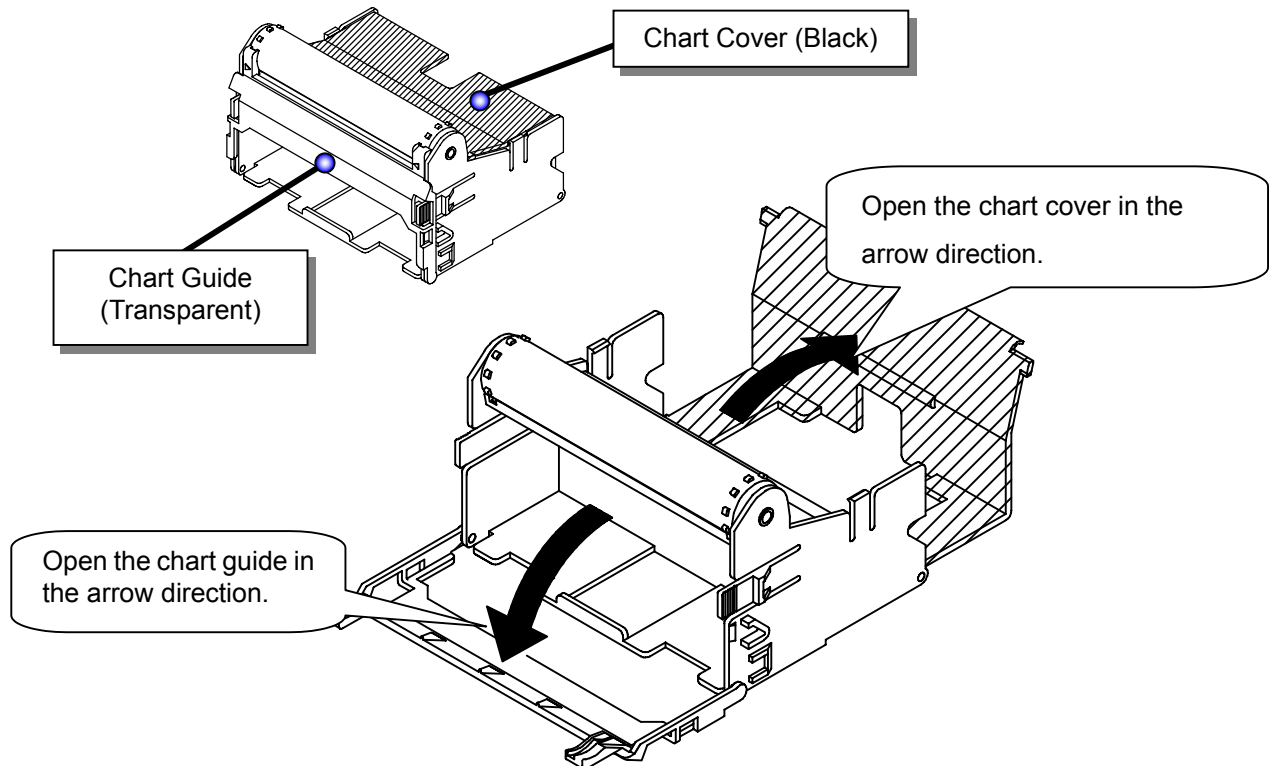


Fig. 5.6 Opening the Chart Cover and Chart Guide

(6) Loosening the chart paper

The chart paper may not be proper fed, if it is stuck at perforations. Be sure to loosen the paper.



Fig. 5.7 Loosening the Chart Paper

(7) Setting the Chart Paper into the Storage Chamber

Unfold the 2 sections of chart paper. Holding the printing surface upward, set it in the storage chamber.

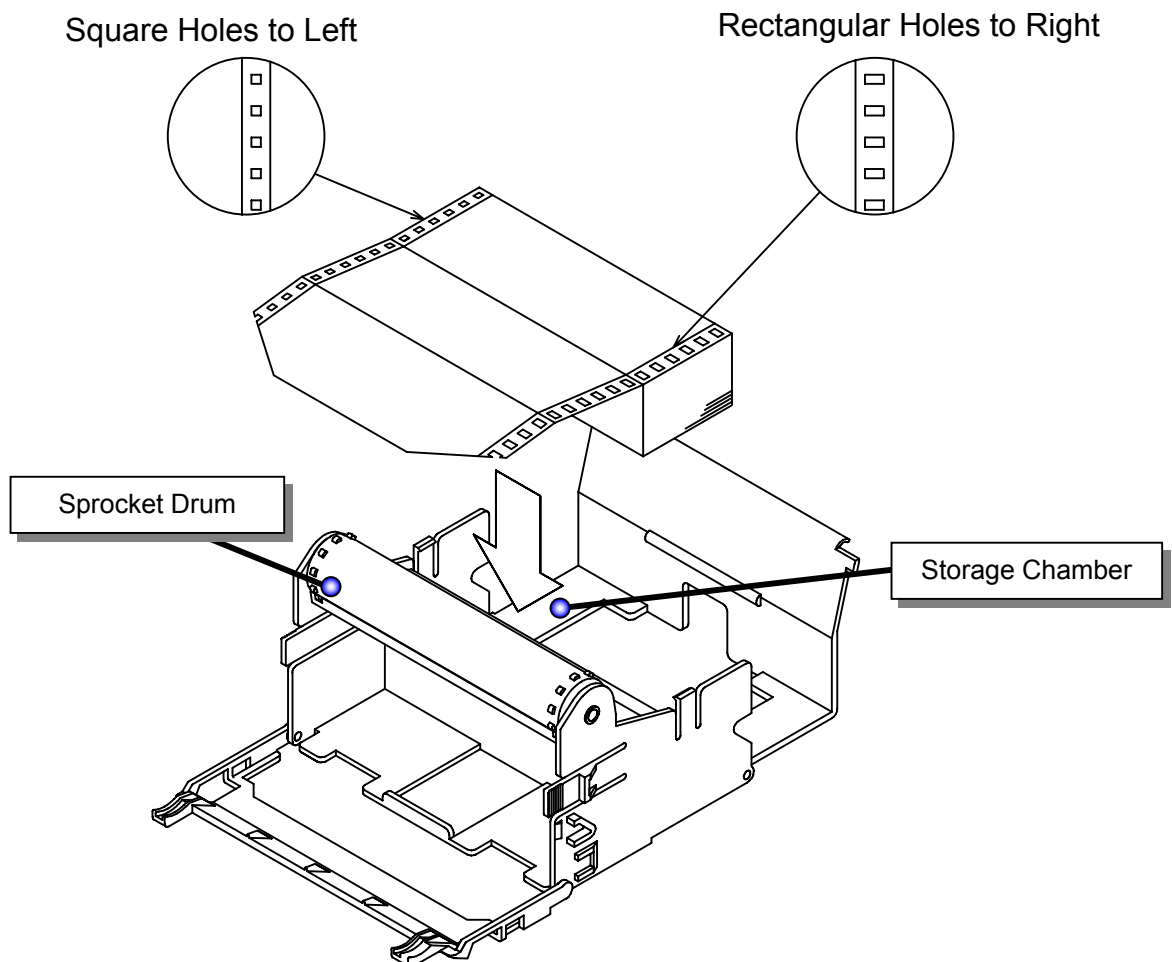


Fig. 5.8 Setting the Chart Paper

(8) Aligning the Chart Paper with the Sprocket Drum

Align the holes in the chart paper with the sprocket drum teeth. Set the chart paper along with the sprocket drum. Put the first ply of the chart paper into the chart receiver.

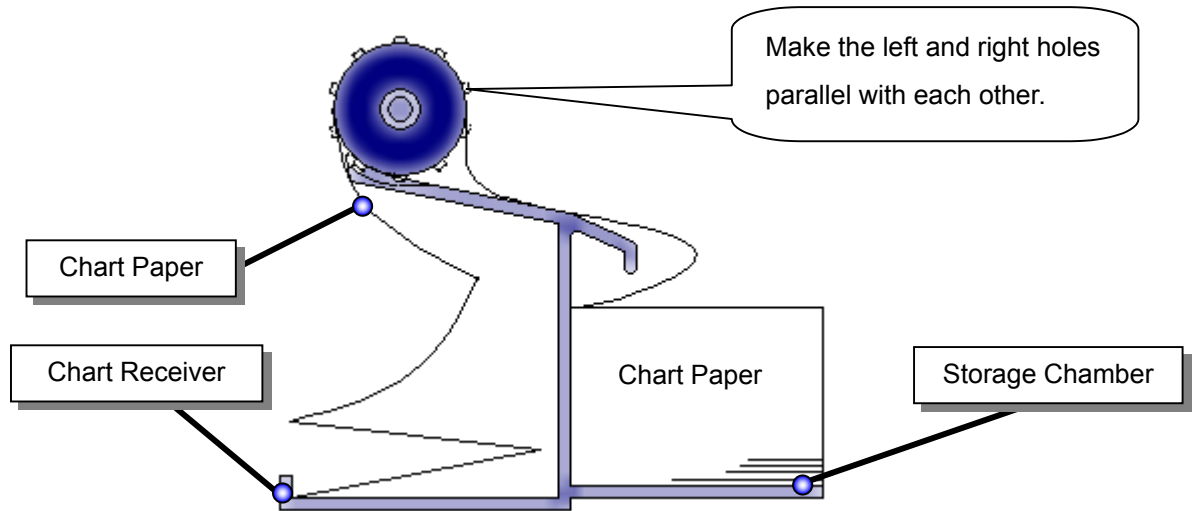


Fig. 5.9 Aligning the Chart Paper with Sprocket Drum (Chart Holder Sectional View)

(9) Closing the Chart Cover and the Chart Guide

Close the chart cover and the chart guide in the arrow directions.

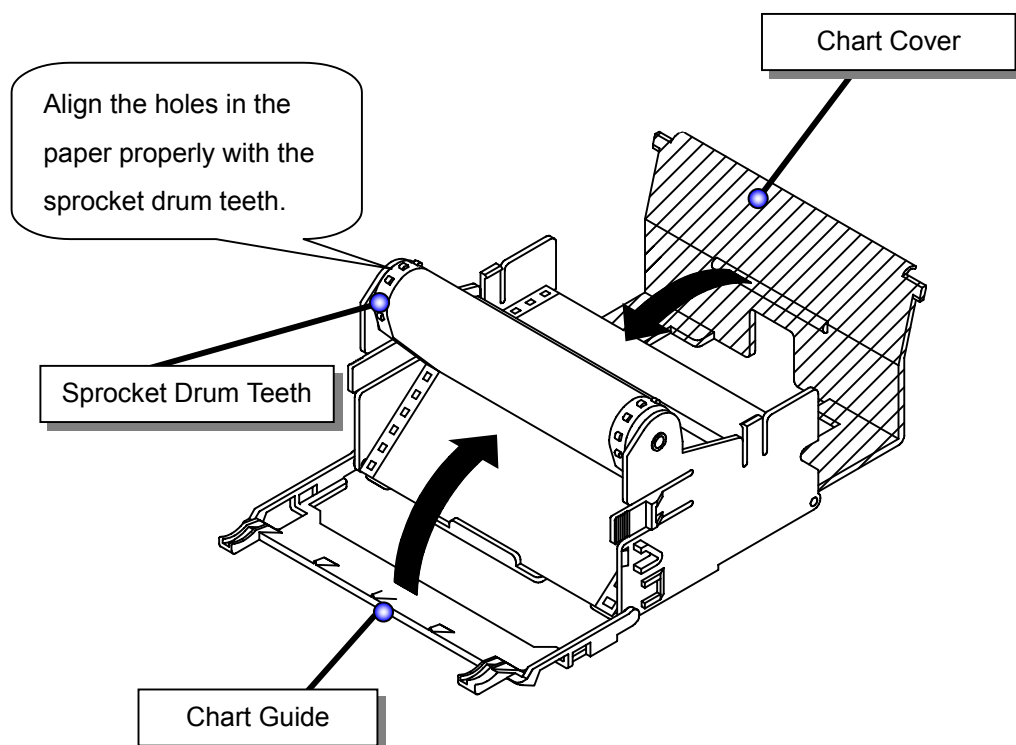


Fig. 5.10 Closing the Chart Cover and Chart Guide

(10)Turning the Sprocket Drum Gear

Check paper feed with your hand. Turn the sprocket drum gear to feed out the chart paper.
(It is recommended 4 sections of chart paper be fed out.)

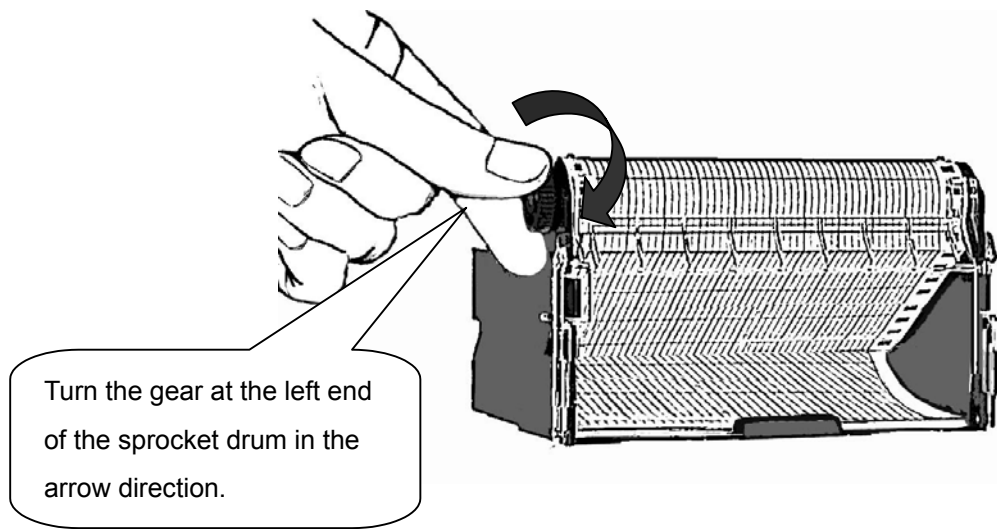


Fig. 5.11 Checking Paper Feed

(11)Putting Back the Chart Holder

Insert in the chart holder horizontally into the case until it is locked.

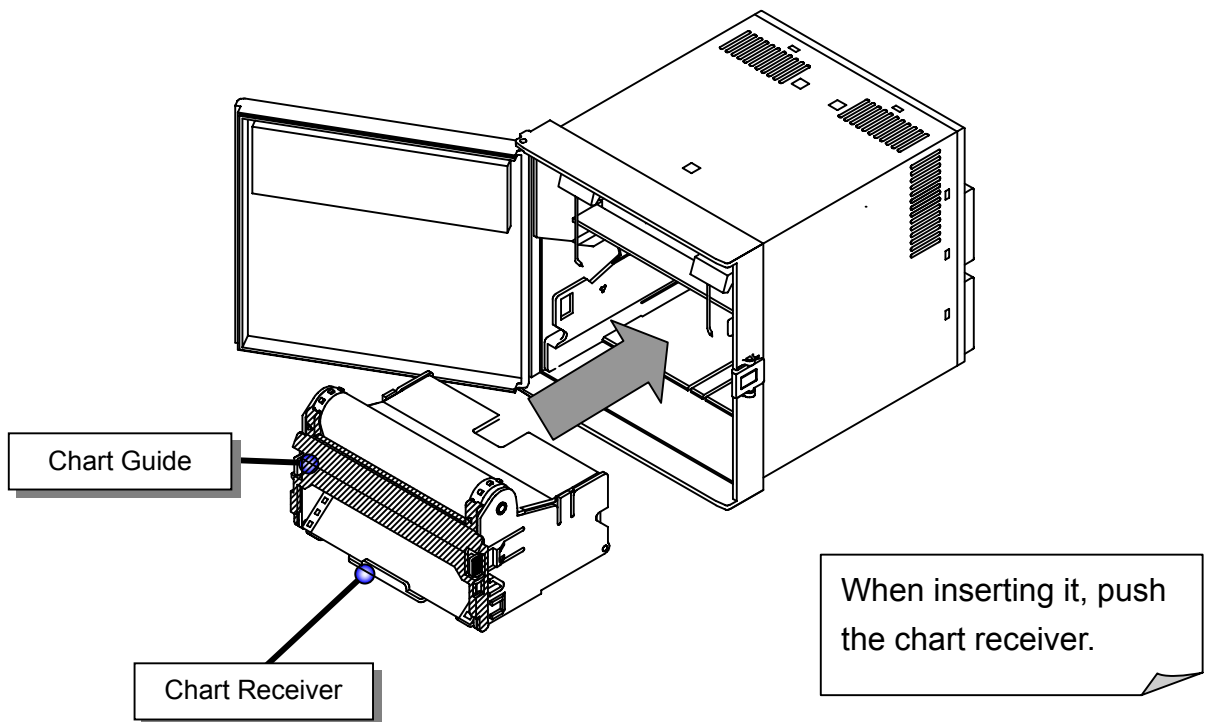


Fig. 5.12 Putting Back the Chart Holder

(12)Moving down the Pen to Close the Door

Move down the pen with the pen-up lever. Close the door and check a door lock.

The pen-up lever is located at the right end inside the case. Push it down with a finger.

(13)Pressing the “FEED” key to Check Paper Feed

Press the “FEED” key on the display keyboard to feed the chart paper.

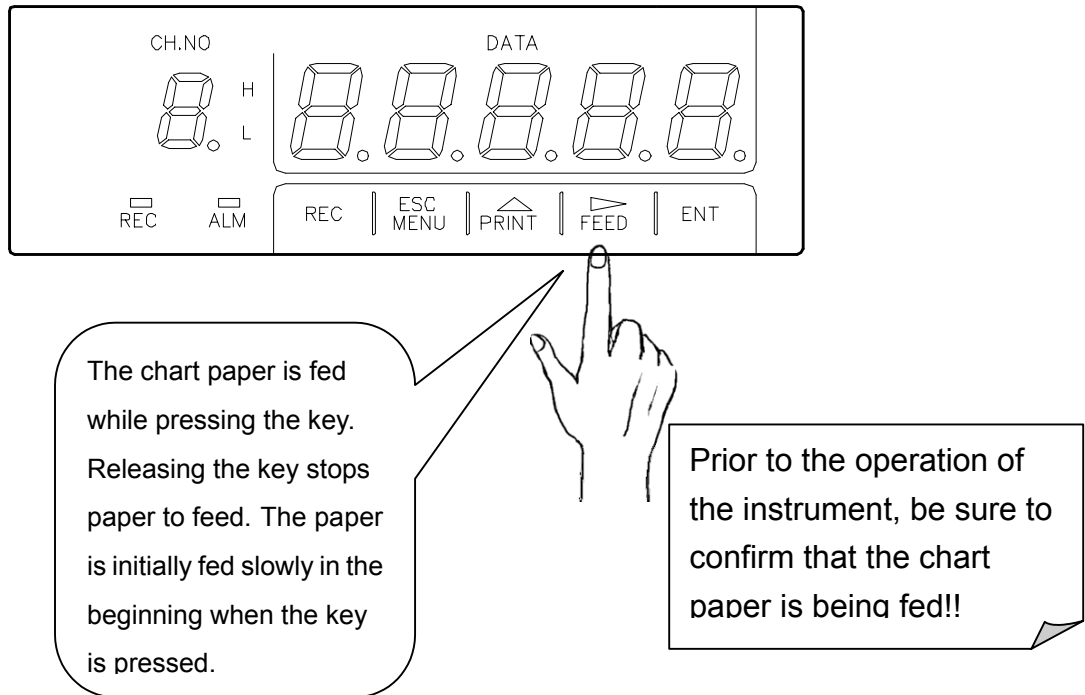


Fig. 5.13 Pressing the “FEED” key

(14)Pressing the “REC” key to Restart Operation

5.2 Setting the Cartridge Pen



CAUTION

To replace the cartridge pen, be sure to press the “REC” key to stop recording.

(1) Pressing the “REC” key for 3 seconds or more

Stops recording. With the power turned on, press the “REC” key for 3 seconds or more.

Once recording stops, the REC lamp goes off. (See Fig. 5.1 on Page 23)

The pen and printer automatically move, discontinuing paper feed. The No. 1 pen (red) records the left side (approx. 15 %) and No. 2 pen (green) records the right side (approx. 85 %), respectively. (See Fig. 5.2 on Page 23)

(2) Opening the Door

Push the door hook to unlock the door. Pull the door to open it. (See Fig. 5.3 on Page 24)



CAUTION

Maximum angle of the door is 135 degrees when the door is fully open. Do not open the door further, or the hinge will be broken.

(3) Detaching the Cartridge Pen

Pull out the cartridge pen.

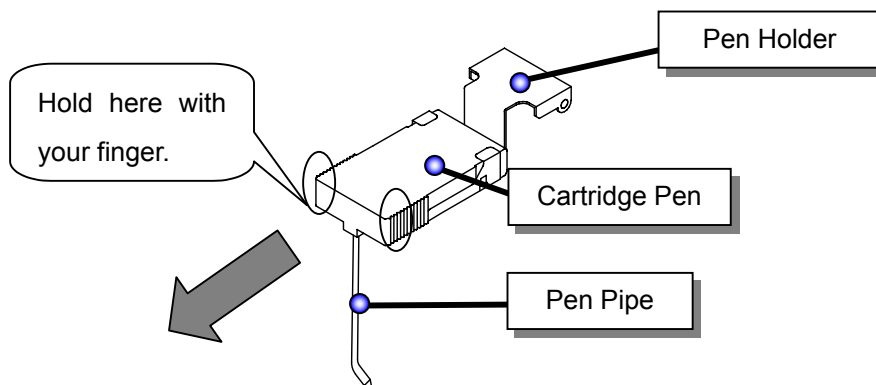


Fig. 5.14 Detaching the Cartridge Pen



Note

When pulling out the cartridge pen, do not hold the pen pipe. It could be bent, resulting in improper recording.

Removing the Pen Cap

Remove the pen cap from the new cartridge pen.


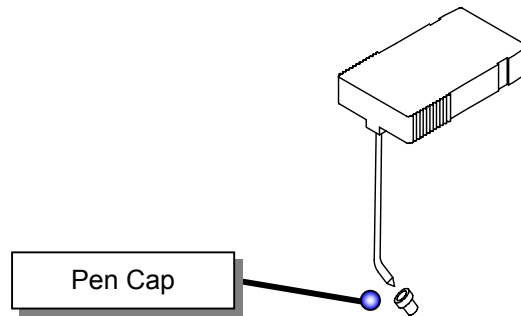


Fig. 5.15 Removing the Pen Cap

(5) Reattaching the Cartridge Pen

Reattach the cartridge pen to the pen holder. Push it in firmly until it clicks.

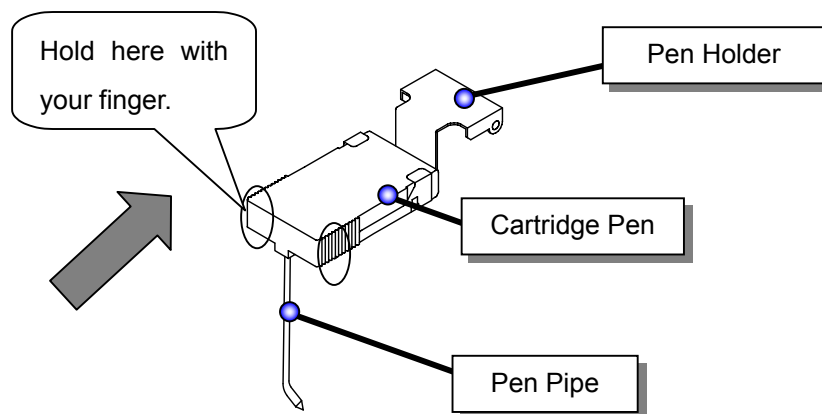

Reattach the No.1 pen (red) above and No.2 pen (green) below, respectively.

Fig. 5.16 Reattaching the Cartridge Pen

(6) Pressing the “REC” Key to Restart Operation

5.3 Setting the Ribbon Cassette



CAUTION

If the chart holder is taken out with recording operation being activated, the ink ribbon may be damaged. To replace the ribbon cassette, be sure to press the “REC” key to stop recording. Be sure to move up the cartridge pen. Otherwise, it will be damaged.

(1) Pressing the “REC” key for 3 seconds or more

Stops recording. With the power turned on, press the “REC” key for 3 seconds or more.

Once recording stops, the REC lamp goes off. (See Fig. 5.1 on Page 23)

The pen and printer automatically move, discontinuing paper feed. The No. 1 pen (red) records the left side (approx. 15 %) and No. 2 pen (green) records the right side (approx. 85 %), respectively. (See Fig. 5.2 on Page 23)

(2) Opening the Door

Push the door hook to unlock the door. Pull the door to open it. (See Fig.5.3 on Page 24)



CAUTION

Maximum angle of the door is 135 degrees when the door is fully open. Do not open the door further, or the hinge will be broken.

(3) Moving up the Pen

Push up the pen-up lever to move a pen tip away from the chart paper. (Move up the pen; see Fig.5.4 on Page 24)

(4) Pulling out the Chart Holder

Put your fingers onto the levers at both sides of the chart holder and pull it out. (See Fig.5.5 on Page 25) The guide shaft, printer, and the main shaft are laid out as shown in the figure below. (The main shaft is invisible if the ribbon cassette has been set.)

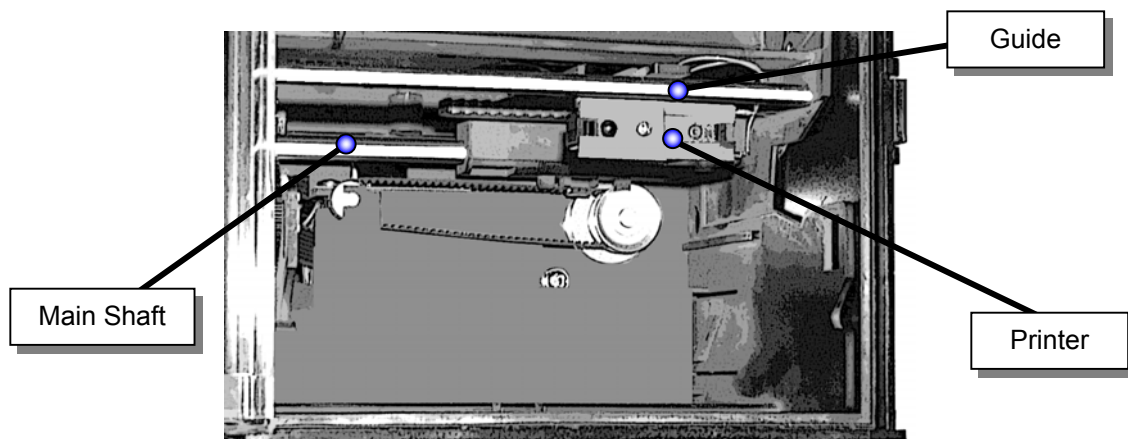


Fig. 5.17 Layout of Guide Shaft, Printer and Main Shaft

(5) Lowering the Ribbon Cassette

Detach both sides of the ribbon cassette from the guide shaft.

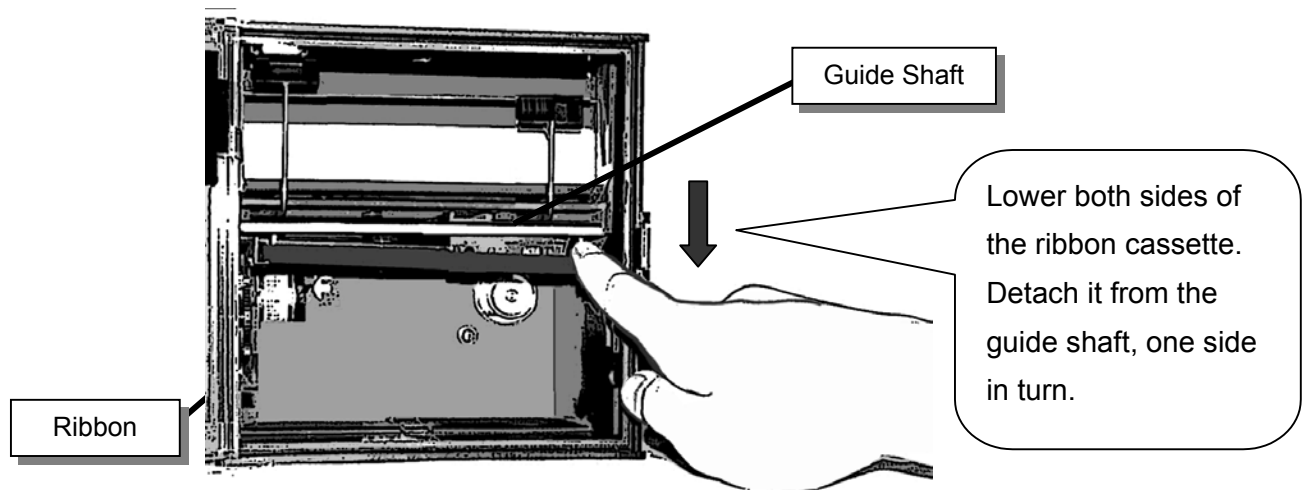


Fig. 5.18 Detaching from the Guide Shaft

(6) Pulling down the Ribbon Cassette Slantly

Detach the ribbon cassette from the main shaft.

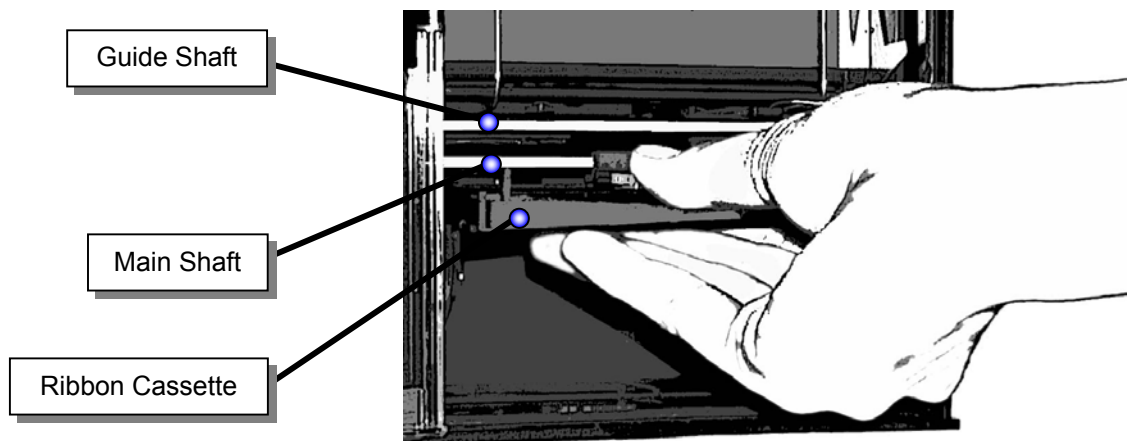


Fig. 5.19 Detaching from the Main Shaft

Viewing from the right side (section), the hook of the ribbon cassette has been engaged with the main shaft.

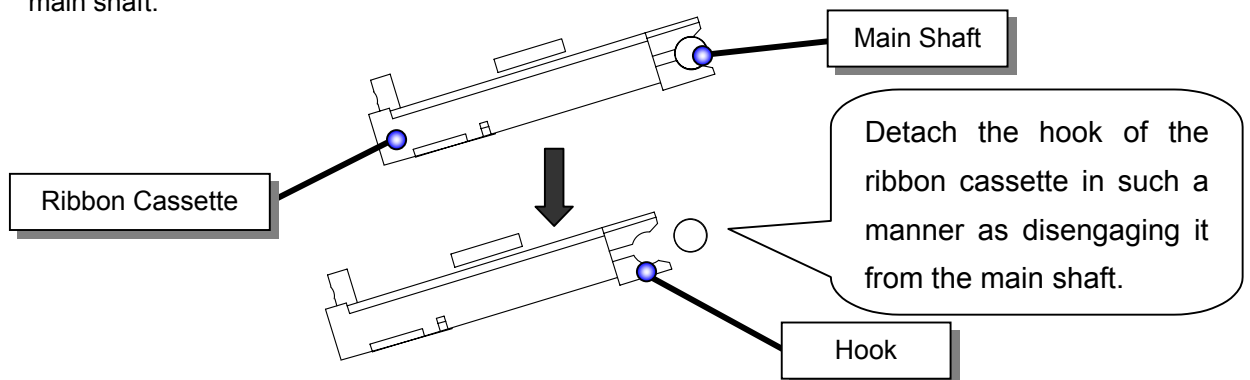


Fig. 5.20 Ribbon Cassette Sectional View

(7) Leveling the Ribbon Cassette

Prior to the pulling out the ribbon cassette, level it.

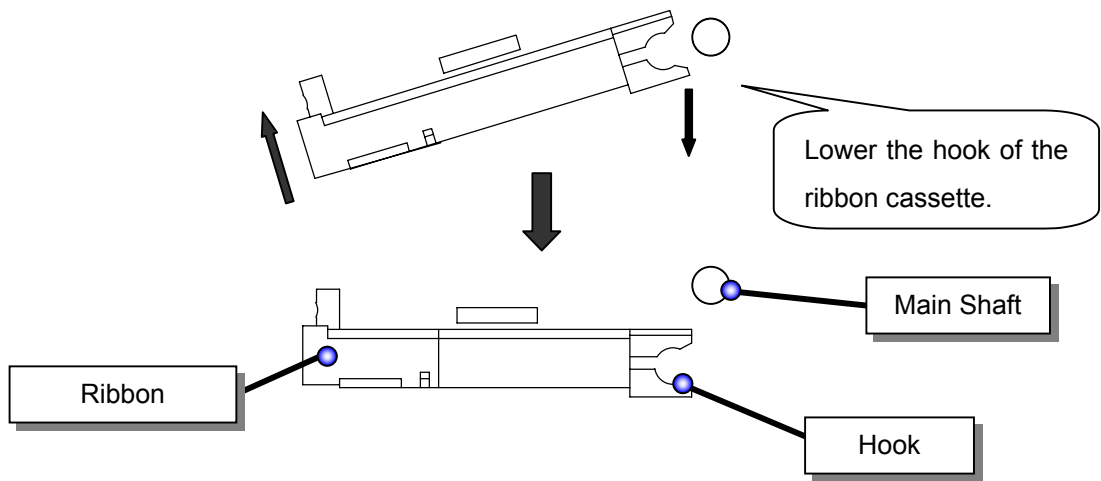


Fig. 5.21 Leveling the Ribbon Cassette (Ribbon Cassette Sectional View)

(8) Pulling out the Ribbon Cassette

Pull out the ribbon cassette horizontally. If the gear of the ribbon cassette touches the printer, move the printer to the right further.

(9) Unslacking the Ink Ribbon

Set the new ink ribbon. Turn the gear in the arrow direction to unslack the ink ribbon.

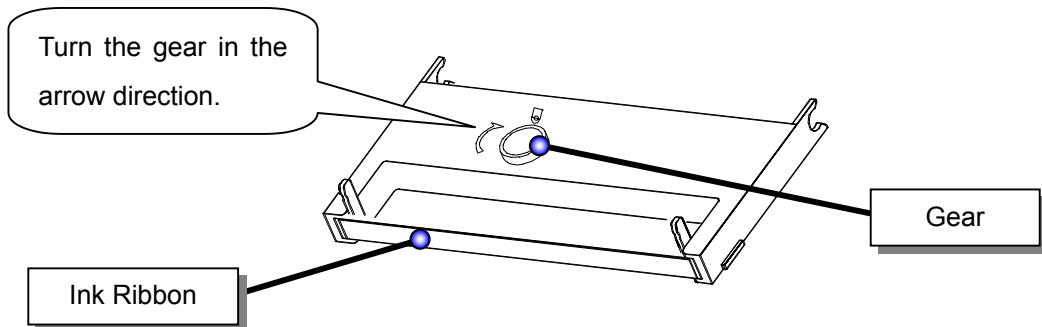


Fig. 5.22 Unslacking the Ribbon

(10) Inserting the Ribbon Cassette Horizontally

Insert the ribbon cassette horizontally.

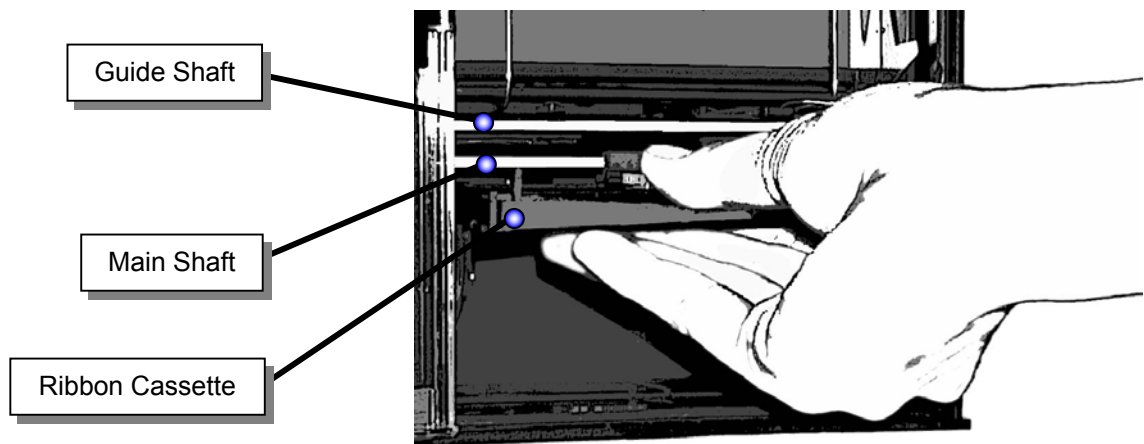


Fig. 5.23 Inserting the Ribbon Cassette

[Note]

Your hands may be stained by ink when replacing the cartridge pen or ribbon cassette.
Use soap to clean them.

(11) Reattaching the Ribbon Cassette to the Main Shaft

Holding the ribbon cassette slantly, reattach it to the main shaft in such a manner that the hook of the ribbon cassette will be engaged with the main shaft

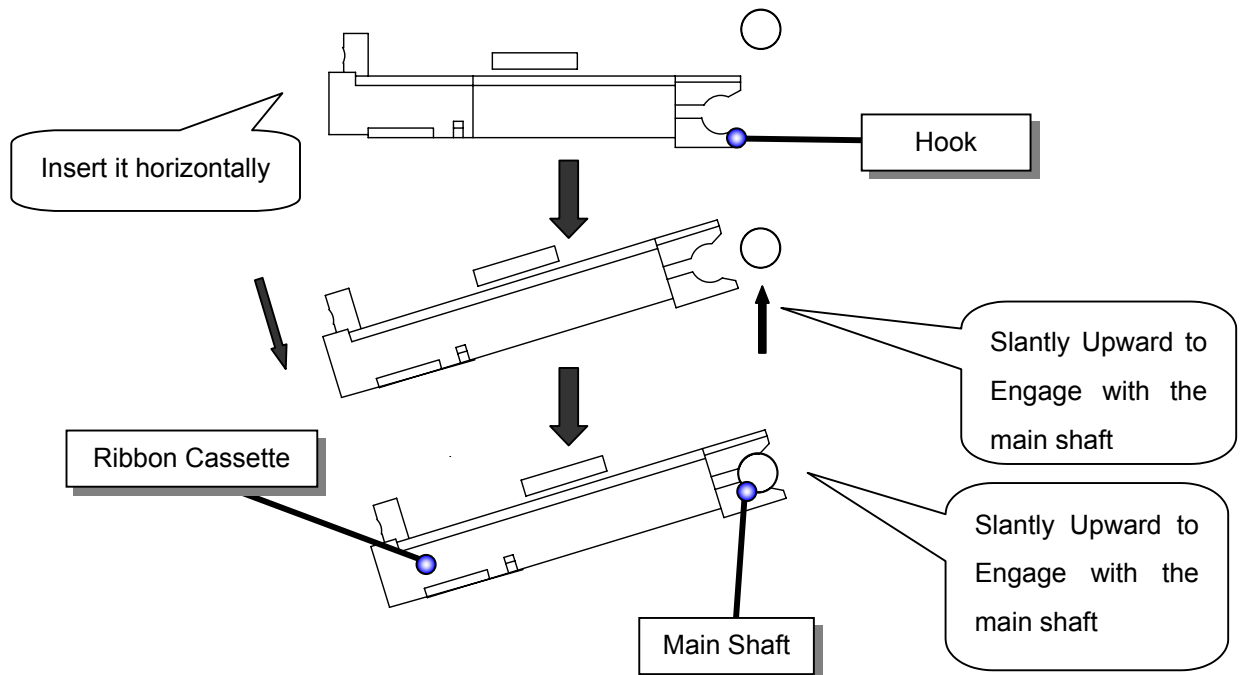


Fig. 5.24 Reattaching to the Main Shaft (Ribbon Cassette Sectional View)

(12) Pushing up the Ribbon Cassette

Attach both sides of the ribbon cassette to the guide shaft. If the gear of the ribbon cassette is not properly engaged with the printer, slide the printer slightly.

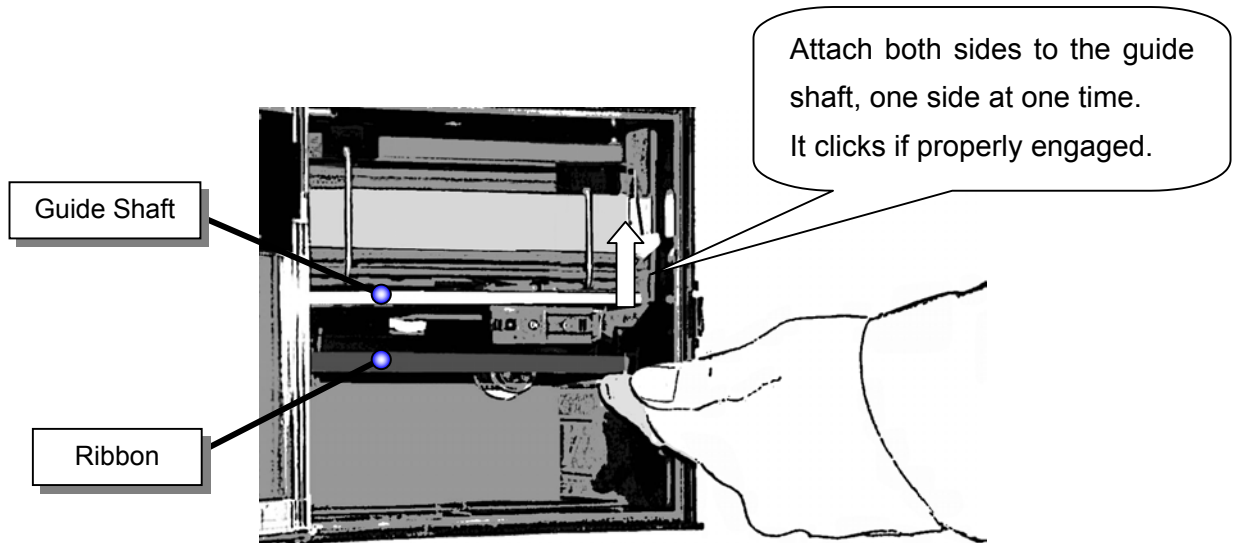


Fig. 5.25 Attaching to the Guide Shaft

(13) Putting the Chart Holder back

Put the chart holder back horizontally into the case until it is locked. (See Fig. 5.12 on Page 28)

(14) Moving the Pen down to Close the Door

Use the pen-up lever to move the pen down. Close the door and make sure that it is locked.

(15) Pressing the “REC” key to resume Operation

6. RUNNING

6.1 Running



WARNING

Prior to turning on the power, make sure that the supply voltage meets the specifications for the instrument and the instrument is properly grounded.



CAUTION

Prior to turning on the power, make sure that the chart paper is set in the chart holder. If the printer is activated with no chart paper set, the sprocket drum (cylindrical part) of the chart holder may be damaged.



WARNING

When calibrating data, connect the equipment written in the Section 9.5 of the instruction manual. Data calibration must be performed correctly.

Therefore, operators possessing knowledge of electricity and control related matters should perform the calibration after careful reading of Sections 7.2 and 9.5 of the instruction manual.

(Shinko Technos is not liable for damages incurred if calibration is performed other than prescribed in the instruction manual.)

Once the power is turned on, the display on the front of the door lights. The instrument will be ready to run (user mode) in about 5 seconds, including the initial screen. If the REC lamp is unilluminated, press the "REC" key to start recording operation.

6.1.1 Status after Initial Screen

- (1) Display screen : The "REC" lamp keeps the status of before power-off.
- (2) Printout data : All printing data and analog recording data of before power-off are cleared.
- (3) Alarm and Diagnosis : Alarm indications and outputs of before power-off are not recovered.
- (4) Data display and Channel number are indicated as follows. Refer to Fig.6.1.

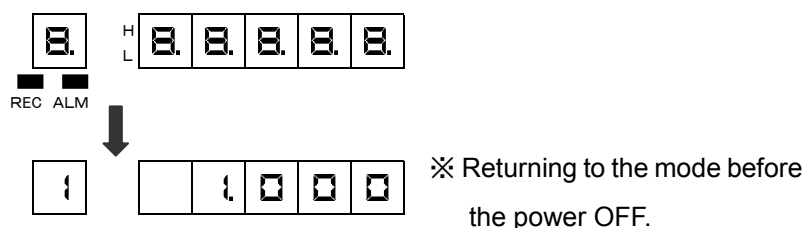


Fig. 6.1 Display Screen at Power-on

[Note]

- ① When electric power failed, the initialization is performed after power recovery. And it becomes the above initial status.
- ② The printout data is eliminated in initialization. Printout operation is not continued after power recovery when the power is turned off during printout.
- ③ When power is turned on, "0" is indicated on the display until the data is retrieved. The number of digits indicated differ, depending on the setting.

6.2 Recording

6.2.1 Recording Colors

Table 6.1 shows the recording colors for each channel in analog recording.

Table 6.1 Recording Colors

Channel No.	Color
1	Red
2	Green

6.2.2 Printing Color

Various digital prints are recorded in purple.

6.2.3 Pen Gap

Fig.6.2 shows the gap between No.1 and No.2 pens.

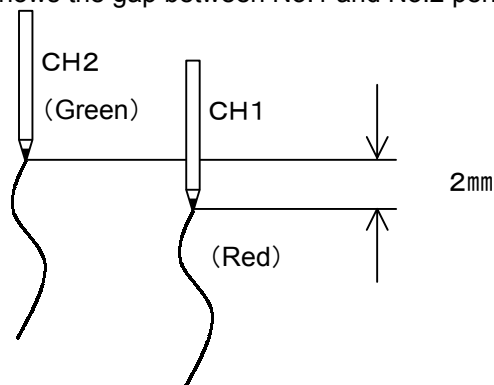


Fig. 6.2 Gap between Pens

6.2.4 Gaps between Pens and Printer

Fig. 6.3 shows the gaps between the No.1/No.2 pen and print.

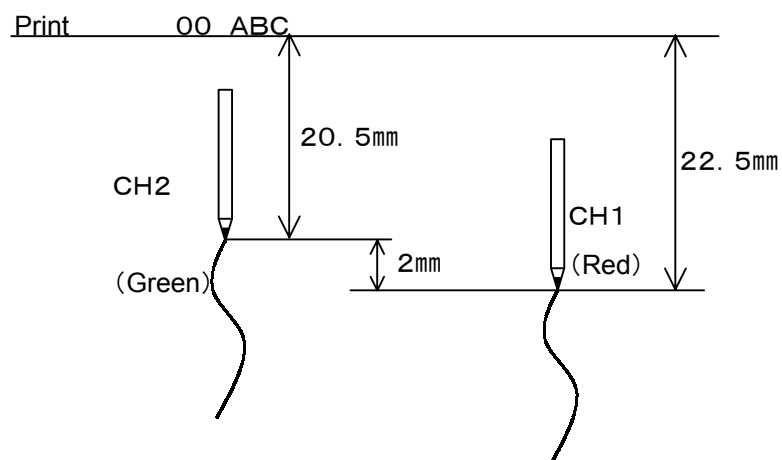


Fig. 6.3 Gaps between Pens and Printer

6.2.5 Print gap correction

It is a function to correct gap between the print head and pen recording.

When setting this function ON, it feeds record paper automatically for the whole printout contents to come to the position in front of 1 pen after the asynchronous print out completes. (Fig.6.4)

The printout contents can be immediately confirmed by this .

As for this function, only DI asynchronous print and asynchronous log print are applied.

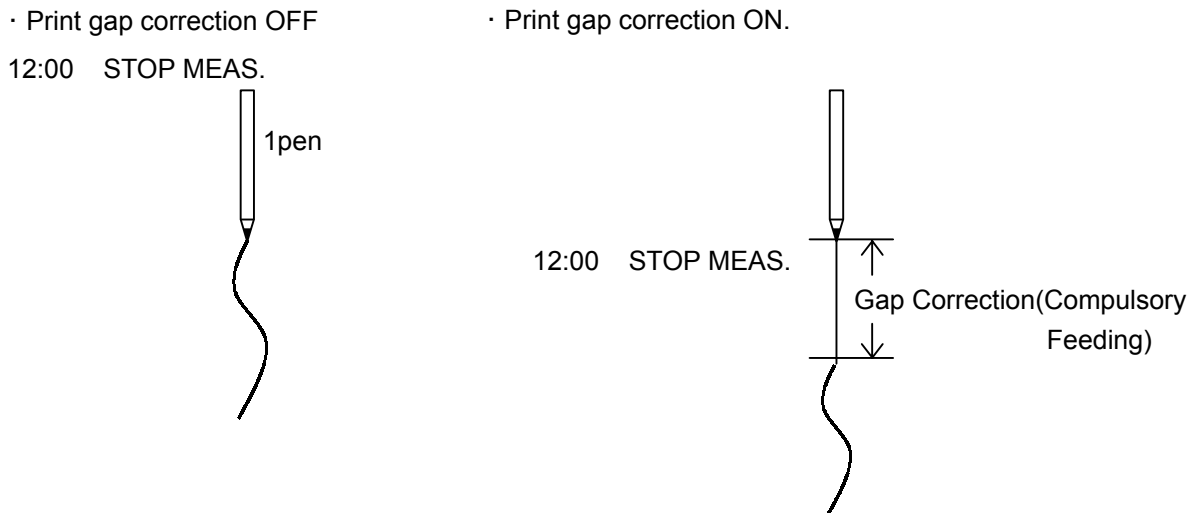


Fig. 6.4 Print gap correction

6.3 How to Record

6.3.1 Starting/Stopping Recording

Starting/Stopping Recording

To start/stop recording, press the “REC” key.

To stop, press the “REC” key for 3 seconds or more.

“REC” lamp is unlit when recording stops.

[Note]

- ① When the power is turned on, the previous status continues.
- ② When controlling a start/stop of recording through Digital Input (DI function, option : RE1), start/stop cannot be switched by “REC” key.
- ③ When it stops, the No.1 pen (red) holds a left-side position (approx. 15%) and No.2 pen (green) a right-side one (approx. 85%), respectively. Paper feeding is suspended, but a feed key movement is enabled.

6.3.2 Feed the Chart Paper

The chart paper is fed while the “FEED” key is pressed, and stops when released.

6.3.3 Print Sample

Logging on print example and Alarm on print example

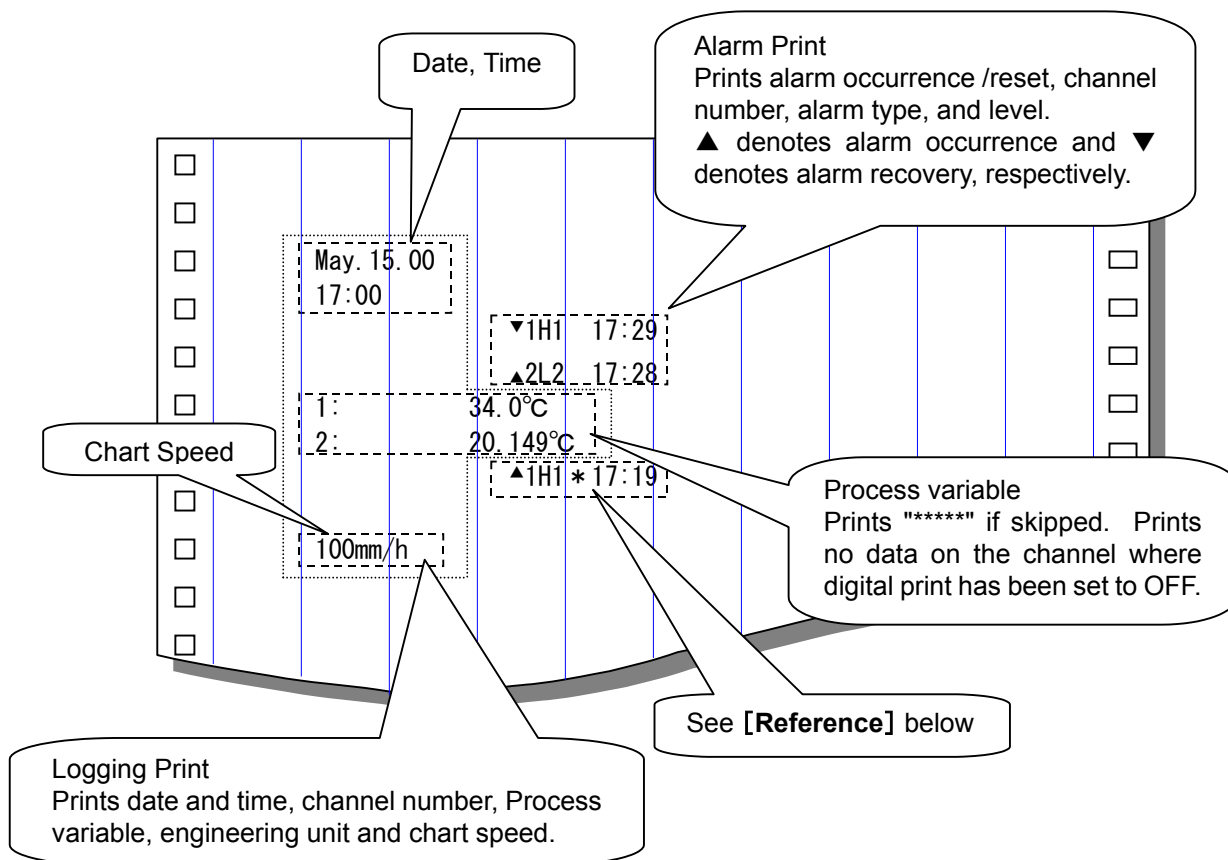


Fig. 6.5 Print Sample

[Reference]

Alarm print, Comment print and Date-and-Time print standby if the other printing is actuated. HR-701 (HR-702) stores up to six items of Alarm Occurrence/Recovery print and five items of Comment/Date-and-Time print. If printing commands are over, HR-701 (HR-702) prints a marking " * " on the end of the last printing. This mark is meaning of that over items would not be printed. For priority of respective printing, see next page ; Priority in Reference.

[Note]

Logging print will not be the wait printing state. At the start time of Logging print, if the prior Logging print is printing, the next one cannot print. Prolong the printing interval of Logging print in this case.


6.4 Digital Print

Digital prints are performed by key operation

- Manual print
- List print
- Engineering list print

[Reference]

Printing is actuated in following priority. See following Priority Order. When multiple types of printing are activated simultaneously, higher-priority printing takes effect first following the priority order.

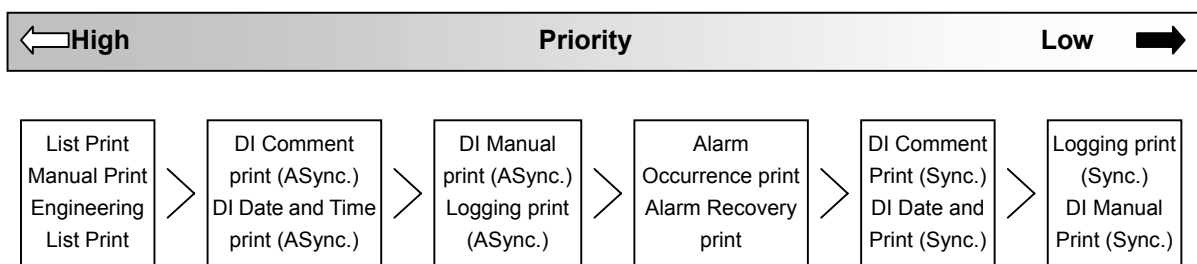

The Synchronous printout synchronizes with analog recording and prints out digitally. In the case of the asynchronous printout, it stops an analog recording and it executes a digital printout. It resumes an analog recording after the digital printout completes.

6.4.1 Manual Print

Prints the following data on the chart paper:

- Time/date (year, month, day)
- Channel number or tag setting characters
- Activated alarm type, latest Process variable, engineering unit

(1) Manual print operating procedure

- ① Press the “PRINT” key.
- ② Use the “PRINT” key to display “**AA**”, and press the “ENT” key.
- ③ Use the “PRINT” key to select “**SEAR**”. Pressing the “ENT” key executes manual print.

Once manual print starts, the display is automatically returned to the Data Display screen.

Upon termination of manual print, it is returned to it was prior to starting manual print.

[Note]

- ① Analog recording is continued while manual print is running. Chart paper is fed forcibly.
- ② If an alarm is activated while manual print is running, alarm print is performed when manual print is finished.

(2) Manual print stopping procedure

- ① Press the “PRINT” key.
- ② Use the “PRINT” key to display “**RRn**”, and press the “ENT” key.
- ③ Use the “PRINT” key to select “**Stop**”. Pressing the “ENT” key stops manual print.

However, print operation continues until the line is completed. Manual print is stopped. And the display returned to the status prior to starting manual print.

<input type="checkbox"/>		Mar. 16. 00 13:38							<input type="checkbox"/>
<input type="checkbox"/>		1: 23.3°C							<input type="checkbox"/>
<input type="checkbox"/>		2: 22.992mV							<input type="checkbox"/>
<input type="checkbox"/>									<input type="checkbox"/>

Fig. 6.6 Manual Print

[Note]

No print as to the channel where digital print has been set to OFF.

6.4.2 List Print

Prints the following setting data of the instrument on the chart paper:

- Date/time/Chart feed speed/2nd chart feed speed
- Channel number/range/tag/scaling value/engineering unit.
- Setting alarm type
- Comment/Others

(1) List print operating procedure

- ① Press the “PRINT” key.
- ② Use the “PRINT” key to display “**LI Se**”, and press the “ENT” key.
- ③ Use the “PRINT” key to select “**Start**”. Pressing the “ENT” key executes list print.

Once list print starts, the display is automatically returned to the Data Display screen.

When the list print is terminated, it is returned to the status prior to starting list print.

[Note]

- ① Analog recording is continued while list print is running. Chart paper is fed forcibly.
- ② If an alarm is activated while list print is running, alarm print is performed when list print ends.

(2) List print stopping procedure

- ① Press the "PRINT" key.
- ② Use the "PRINT" key to display "LI St", and press the "ENT" key.
- ③ Use the "PRINT" key to select "Stop". Pressing the "ENT" key stops list print.

However, print operation continues until the line is completed. List print is stopped. And the display returned to the status prior to starting list print.

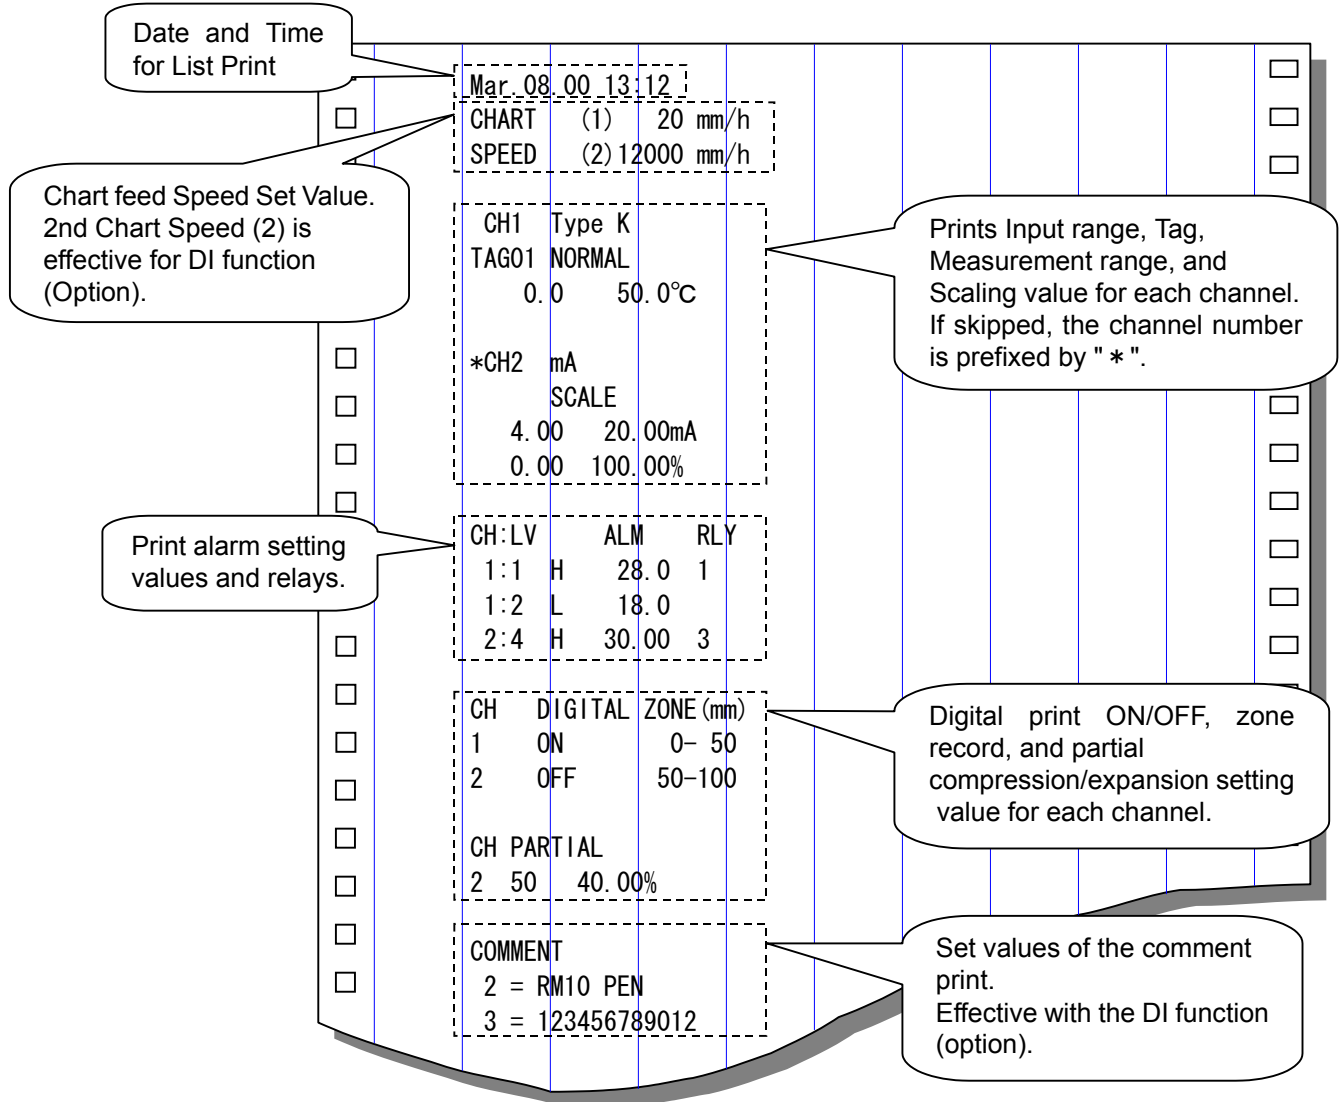


Fig. 6.7 List Print

6.4.3 Engineering List Print

Engineering list print provides the following setting data of the instrument on the chart paper.

- Analog recording
- Digital printing
- Burnout/RJC etc.

(1) Engineering list print operating procedure

- ① Press the “PRINT” key.
- ② Use the “PRINT” key to display “**ELI Se**”. Then, press the “ENT” key.
- ③ Use the “PRINT” key to select “**SeArE**”. Pressing the “ENT” key executes engineering list print.

Once engineering list print starts, the display is automatically returned to the Data Display screen.

When the engineering is terminated, it is returned to the status prior to starting engineering list print.

[Note]

- ① Analog recording is continued while engineering list print is running. Chart paper is fed forcibly.
- ② If an alarm is activated while engineering list print is running, alarm print will be performed when engineering list print ended.

(2) Engineering list print stopping procedure

- ① Press the "PRINT" key.
- ② Use the "PRINT" key to display "ELI SE". Then, press the "ENT" key.
- ③ Use the "PRINT" key to select "Stop". Pressing the "ENT" key stops engineering list print. Engineering list print is stopped. And the display returned to the status prior to starting engineering list print.

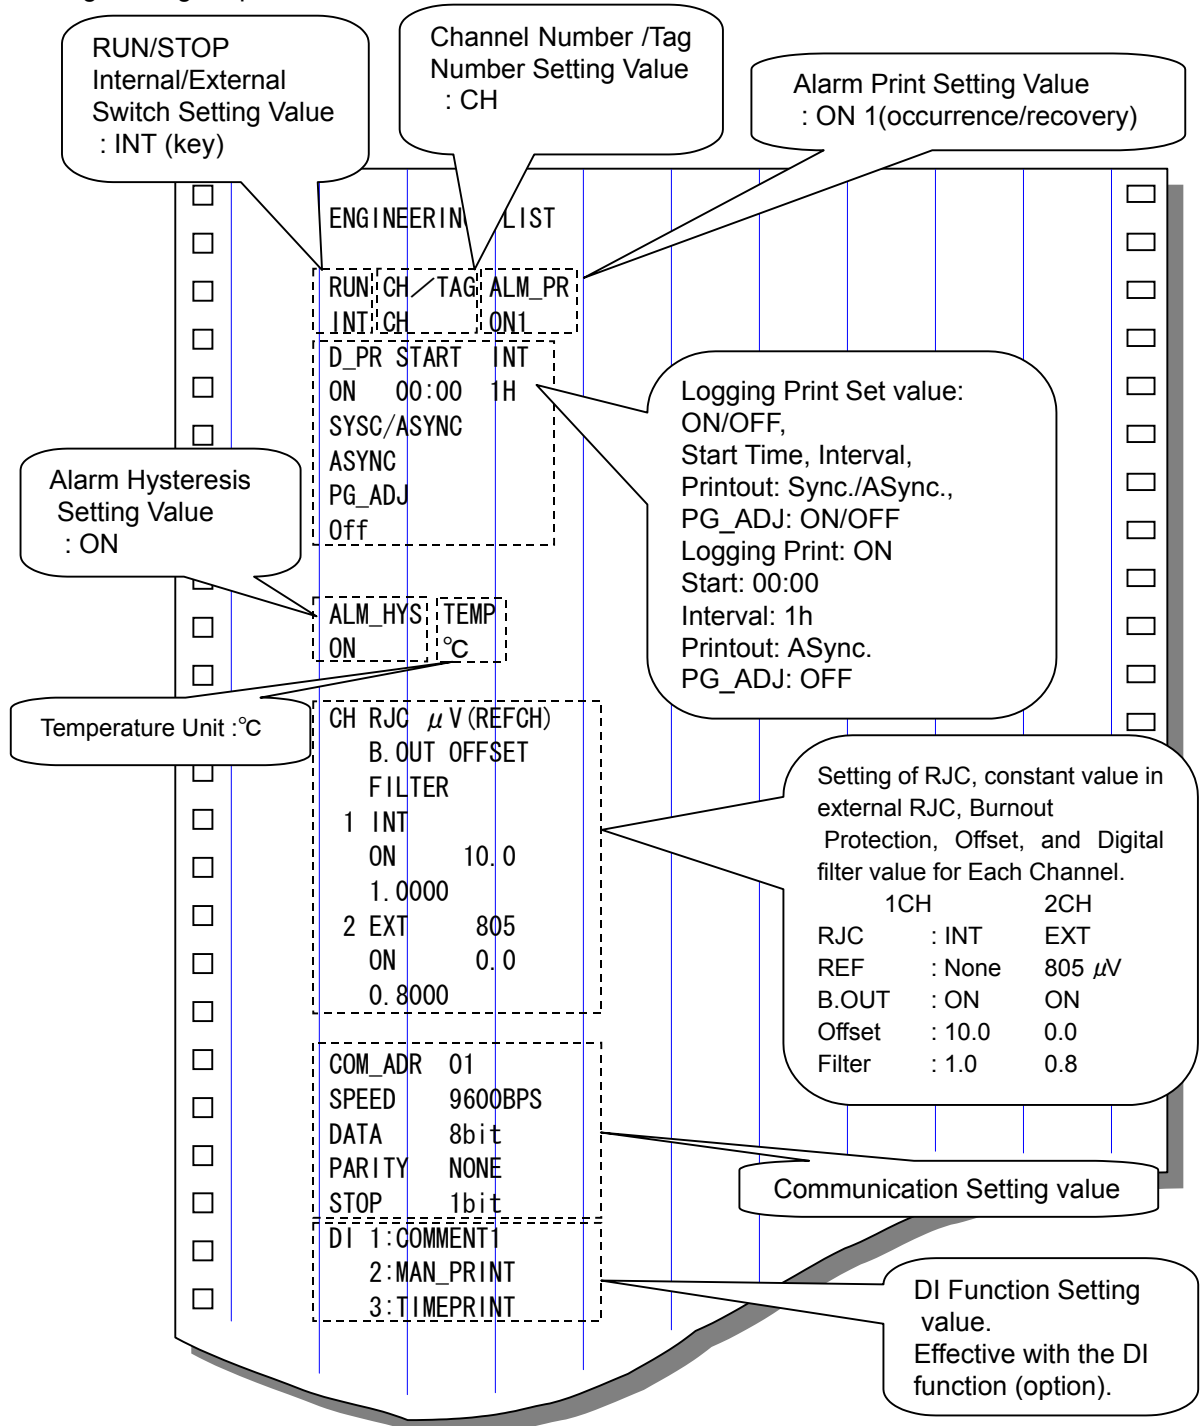


Fig. 6.8 Engineering List Print

6.5 Changing the Display

Display selection procedure

- ① Press the "MENU" key to indicate "**d: SP**", and press the "ENT" key.
- ② Use the "PRINT" key to select a required display screen from the menu below. Press the "ENT" key.
- ③ "**CH**" is indicated in the case of manual display. Use the "PRINT" key to select the channel number.


Press the "ENT" key.

" AUTO "(AUTO)	: Auto display
" MAN "(MAN)	: Manual display
" DATE "(DATE)	: Date display
" TIME "(TIME)	: Time display
" OFF "(OFF)	: Display off

6.5.1 Auto Display <**AUTO**>

Indicates the process variable of each channel sequentially at intervals of 2.4 seconds.

(Data renewal period 120ms.)

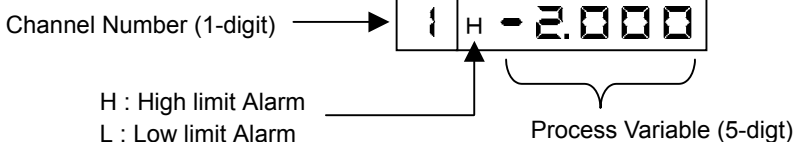

6.5.2 Manual Display <**MAN**>


Indicates the Process variable of the specific channel, it updates every measurement cycle(120ms).

The data is the same as Auto display.

Pressing the "ENT" key changes the indicated channel number (it increments).


6.5.3 Date Display <**DATE**>

Indicates the month and day. Leap year adjustment is automatic.

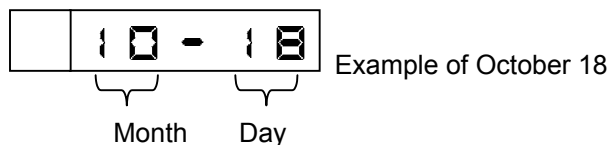

6.5.4 Time Display <**TIME**>

Indicates hour and minute.

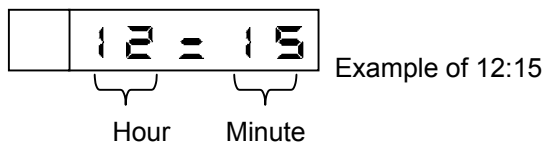

6.5.5 Display Off <**OFF**>

Turns off the process variable display. Key operation is the same as usual. To switch to other display, take steps ① through ③ mentioned above.

7. DEVICE SETTING

7.1 Setting the Setup Mode

WARNING

When calibrating data, connect the equipment written in the Section 9.5 of the instruction manual. Data calibration must be performed correctly.

Therefore, operators possessing knowledge of electricity and control related matters should perform the calibration after careful reading of Sections 7.2 and 9.5 of the instruction manual.


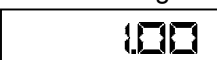
(Shinko Technos is not liable for damages incurred if calibration is performed other than prescribed in the instruction manual.)

“Key Operation for Entering the Setup Mode

Press the “MENU” key for 3 seconds or more to enter the setup mode.

At the time, indicates the version of the software approximately 1.0 seconds as below.

After, indicates the setting screen of the range.





 






 
 

To return from the setup mode to the recording mode (user mode), press the “MENU” key for 3 seconds or more again.

The following describes how to set the following items.

The following shows a display map of the setup mode. Use the Δ key to operate.

● 7.1.1 Setting the Range

Setting	Channel	Mode	
		         	Current/ Voltage Input Thermocouple Input Resistance temperature detector Input Scaling Square Root Decade Difference Sum Average Skip

● 7.1.2 Setting the Alarm

Setting	Channel	Level	ON/OFF	Type	Set Value	Relay ON/OFF	Relay No.
ALARM	CH1 CH2	L1	on	H	-2000	on	1 2 3 4
		L2	off	L		off	
		L3					
		L4					

- 7.1.3 Setting the Unit

Setting	Channel	Char. No.	Code No.	
Unit	CH1	1	Cd bF	(°)
	CH2	2	Cd 43	(C)
		3	Cd 00	End
		4		
		5		
		6		

- 7.1.4 Setting the Chart Speed

Setting	1st/2nd Chart speed	Chart speed
CHART	SPd-1	1500
	SPd-2	

- 7.1.5 Setting the Date and Time

Setting	Year	Month, Day	Time
CLOCK	Y 2000	M 01-01	t 06:00

- 7.1.6 Copying the Setting Data

Setting	Copy-from Channel	Copy-to Channel
COPY	F CH1	t CH2

- 7.1.7 Setting Other Functions (Zone recording, Partial compression/expansion, Digital print, Tag, Comment words)

Setting	Mode	
FUNC	Zone	Zone Recording
	Part	Partial Compression/Expansion
	Print	Digital Print
	Tag	Tag
	Comm	Comment Words

- Setting the password

Setting	Password	Input the password to enter the engineering mode.
ENG	P 0000	See the key operation in page 74.

Table 7.1 Initial setting value of the setup mode

Setting items	Initial setting	Remarks
★Range (all channels)	±10mVdc Scaling 0 to 100.0 (°C)	
★Alarm (all channels)	All levels are alarm OFF, relay OFF	
★Engineering unit (all channels)	[°C] (BF 43 00)	
★Chart feed speed	(1) 20mm/h (2) 20mm/h	
★Time	2000/01/01 00:00	Sets up the present time.(Japan standard time)GMT +09:00
★Zone setting (all channels)	0 to 100(%)	
★Partial compression/expansion (all channels)	OFF	
★Digital print (all channels)	ON	
★Tag print character (all channels)	"Blank up to the 5th character"	
★Comment print word (1 to 3)	"Blank up to the 12th character"	

7.1.1 Setting the Range

(1) Setting method

With a multirange system, setting the range for each channel is possible.

Use the Δ key to shift the mode ① to ⑩ shown in the Table below.

Sets the range from the following input signals. (mode ① to ③)

DC voltage	: ± 10 , 0 to 20, 0 to 50, ± 200 mVdc, ± 1 , 0 to 5, ± 10 Vdc
DC current	: 4 to 20 mA _{dc} (External shunt resistor: 250 Ω)
Thermocouple	: B, R, S, K, E, J, T, C, Au-Fe, N, PR40-20, PL II, U, L
Resistance temperature detector	: Pt100, JPt100

Sets scaling, decade, square root, interchannel sum/difference/average. (mode ④ to ⑨)

Unnecessary channels can be skipped. (mode ⑩)

Setting	Channel	Mode	Key
RANGE	CH 1 CH 2 Setting for all channels	① HOLd (Current/ Voltage Input)	Δ Key
		② TC (Thermocouple Input)	↓
		③ RTD (Resistance temperature detector Input)	↓
		④ SCALE (Scaling)	↓
		⑤ SQRt (Square Root)	↓
		⑥ DECA (Decade)	↓
		⑦ DELT (Difference)	↓
		⑧ SUM (Sum)	↓
		⑨ AVER (Average)	↓
		⑩ SKIP (Skip)	↓

[Note]

A decimal point arbitrary position can be set only in the "scaling" and "square root" modes. When you want to alter the decimal point position in Voltage/Current/Thermocouple/Resistance temperature detector input set it in the "scaling" mode. To fix the decimal point position, set it as follows.

Input	Decimal Places	Input	Decimal Places
mV	2nd place * * * . 00	Thermocouple	1st place * * * * . 0
± 1 , 0 to 5V	3rd place * * . 000	RTD	1st place * * * * . 0
± 10 V	2nd place * * * . 00	± 200 mVdc	1st place * * * * . 0
mA	2nd place * * * . 00		

(2) **mA** (Current/Voltage), **TC** (Thermocouple), **RTD** (Resistance Temperature Detector)

Measures Current, Voltage, Thermocouple and RTD.

Example) When setting Thermocouple T for Channel 1(T : -100 to 300 °C)


Display	Operation Keys	Description
	3 sec 	Press the MENU key for 3 seconds or more to enter the setup mode. Indicates “rAnGE”, then, press the “ENT” key.
		Use the key to select the channel you want to set. Press the “ENT” key.
		Use the key to select the mode. Press the “ENT” key.
		Use the key to select the type. Press the “ENT” key.
 (Zero setting)		Use the key to select a sign and numeral. Use the key to shift a digit. Press the “ENT” key.
 (Span setting)		Use the key to select a sign and numeral. Use the key to shift a digit. Press the “ENT” key.
		Press the “ENT” key. Setting is completed. To return to the user mode, press the “MENU” key for 3 seconds or more.

[Note]

- ① When an incorrect numeral is input, or .
Press the “ENT” key and re-enter a correct numeral.
- ② For the range setting (When especially, don't change a decimal point position at the thermocouple or in RTD) which doesn't have the necessity of the scaling, don't set a scaling.

[Note]

In the **Hold**, **EC**, or **red** mode, press the “ENT” key to select the range.
Use the Δ key, you can select the type out of the range.

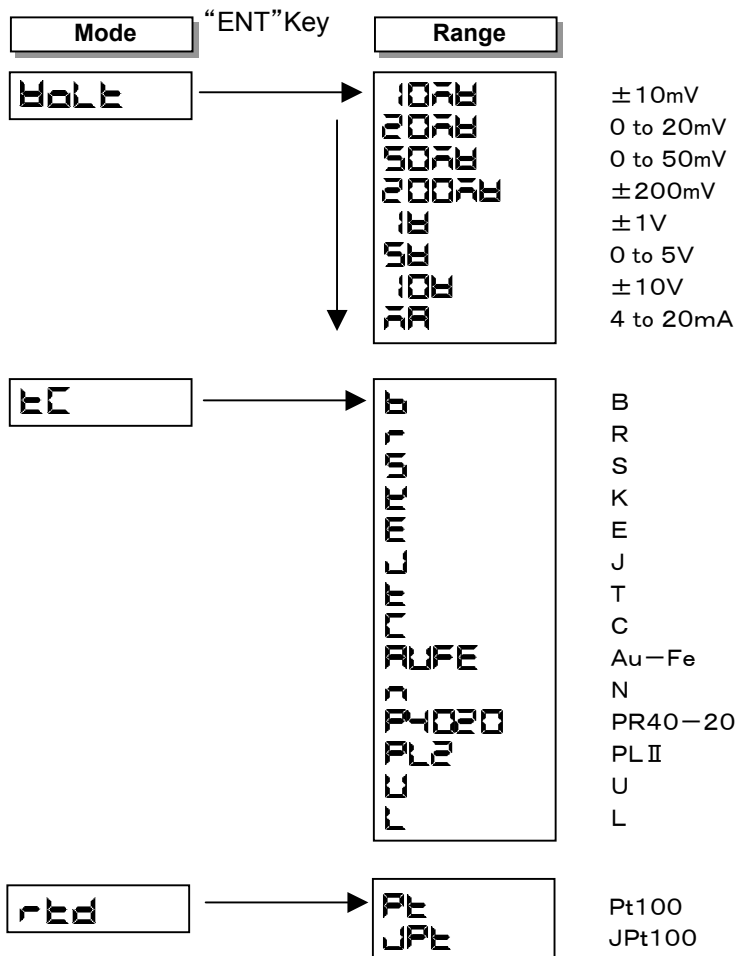

 






 

 
 


 






(3) **SCALE** (Scaling)

Changes the input of VOLT, TC and RTD into a quantity.





Setting the unit is possible.(See 7.1.3 on page 63.)

Example) When setting the voltage of 0 to 40 mV and scale of 000.00 to 100.00 for Channel 1

Display	Operation Keys	Description
	 3 sec  	Press the MENU key for 3 seconds or more to enter the setup mode. Use the Δ key to indicate "rAnGE". Press the "ENT" key.
	 	Use the Δ key to select the channel you want to set. Press the "ENT" key.
	 	Use the Δ key to select "SCALE". Press the "ENT" key.
	 	Use the Δ key to select "VolE". Press the "ENT" key.
	 	If ΔC , or Δd is selected here, temperature input scaling is possible. Use the Δ key to select a range(50 mV). Press the "ENT" key.
 (Zero input value)	  	Use the Δ key to select a numeral. Use the \triangleright key to shift a digit. Press the "ENT" key.

[Note]



In the case of TC and RTD input, set the Zero input value equal to the Zero-side scale value. But, set a decimal point position to the standard position. (* 1:next page)

 (Span input value)	  	Use the Δ key to select a numeral. Use the \triangleright key to shift a digit. Press the "ENT" key.
---	--	---

[Note]

In the case of TC and RTD input, set the Span input value equal to the Span-side scale value. But, set a decimal point position to the standard position. (* 2:next page)




 
(Zero-side scale value) (* 1)



Use the Δ key to select a numeral.




Use the \triangleright key to shift a digit.

 
(Decimal point)



Press the \triangleright key again in the lowest digit(right end) to blink a decimal point. Use the Δ key to select a decimal point position. Press the “ENT” key.

 
(Span-side scale value) (* 2)

Use the Δ key to select a numeral.

Use the \triangleright key to shift a digit. Press the “ENT” key.

 



Press the “ENT” key. Setting is completed.

To return to the user mode, press the “MENU” key for 3 seconds or more.

[Note]

When an incorrect numeral is input,   ,   or

  is displayed.












 




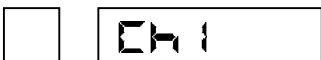














Press the “ENT” key and re-enter a correct numeral.

(4) **Sqr** (Square Root)

Calculates the square root of Volt input, and scaling that value.

Setting the unit is possible. (See 7.1.3 on page 63.)

Example) When setting the voltage of 0 to 40 mV and scale of 000.00 to 100.00 for Channel 1

Display	Operation Keys	Description
	 3 sec  	Press the “MENU” key for 3 seconds or more to enter the setup mode. Use the Δ key to indicate “r-RNGE”. Press the “ENT” key.
	 	Use the Δ key to select the channel you want to set. Press the “ENT” key.
	 	Use the Δ key to select “Sqr”. Press the “ENT” key.
	 	Use the Δ key to select a range(50 mV). Press the “ENT” key.
 (Zero input value)	  	Use the Δ key to select a numeral. Use the \triangleright key to shift a digit. Press the “ENT” key.
 (Span input value)	  	Use the Δ key to select a numeral. Use the \triangleright key to shift a digit. Press the “ENT” key.
 (Zero-side scale value)	 	Use the Δ key to select a numeral. Use the \triangleright key to shift a digit.
 (Decimal point)		Press the \triangleright key again in the lowest digit(right end) to blink a decimal point. Use the Δ key to select a decimal point position. Press the “ENT” key.
 (Span-side scale value)	  	Use the Δ key to select a numeral. Use the \triangleright key to shift a digit. Press the “ENT” key.
		Press the “ENT” key. Setting is completed. To return to the user mode, press the “MENU” key for 3 seconds or more.

[Note]

When an incorrect numeral is input,   ,   or

  is displayed.

Press the “ENT” key and re-enter a correct numeral.

About Square Root Computation

The square root computation is as follows:

- Each item is defined as follows:

SPAN_L : Span lower-limit value (Span L)

SPAN_R : Span upper-limit value (Span R)

SCAL_L : Scaling lower-limit value (Scale L)

SCAL_R : Scaling upper-limit value (Scale R)

IN : Input voltage

OUT : Output (Scaling value)

- When an input value is 1 % or more (1 to 100 %)

$$OUT = (SCAL_R - SCAL_L) \times \sqrt{\frac{IN - SPAN_L}{SPAN_R - SPAN_L}} + SCAL_L$$

- When an input value is less than 1 %

$$OUT = \frac{10 \times (SCAL_R - SCAL_L)}{SPAN_R - SPAN_L} \times (IN - SPAN_L) + SCAL_L$$

Example) When setting as in previous the page, the display is as following table.

Input voltage (mV)	0	10	20	30	40
Display (%)	0. 00	50. 00	70. 71	86. 63	100. 00

[Note]

The relation between scaling factor and displaying digit may stagger the accuracy rating.

(5) **dECAd** (Decade)

Scaling the VOLT input and displays the index number. Setting the unit is possible. (See 7.1.3 on page 63.)

Example) When setting the voltage of 0 to 5 V and decade of 1.0×10^0 to 1.0×10^5 for Channel1

Display	Operation Keys	Description
	3 sec 	Press the "MENU" key for 3 seconds or more to enter the setup mode. Use the Δ key to indicate "r-RANGE". Press the "ENT" key.
		Use the Δ key to select the channel you want to set. Press the "ENT" key.
		Use the Δ key to select "dECAd". Press the "ENT" key.
		Use the Δ key to select a range(5V). Press the "ENT" key.
 (Zero input value)		Use the Δ key to select a numeral. Use the \triangleright key to shift a digit. Press the "ENT" key.
 (Span input value)		Use the Δ key to select a numeral. Use the \triangleright key to shift a digit. Press the "ENT" key.
 (Zero-side scale value)		Use the Δ key to select a numeral. Use the \triangleright key to shift a digit. Press the "ENT" key.
 (Span-side scale value)		Use the Δ key to select a numeral. Use the \triangleright key to shift a digit. Press the "ENT" key.
		Press the "ENT" key. Setting is completed. To return to the user mode, press the "MENU" key for 3 seconds or more.

[Note]

When an incorrect numeral is input, , or is displayed.
Press the "ENT" key and re-enter a correct numeral.

About Decade Display

- Each item is defined as follows:

SPAN_L : Span low limit value (Span L)

SPAN_R : Span high limit value (Span R)

SCAL_L : Scaling low limit value (Scale L)

SCAL_R : Scaling high limit value (Scale R)

IN : Input voltage

OUT : Output (Scaling value)

} XXEYY

XX: Mantissa section (1.0 to 9.9)

YY: Exponent section (-19 to 19)

Up to 5 decades.

(Scaling upper limit)

—(Scaling lower limit) is 1.0E5 or less.

- Decade display abides by the following relational expression.

$$\text{OUT1} = \text{IN} \times \frac{\text{LGSCAL}_R - \text{LGSCAL}_L}{\text{SPAN}_R - \text{SPAN}_L} + \frac{\text{SPAN}_R \times \text{LGSCAL}_L - \text{SPAN}_L \times \text{LGSCAL}_R}{\text{SPAN}_R - \text{SPAN}_L}$$

$$\text{OUT} = 10^{\text{OUT1}}$$

LGSCAL_L : Log₁₀(SCAL_L)

LGSCAL_R : Log₁₀(SCAL_R)

[Note]

Decade output is used for display and print. It is not reflected on pen recording.

Example) When setting as in previous the page, the display is as following table




 
 


 
 


 
 

 
 
 


 
 



 
 



Input voltage (V)	0. 0	1. 0	2. 5	3. 0	5. 0
Display	1. 0E0	1. 0E1	3. 2E2	1. 0E3	1. 0E5

(6) **dELt** (Difference), **Si** **CA** (Sum), **AEAR** (Average)

Calculates the input of VOLT, TC, RTD or SCALE, and output.



Example) When subtracting the Channel 1 input data from the Channel 2 input data to set the difference (0 to 40 mV)

Records and indicates "Channel 2 (input value) minus Channel 1" to Channel 2

Display	Operation Keys	Description
	 3 sec   	Press the "MENU" key for 3 seconds or more to enter the setup mode. Use the Δ key to indicate " r-RANGE ". Press the "ENT" key.
 (Setting channel)	  	Use the Δ key to select the channel you want to set. Press the "ENT" key.
	  	Use the Δ key to select " dELt ". Press the "ENT" key.
 (Reference channel)	  	Use the Δ key to select the "channel you want to subtract." Press the "ENT" key.
 (Zero input value after difference operation)	   	Use the Δ key to select a numeral. Use the \triangleright key to shift a digit. Press the "ENT" key.
 (Span input value after difference operation)	   	Use the Δ key to select a numeral. Use the \triangleright key to shift a digit. Press the "ENT" key.
		Press the "ENT" key. Setting is completed. To return to the user mode, press the "MENU" key for 3 seconds or more.

[Note]

When an incorrect numeral is input,   ,   or

  is displayed.

Press the "ENT" key and re-enter a correct numeral.





 



 



 
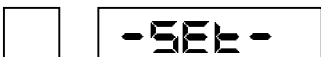
 
About Difference, Sum, and Average

- The setting channel must be larger than the one on which computes the "difference, sum, or average". Set up only Channel 2.
- The range and scale of the setting channel is the same as the channel on which computes the "difference, sum, and average".
- A range value after the computation cannot exceed the maximum range of the instrument.
- Set for the reference channel only the voltage, current, thermocouple, resistance temperature detector, and their scaling ranges.


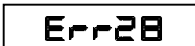
(7) **SEI P** (Skip)

Setting SKIP on the Channel that does not display and recording.

Example) When skipping Channel 2

Display	Operation Keys	Description
	 3 sec	Press the "MENU" key for 3 seconds or more to enter the setup mode. Use the Δ key to indicate "
		-RANGE ". Press the "ENT" key.
	 	
		Use the Δ key to select the channel you want to set. Press the "ENT" key.
	 	
		Use the Δ key to select " SEI P ". Press the "ENT" key.
	 	
		Press the "ENT" key. Setting is completed. To return to the user mode, press the MENU key for 3 seconds or more.

[Note]

Setting all the channels to Skip indicates an error,   .
At least, one channel should be set to measurement.

About Skip

The skip channel measures, but does not provide display, print, or assess alarms. If input is not connected, short-circuit a measurement terminal.

The pen keeps zero point position. Remove the cartridge pen.

7.1.2 Setting the Alarm

Setting items

Alarm setting to the following 2 types for each channel is possible.

Alarm point can be set up to 4 levels per channel.

Once sets up the alarm point, illuminated "ALM" when a process variable reaches alarm point, and simultaneously, outputs the alarm print indicating an alarm occurrence to the chart paper.

H: High limit alarm When the process variable is higher than the alarm setting point, issues an alarm.

L: Low limit alarm When the process variable is lower than the alarm setting point, issues an alarm.

Operation

Setting	Channel	Level	ON/OFF	Type	Set Value	Option	
						Relay ON/OFF	Relay No.
ALARM	Ch1	L1	on	H	-2.000	on	1
	Ch2	L2	off	L		off	2
		L3					3
		L4					

Example) When setting for the Channel 1 alarm point (Level 1) the high limit alarm, set the value of -2.000, and alarm output relay No. 1

Display	Operation Keys	Description
	ESC MENU 3 sec	Press the "MENU" key for 3 seconds or more to enter the setup mode. Use the Δ key to indicate "ALARM". Press the "ENT" key.
	Δ PRINT ENT	Use the Δ key to select the channel you want to set. Press the "ENT" key.
	Δ PRINT ENT	Use the Δ key to select an alarm level. Press the "ENT" key. Up to 4 levels can be set.
	Δ PRINT ENT	Use the Δ key to select alarm setting ON. Press the "ENT" key. Setting "off" indicates "ALARM" and completes setting.
	Δ PRINT ENT	Use the Δ key to select an alarm type. Press the "ENT" key.
	Δ PRINT \triangleright FEED ENT	Set an alarm point. Use the \triangleright key to shift a digit, and use the Δ key to select a numeral. Once setting is completed, press the "ENT" key. A decimal point position is fixed depending on the range.

[Note]

When the “ENT” key is pressed during the alarm point setting. Display will be switched to the next setting display.

Setting hereinafter is valid only for the model to which an alarm output (option : LH3) has been attached. If the option has not been set, press the “ENT” key until “-SEt-” is indicated.

Then, press the “ENT” key once more. Setting is completed.

Display	Operation Keys	Description
<div> <div>{</div> <div>on</div> </div>	<div> <div>△</div> <div>PRINT</div> <div>ENT</div> </div>	<p>When an alarm occurs, issues the alarm output from the alarm output relay. Use the △ key to select alarm output ON and press the “ENT” key.</p> <p>If the alarm output is not used, select OFF and press the “ENT” key.</p>
<div> <div>{</div> <div>}</div> </div>	<div> <div>△</div> <div>PRINT</div> <div>ENT</div> </div>	<p>If the alarm output is set to ON, set the relay number. Use the △ key to select the relay number out of 1 to 3, and press the “ENT” key.</p>
<div> <div></div> <div>-SEt-</div> </div>	<div> <div>ENT</div> </div>	<p>Press the “ENT” key. Setting is completed.</p> <p>When you want to continue to set for other channel, press the △ key to select the channel, and start setting. To return to the user mode, press the “MENU” key for 3 seconds or more.</p>

[Note]

The tag setting does not effect on Alarm print setting. Prints channel numbers every time.

7.1.3 Setting the Unit

Setting Items

Sets the unit for each channel.




[Note]

If you change the unit in the range of **Volte**, **EC** or **red**, set the range to **SCALE**.

Operation

Setting	Channel	Char. No.	Code No.	
Unit	CH1	1	Cd bF	(°)
	CH2	2	Cd 43	(C)
		3	Cd 00	End
		4		
		5		
		6		



 

Example) Setting the unit (°C) for Channel 1

Display	Operation Keys	Description
	<div>ESC</div> <div>MENU 3 sec</div> <div>PRINT ENT</div>	Press the “MENU” key for 3 seconds or more to enter the setup mode. Use the Δ key to indicate “Unit”. Then, press the “ENT” key.
	<div>Δ</div> <div>PRINT ENT</div>	Use the Δ key to select the channel you want to set. Then, press the “ENT” key.
<div>1</div> <div>Cd bF</div> <div>(Code No.)</div>	<div>Δ PRINT \triangleright FEED</div> <div>ENT</div>	Use the Δ or \triangleright key to select the 1st character of the code number, and press the “ENT” key. See Characters Code Table on the next page.
<div>2</div> <div>Cd 43</div>	<div>Δ PRINT \triangleright FEED</div> <div>ENT</div>	Set the 2nd character in the same manner.
<div>3</div> <div>Cd 00</div>	<div>Δ PRINT \triangleright FEED</div> <div>ENT</div>	When the number of unit characters is less than 6, enter a code(00) to end. Press the “ENT” key.
	<div>ENT</div>	Press the “ENT” key. Setting is completed. To return to the user mode, press the “MENU” key for 3 seconds or more.

[Note]

The unit setting is effective only when the range setting is **SCALE**, **Scale** or **deCA** (including **deLE**, **Si CA** and **AREA** when **SCALE** is selected as the reference channel). When the range setting is others, the unit is determined according to the range automatically.

(1)Character code table

	2 *	3 *	4 *	5 *	6 *	7 *	A *	B *	C *	D *	E *	F *
*0	SP	0	@	P		p	₀	⁰		Π		π
*1	!	1	A	Q	a	q	₁	¹	A	P	α	ρ
*2	"	2	B	R	b	r	₂	²	B	Σ	β	σ
*3	#	3	C	S	c	s	₃	³	Γ	T	γ	τ
*4	\$	4	D	T	d	t	₄	⁴	Δ	Υ	δ	υ
*5	%	5	E	U	e	u	₅	⁵	E	Φ	ε	φ
*6	&	6	F	V	f	v	₆	⁶	Z	X	ξ	χ
*7	'	7	G	W	g	w	₇	⁷	H	Ψ	η	ψ
*8	(8	H	X	h	x	₈	⁸	Θ	Ω	θ	ω
*9)	9	I	Y	i	y	₉	⁹	I		ι	
*A	*	:	J	Z	j	z			K		κ	
*B	+	;	K	[k	{	₊	⁺	Λ		λ	
*C	,	<	L	¥	l		_±	[±]	M		μ	
*D	—	=	M]	m	}			N		ν	
*E	.	>	N	^	n	—	_—	[—]	Ξ		ξ	
*F	/	?	O	—	o		_o	^o	O		o	

Setting example)

The code number for "C" is "43"

7.1.4 Setting the Chart feed Speed

Setting Items

Sets the chart feed speed. Select it from the table below.

Table 7.2 Chart feed speed (Unit: mm/h)

5	10	15	20	25	30	40	50	60	75
80	90	100	120	150	160	180	200	240	300
360	375	450	600	720	750	900	1200	1500	1800
2400	3000	3600	4500	4800	5400	6000	7200	9000	10800
12000									

Operation

Setting	1st/2nd Chart speed	Chart speed
CHAR-E	SPd-1	1500
	SPd-2	

Example) When setting the 1st chart feed speed to 1500 mm/h

Display	Operation Keys	Description
<input type="checkbox"/> CHAR-E	<div>ESC</div> <div>MENU 3 sec</div> <div>△</div> <div>PRINT ENT</div>	Press the "MENU" key for 3 seconds or more to enter the setup mode. Use the △ key to indicate "CHAR-E", and press the "ENT" key.
<input type="checkbox"/> SPd-1	<div>△</div> <div>PRINT ENT</div>	Use the △ key to select the 1st chart feed speed, and press the "ENT" key.

[Note]

When altering the chart feed speed with the DI function (option : RE1), set the 2nd chart feed speed. If the DI function (option : RE1) is not attached, setting of the 2nd chart feed speed becomes invalid.

Display	Operation Keys	Description
<input type="checkbox"/> 1500	<div>△</div> <div>PRINT FEED</div>	Use the △ key to set the 1st chart feed speed, and press the "ENT" key.
<input type="checkbox"/> -SEt-	<div>ENT</div>	Press the "ENT" key. To return to the user mode, press the "MENU" key for 3 seconds or more.

[Note]

Restriction of printing
by chart feed speed

Print type	Chart speed (mm/h)
Alarm occurrence print, Alarm recovery print, Affix print, DI Comment print (Synchronous), DI Date and Time print (Synchronous), DI Manual print (Synchronous)	5 to 100 (mm/h)
Logging print (Synchronous)	10 to 100 (mm/h)

When the chart feed speed is 0 mm/h, it's printed with forcible chart feed. (When the chart speed is more than 120 mm/h, the Table shown above is not printed.) List Print, Engineering List Print, Manual Print (key), DI Comment print (Asynchronous), DI Date and Time print (Asynchronous), DI Manual print (Asynchronous) and Logging print (Asynchronous) is printed regardless of the chart feed speed.

7.1.5 Setting the Date and Time**Setting Items**

The following figure describes how to set the date/time of the internal clock.

Setting	Year	Month, Day	Time
CLoCk	Y 2000	M 01-01	t 06:00

Example) When setting the date and time to January 1st, 2000, 6:00.

Display	Operation Keys	Description
	ESC MENU 3 sec △ PRINT ENT	Press the "MENU" key for 3 seconds or more to enter the setup mode. Use the △ key to indicate "CLoCk", and press the "ENT" key.
	△ PRINT FEED ENT	Set the year. Use the △ key to select a numeral, and use the ▷ key to shift a digit. Press the "ENT" key.
	△ PRINT FEED ENT	Set the month and day. Operate in the same manner as setting the year.
	△ PRINT FEED ENT	Set the time (hours and minutes). Operate in the same manner as setting the year.
	ENT	Press the "ENT" key. To return to the user mode, press the "MENU" key for 3 seconds or more.

[Note]

If you enter a non-existent date or time, an error is indicated. Press the ENT key and re-enter a correct numeral.

7.1.6 Copying the Setting Data

Setting Items

The following figure describes how to copy the setting data of 1 channel to 2 channel.

Operation

Setting	Copy-from Channel	Copy-to Channel
CoPy	F Ch 1	Ch2

Example) When copying the setting data of Channel 1 to Channel 2.

Display	Operation Keys	Description
<div></div> CoPy	<div>ESC MENU 3 sec</div>	Press the MENU key for 3 seconds or more to enter the setup mode. Use the Δ key to indicate "CoPy," and press the "ENT" key.
F Ch 1	<div>Δ PRINT ENT</div>	Use the Δ key to select the original channel.
Ch2	<div>Δ PRINT ENT</div>	Use the Δ key to select the channel to be copied, and press the "ENT" key.
-SEt-	<div>ENT</div>	Press the "ENT" key. To return to the user mode, press the "MENU" key for 3 seconds or more.

[Note]

Copy the setting data of Channel 1 to Channel 2. The contrary is not made.

7.1.7 Setting the other functions

Setting the other functions as follows is possible.

Setting Items

① **Zone** (Zone recording)

The data for each channel can be recorded separately in another area so as not to overlap.

② **PAR** (Partial compression/expansion)

Records the measured data of the channel, partially compressed or expanded.

③ **Print** (Digital print)

Specify with ON or OFF whether the measured data for each channel is to be printed or not.

④ **TAG** (Tag)

Sets the tag, which is to be printed instead of a channel number, for logging print or manual print.

Setting the tag up to 5 characters (See Page 64 for Character Code Table), for each channel is possible.

⑥ **COM** (Comment words)

Sets the comment words to be printed by DI function (option : RE1).



 






 
 



 




 

There are 3 kinds of comment words and setting up to 12 characters (See Page 64 for Character Code Table) for each channel is possible.

Operation

Setting	Mode	
ALL	Zone	Zone Recording
	PAR	Partial Compression/Expansion
	Print	Digital Print
	TAG	Tag
	COM	Comment Words

(1) **Zone** (Zone Recording)

Example) Setting the instrument so that Channel 1 zero/span will be recorded at the position of 20 to 50 %


Display	Operation Keys	Description
 ALL	 3 sec   	Press the "MENU" key for 3 seconds or more to enter the setup mode. Use the Δ key to indicate "ALL", and press the "ENT" key.
 Zone	  	Use the Δ key to indicate "Zone", and press the "ENT" key.
 CH 1	  	Use the Δ key to select the channel you want to set, and press the "ENT" key.
 020 (Setting of Left-end Position)	   	Set a zero point printing position in percentage (%). Use the Δ key to select a numeral, and use the \triangleright key to shift a digit. Press the "ENT" key.
 050 (Setting of Right-end Position)		Set a span printing position in percentage (%). Operate in the same manner as setting the zero point printing position.
 -SEt-		Press the "ENT" key. Setting is completed. To return to the user mode, press the "MENU" key for 3 seconds or more.

[Note]

If you enter an incorrect numeral, errors  **Err21** or  **Err26** is displayed. Press the "ENT" key and re-enter a correct numeral.

(2) **PA-rE** (Partial Compression/Expansion)

Example) Setting Channel 1 scale of 0 to 1,000.0 °C to 500.0 °C at a boundary point of 30 %

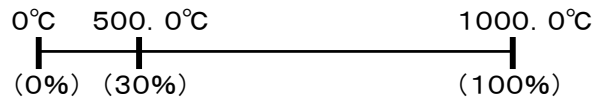

Display	Operation Keys	Description
<input type="checkbox"/> ALL	ESC MENU 3 sec PRINT ENT	Press the “MENU” key for 3 seconds or more to enter the setup mode. Use the Δ key to indicate " ALL ", and press the “ENT” key.
<input type="checkbox"/> PA-rE	Δ PRINT ENT	Use the Δ key to select " PA-rE ", and press the “ENT” key.
<input type="checkbox"/> CH 1	Δ PRINT ENT	Use the Δ key to select the channel you want to set, and press the “ENT” key.
<input type="checkbox"/> on	Δ PRINT ENT	Use the Δ key to select " on ", and press the “ENT” key.
<input type="checkbox"/> 030	Δ \triangleright PRINT FEED ENT	Set a boundary point position in percentage (%). Use the Δ key to select a numeral, and use the \triangleright key to shift a digit. Press the “ENT” key.
<input type="checkbox"/> 0500.0	Δ \triangleright PRINT FEED ENT	Set a boundary point position to "0500.0". Use the Δ key to select a numeral, and use the \triangleright key to shift a digit. Press the “ENT” key.
<input type="checkbox"/> -SEt-	ENT	Press the “ENT” key. Setting is completed. To return to the user mode, press the “MENU” key for 3 seconds or more.

[Note]

If you enter an incorrect numeral, an error **E** **Err2 !** is displayed. Press the “ENT” key and re-enter a correct numeral.

(3) Print (Digital Print)

Example) Setting logging channel data print to "ON"(print enabled) for all the channels

Display	Operation Keys	Description
<input type="checkbox"/> Run	<small>ESC</small> MENU 3 sec	Press the "MENU" key for 3 seconds or more to enter the setup mode. Use the Δ key to indicate "
<input type="checkbox"/> Print	Δ PRINT ENT	Run ", and press the "ENT" key.
<input type="checkbox"/> CH1	Δ PRINT ENT	Use the Δ key to indicate " Print ", and press the "ENT" key.
<input type="checkbox"/> on	Δ PRINT ENT	Use the Δ key to select the channel you want to set, and press the "ENT" key.
<input type="checkbox"/> -Set-	ENT	Use the Δ key to switch from " off " to " on ", and press the "ENT" key.
<input type="checkbox"/> CH2	Δ PRINT ENT	Press the "ENT" key. Setting is completed.
<input type="checkbox"/> -Set-	ENT	To return to the user mode, press the "MENU" key for 3 seconds or more.
Repeat setting for each channel.		

[Note]

When the channel which selected skip in the range setting is set ON, "*" is printed.

(4) **ⒺⒶⒸ** (Tag)

Example) Setting "AB" for Channel 1

Display	Operation Keys	Description
	3 sec 	Press the "MENU" key for 3 seconds or more to enter the setup mode. Use the Δ key to indicate "RUN", and press the "ENT" key.
		Use the Δ key to indicate "ⒺⒶⒸ", and press the "ENT" key.
		Use the Δ key to select the channel you want to set, and press the "ENT" key.
 (Setting of 1st Character)		Set "4 1" as the 1st character. Use the Δ key to select a code, and use the \triangleright key to shift a digit. Press the "ENT" key.
 (Setting of 2nd Character)		Set the 2nd character in the same manner.
 (Setting of 3rd Character)		Set "00" as the 3rd character and press the "ENT" key.
		Press the "ENT" key. Setting is completed. To return to the user mode, press the "MENU" key for 3 seconds or more.

[Note]

When the number of tag characters is less than 5, set the "00" code following the last character. See Page 64 for Character code table.

(5) **Cānē** (Comment Words)

Example) Setting "ON" for Comment 1(**Cāē 1**)

Display	Operation Keys	Description
	3 sec 	Press the "MENU" key for 3 seconds or more to enter the setup mode. Use the Δ key to indicate "ALL", and press the "ENT" key.
		Use the Δ key to indicate "Cāē", and press the "ENT" key.
		Use the Δ key to select a comment number. Indicate "Cāē 1" and press the "ENT" key.
 (Setting of 1st Character)		Set "4F" as the 1st character. Use the Δ key to select a code, and use the \triangleright key to shift a digit. Press the "ENT" key.
 (Setting of 2nd Character)		Set "4E" as the 2nd character. Operate in the same manner as setting the 1st character.
 (Setting of 3rd Character)		Set "00" as the 3rd character. Operate in the same manner as setting the 1st character.
 (Setting of 9th Character)		Repeat setting for each channel.
 (Setting of 10th Character)		
 (Setting of 11th Character)		
 (Setting of 12th Character)		
		Press the "ENT" key. Setting is completed. To return to the user mode, press the "MENU" key for 3 seconds or more.

[Note]

- When the number of tag characters is less than 12, set the "00" code following the last character. See Page 64 for Character code table.
- The digit is not indicate after setting the "00".
- When DI (Option: RE1) is not designated, comment print does not function.
Do not set the comment setting.

7.2 Setting the Engineering Mode to use this more smoothly



WARNING

When calibrating data, connect the equipment written in the Section 9.5 of the instruction manual. Data calibration must be performed correctly.

Operators possessing knowledge of electricity and control related matters should perform the calibration after careful reading the Sections 7.2 and 9.5 of the instruction manual.

(Shinko Technos is not liable for any damages incurred if calibration is performed other than described in the instruction manual.)

Key Operation to Enter the Engineering Mode

Press the “MENU” key for 3 seconds or more to enter the setup mode.

Use the Δ key to select “E Δ ”, and press the “ENT” key then to display “0000”.

Use the Δ key to alter a numeral, and the \triangleright key to shift a digit, enter the password “2222”.

Press the “ENT” key then to display blinking “rESEt”.

Press the “ENT” key. After reset, it enters the engineering mode.

The following figure describes how to set the following items.

The following figure shows a display map of the Engineering mode. Use the Δ key to operate.

7.2.1 Alarm Hysteresis

Setting	ON/OFF	
ALAH5	on off	Sets the hysteresis width Cancels the hysteresis width

7.2.2 Burnout ON/OFF

Setting	Channel	ON/OFF	
bOUT	Ch1 Ch2	on off	Sets burnout Cancels burnout

7.2.3 Channel Offset

Setting	Channel	OFFSET	
oFSEt	Ch1 Ch2	0.0000	Enter an offset value

7.2.4 Reference Junction Compensation

Setting	Channel	Function	
rJC	Ch1 Ch2	Int Ext Ch	Internal Compensation External Compensation External channel Input Compensation

- 7.2.5 Digital Filter

Setting	Channel	Function	
FILr	CH1 CH2	10000	Digital Filter value

- 7.2.6 Settings Related to Recording

Setting	Function
run	Recording start/stop INT/EXT selection
	Tag/channel print selection
	Alarm print ON/OFF
	Logging print ON/OFF
	Logging print Synchronous/Asynchronous print selection
	Print gap correction ON/OFF

- 7.2.7 Setting the Communication Function

The diagram illustrates the LCD display and the menu structure for setting the communication function. The LCD display shows the word "Setting" in the top line and "Coñ" in the bottom line. To the right of the display, a bracket groups the following menu items: "Local Address", "Data transfer rate", "Data Length", "Parity Bit", and "Stop Bit".

- 7.2.8 Initializing the Setup Data

Setting	YES/NO
late	YES no

- 7.2.9 DI Functions

Setting	DI No.	Function
di	0001	No function
	0002	Recording start/stop
	0003	Chart feed speed selection
	0004	Comment 1 print(Synchronous)
	0005	Comment 2 print(Synchronous)
	0006	Comment 3 print(Synchronous)
	0007	Manual print(Synchronous)
	0008	Date and time print(Synchronous)
	0009	Comment 1 print(Asynchronous)
	0010	Comment 2 print(Asynchronous)
	0011	Comment 3 print(Asynchronous)
	0012	Manual print(Asynchronous)
	0013	Date and time print(Asynchronous)

- 7.2.10 Temperature Unit selection

Setting	Temp Unit	
TEMP	C	Centigrade Unit
	F	Fahrenheit Unit

- 7.2.11 Point Calibration

Setting	Function	
P AdJ	Zero	Zero point calibration
	FULL	Span point calibration

- 7.2.12 Data Calibration

Setting	Function	
d AdJ	Volt	Voltage calibration
	rtD	Resistance temperature detector calibration
	rJC	Internal reference junction compensation calibration

- 7.3 Terminating the Engineering Mode

Setting	Function	
E n d	Store	Saves a setting value
	Abort	Cancels a setting value

[Note]

When terminating the Engineering mode, if you select "End" and turn off the power without carrying out "Store", the setting will become invalid. For "End" operation, see Page 89.

 










Table 7.3 Initial setting value of the engineering mode

Setting items	Initial set	Remarks
★Alarm hysteresis	ON(0.5%)	
★Burnout (all channels)	OFF	
★Channel offset (all channels)	0.0	
★RJC (all channels)	Internal compensation INT	
★Digital Filter Value	K=1.0000	
★REC record RUN/STOP trigger Channel/Tag print Alarm print Logging Print Logging Printing interval Logging Print reference time Logging Print Sync./ASync. Print gap correction	INT Ch OFF ON 6H 00:00 SYNC (synchronous) OFF	Use the REC key
★COM(communication) Address Baud rate Data length Parity bit Stop bit	01 9600 8bit None 1bit	
★DI function (1 to 3 channel)	OFF	
★Temperature unit	℃	

7.2.1 Alarm Hysteresis

Setting 0.5 % hysteresis to the values at alarm activation and alarm recovery is possible. (Common to all the alarms)














 


Example) Turning off alarm hysteresis

Display	Operation Keys	Description
 	   	Enters the engineering mode (See the key operation in page 74). Use the Δ key to indicate "ALARMS", and press the "ENT" key.
 	  	Use the Δ key to indicate "OFF", and press the "ENT" key.

7.2.2 Burnout ON/OFF

Setting Burnout High (to deflect the recording over the span) for each channel is possible.

Example) Setting Burnout High for Channel 2

Display	Operation Keys	Description
 	   	Enters the engineering mode (See the key operation in page 74). Use the Δ key to indicate "b.out", and press the "ENT" key.
 	  	Use the Δ key to indicate "CH2", and press the "ENT" key.
 	  	Use the Δ key to select "on", and press the "ENT" key.

7.2.3 Channel Offset

For channel offset setting, set the value to be added to an actual process variable.

The input possible value is -19999 to 99999.

Input value [-19999 to 99999]

Example) Setting the value (3.0) to be added to Channel 2

 

 









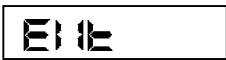



 





 
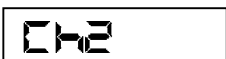
Display	Operation Keys	Description
		Enters the engineering mode (See the key operation in page 74). Use the Δ key to indicate "OFFSET", and press the "ENT" key.
	 	Use the Δ key to select "CH2", and press the "ENT" key.
	 	Use the Δ key to alter a sign/numerical value or shift a decimal point. Use the \triangleright key to shift a digit. Once the numerical value is decided, press the "ENT" key.

7.2.4 Reference Junction Compensation

 





 




 











The following describes how to set the method for compensating an electromotive force generated between a thermocouple wire or compensation lead wire and a terminal. There are the following three compensating methods:

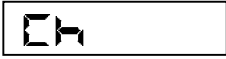- A method of compensation by the built-in temperature sensing element (INT: Internal compensation)
 - A method of compensation by keeping an external compensator's temperature constant (EXT: External compensation)
 - A method of compensation by one input for the recorder temperature which gets external junction box. (CH: Channel input compensation)
- Internal compensation (INT) has been initially set.

Example) Setting the external compensator's temperature constant voltage for Channel 2 to 391 μV . Input the thermocouple T, compensate the external compensator's temperature 10°C and Input the electromotive force 391 μV .

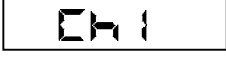Display	Operation Keys	Description
 	   	Enters the engineering mode (See the key operation in page 74). Use the Δ key to indicate "rJE", and press the "ENT" key
 	  	Use the Δ key to select "CH2", and press the "ENT" key.
 	  	Use the Δ key to select "E11E", and press the "ENT" key.
 	   	Use the Δ key to alter a numerical value, or the \triangleright key to shift a digit. Once the numerical value is decided, press the "ENT" key.
 		Setting is completed. Returns to the channel setting.

Example) When Channel 1 input compensates Channel 2 reference junction

Display	Operation Keys	Description
 	   	Enters the engineering mode (See the key operation in page 74). Use the Δ key to indicate "rJE", and press the "ENT" key.
 	  	Use the Δ key to select "CH2", and press the "ENT" key.
 	  	Use the Δ key to select "CH", and press the "ENT" key.
 	  	Use the Δ key to select "CH1", and press the "ENT" key.
 		Setting is completed. Returns to the channel setting.

7.2.5 Digital Filter

Apply a digital filter to a process variable to record the first order lag. From 99.5% response time (T_1), the filter constant (K) is obtained by the following formula.

$$K = \frac{0.64}{T_1}$$

Example) When 99.5% response time is 50 second; $K = \frac{0.64}{50} = 0.0128$

Display	Operation Keys	Description
	 	Enters the engineering mode (See the key operation in page 74). Use the Δ key to select "F I L T E R" and press the "ENT" key.
	 	Use the Δ key to select digital filter value "00 128". Press the "ENT" key.
		Setting is completed. Press the MENU key for 3 seconds or more to return to the user mode.

7.2.6 Settings Related to Recording

Setting a trigger for recording start/stop, selecting tag/channel print, or setting alarm print and logging print, are possible.

(1) Trigger setting for recording start/stop

Set whether the trigger of recording start/stop should be "REC" key or DI.

Example) When setting DI as the recording start/stop trigger

Display	Operation Keys	Description
	 	Enters the engineering mode (See the key operation in page 74). Use the Δ key to indicate "RUN", and press the "ENT" key.
		Use the Δ key to select "RUN/STOP", and press the "ENT" key.
		Use the Δ key to indicate "E I E", and press the "ENT" key.
		Setting is completed. Returns to the Recording Start/Stop Setting screen.

 

 

 
 


 
 



 

[Note]

When "E I E" is displayed, RUN/STOP key does not function. Set "REC" to DI. See DI functions in page 88.

(2) Tag/channel print selection

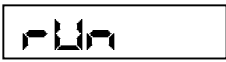In the case of logging print or manual print, this sets whether a tag or channel should be printed.

Example) Setting the tag

 

 

 
 


 
 


 
 

Display	Operation Keys	Description
 	  	Enters the engineering mode (See the key operation in page 74). Use the Δ key to indicate "rUn", and press the "ENT" key.
 	 	Use the Δ key to select "tAG", and press the "ENT" key.
 	 	Use the Δ key to indicate "tAG", and press the "ENT" key.
 		Setting is completed. Returns to the Tag/Channel Setting screen.

(3) Alarm print ON/OFF

Setting the alarm print ON/OFF.

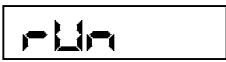When ON1, prints the alarm occurring and the alarm recovering. When ON2, prints only the alarm occurring.

Example) Setting both the alarm occurring and the alarm recovering





 




 


 
 




 



 

Display	Operation Keys	Description
 	  	Enters to the engineering mode (See the key operation in page 74). Use the Δ key to indicate "rUn", and press the "ENT" key.
 	 	Use the Δ key to select "ALAr-A", and press the "ENT" key.
 	 	Use the Δ key to indicate "on 1", and press the "ENT" key.
 		Setting is completed. Returns to the Alarm Print Setting screen.

(4) Logging print ON/OFF

Sets logging print to ON/OFF.

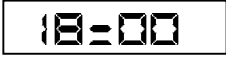In the case of logging print ON, set the print start time and print interval.






 



 
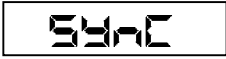




Example) When you want logging print to start at 18:00 every day

Display	Operation Keys	Description
 	  	Enters the engineering mode (See the key operation in page 74). Use the Δ key to indicate "rUn", and press the "ENT" key.
 	 	Use the Δ key to select "dOePr", and press the "ENT" key.
 	 	Use the Δ key to indicate "on", and press the "ENT" key.
  (Print Start Time)	  	Use the Δ key to alter a numeral, and \triangleright key to shift a digit. Then, set the time and press the "ENT" key.
  (Interval)	 	Use the Δ key to indicate "24H", and press the "ENT" key. (Choose from 10min, 15min, 20min, 30min, 1H, 2H, 3H, 4H, 6H, 12H, 24H)
 		Setting is completed. Returns to the Logging Print Setting screen.

(5) Logging print Synchronous/Asynchronous

Sets logging print to synchronous print/asynchronous print.

Example) Setting logging print to asynchronous print.

Display	Operation keys	Description
 	  	Enters the engineering mode (See the key operation in page 74). Use the Δ key to display "rUn", and press the "ENT" key.
 	 	Use the Δ key to select "d.SyNC", and press the "ENT" key.
 	 	Use the Δ key to display "SyNC", and press the "ENT" key.
 		Setting is completed. Returns to the logging print Sync/Async Setting screen.

(6) Print gap correction ON/OFF

Set print gap correction. As for this function, only DI asynchronous print, an asynchronous log print are applied.

 
 






























Example) When setting print gap correction to ON.

Display		Operation keys	Description
<input type="checkbox"/>	run	ENT △ PRINT ENT	Enters the engineering mode (See the key operation in page 74). Use the △ key to display "run", and press the "ENT" key.
<input type="checkbox"/>	PCAdJ	△ PRINT ENT	Use the △ key to select "PCAdJ", and press the "ENT" key.
<input type="checkbox"/>	on	△ PRINT ENT	Use the △ key to display "on", and press the "ENT" key.
<input type="checkbox"/>	PCAdJ		Setting is completed. Returns to the print gap correction Setting screen.

7.2.7 Setting the Communication Function

Sets Local Address, Data transfer rate (communication speed), Data Length, Parity Bit, and Stop Bit.


 













Example) Local Address: 02, Data transfer rate: 1200bps, Data Length: 7 bit, Parity Bit: even, Stop Bit: 2 bit

Display	Operation Keys	Description
 CoA	   	Enters the engineering mode (See the key operation in page 74). Use the  key to indicate " CoA ", and press the "ENT" key.
 Ad-02	  	Use the  key to indicate " Ad-02 ", and press the "ENT" key. (Select from Ad-01 to Ad-32)
 1200	  	Use the  key to indicate " 1200 ", and press the "ENT" key. (Select from 1200, 2400, 4800, 9600)
 7bit	  	Use the  key to indicate " 7bit ", and press the "ENT" key. (Select from 7 bit, 8 bit)
 EVEN	  	Use the  key to indicate " EVEN ", and press the "ENT" key. (Select from EVEN, ODD and NONE)
 2bit	  	Use the  key to indicate " 2bit ", and press the "ENT" key. (Select from 1 bit, 2 bit)
 CoA		Setting is completed. Returns to the Communication Function Setting screen.

7.2.8 Initializing the Setup Data

Initializes the setup data to the status when it was shipped. Initializes all the setup data, please be careful. Calibration data is not initialized.

Example) Initializing the Setup Data.







 



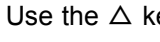

Display	Operation Keys	Description
 1bit	   	Enters the engineering mode (See the key operation in page 74). Use the  key to indicate " 1bit ", and press the "ENT" key.
 YES	  	Use the  key to select " YES ", and press the "ENT" key.
 1bit	  	Initialization is completed.

7.2.9 DI Functions

Allocates the functions to 3 DIs. There are following 12 DI functions.

No function	: OFF
Manual print (Sync.)	: MAN-P (Positive edge: running start)
Manual print (ASync.)	: MANP (Positive edge: running start)
RUN/STOP trigger function	: RCd (ON:RUN, OFF:STOP)
Date/time print (Sync.)	: DTI A-P (Positive edge: running start)
Date/time print (ASync.)	: DTI APC (Positive edge: running start)
Chart feed speed selection	: SPEED (ON:Spd-1, OFF:Spd-2)
Comment print 1 to 3 (Sync.)	: CANt1, CANt2, CANt3 (Positive edge: running start)
Comment print 1 to 3 (ASync.)	: ACANt1, ACANt2, ACANt3 (Positive edge: running start)

Example) Setting comment prints 3 for DI3

Display	Operation Keys	Description
		Enters the engineering mode (See the key operation in page 74). Use the Δ key to indicate "  ", and press the "ENT" key.
	 	Use the Δ key to select "  ", and press the "ENT" key.
	 	Use the Δ key to indicate "  ", and press the "ENT" key.
		Setting is completed. Returns to the DI3 Function Setting screen.


 






[Note]

- ① Although "DI synchronous print" is not printed in RUN OFF, "DI asynchronous print" prints also in RUN OFF.
- ② The setting is OFF without the DI option. Do not set any setting except for OFF.

7.2.10 Temperature Unit

Changes the setting of a temperature unit.

Example) Setting a temperature unit to Fahrenheit.

Display	Operation keys	Description
		Enters the engineering mode (See the key operation in page 74). Use the Δ key to indicate "  ", and press the "ENT" key.
	 	Use the Δ key to select "  ", and press the "ENT" key.
		Setting is completed. Returns to the Temperature Unit Setting screen.

[Note]

When changing temperature unit, all the setup data (configuration) reverts to initial value.

7.2.11 Point Calibration

Calibrates a pen recording position.

Zero: Calibration of the zero point position

FULL: Calibration of the span point position

Example) When calibrate the zero point of 1 channel pen recording

Display	Operation Keys	Description
		Enters the engineering mode (See the key operation in page 74). Use the Δ key to indicate "P Adj", and press the "ENT" key.
		Use the Δ key to select "Zero", and press the "ENT" key.
		Use the Δ key to select "Ch 1", and press the "ENT" key.
		The instrument starts to feed and trace the chart paper. With the Δ (left move) and \triangleright (right move), adjust the 0 mm position of the chart paper and the recording position. Press the "ENT" key. Display indicates the set counter value.
		Setting is completed. Returns to the Zero Point Calibration screen.

Example) Calibrating the span point of 1 channel pen recording

Display	Operation Keys	Description
		Enters the engineering mode (See the key operation in page 74). Use the Δ key to indicate "P Adj", and press the ENT key.
		Use the Δ key to select "FULL", and press the "ENT" key.
		Use the Δ key to select "Ch 1", and press the "ENT" key.
		The instrument starts to feed and trace the chart paper. With the Δ (left move) and \triangleright (right move), adjust the 100 mm position of the chart paper and the recording position. Press the "ENT" key. Display indicates the set counter value.
		Setting is completed. Returns to the Span Point Calibration screen.

7.2.12 Data Calibration

Calibrate the voltage, resistance temperature detector, and reference junction compensation.

Volte : Calibration of the voltage

 




 





 

 

 

 

 

 









red : Calibration of the resistance temperature detector

rJC : Calibration of reference junction compensation


















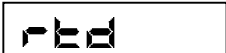






 
 
[Note]

Every channel requires calibration.

Example) Calibrating the voltage at Channel 1

Display	Operation Keys	Description
 dAdj	  	Enters the engineering mode (See the key operation in page 74). Use the Δ key to indicate "dAdj", and press the "ENT" key.
 Volte	 	Use the Δ key to select "Volte", and press the "ENT" key. Select the channel where a instrument for calibration such as a mV generator is connected, and press the "ENT" key.
 CH 1	 	
 00mV		Enter 0 mV. After 30 seconds, make sure that the ALM lamp is unlit and press the "ENT" key.
 15mV		Enter 15 mV. After 10 seconds, make sure that the ALM lamp is unlit and press the "ENT" key.
 25mV		Enter 25 mV. After 10 seconds, make sure that the ALM lamp is unlit and press the "ENT" key.
 35mV		Enter 35 mV. After 10 seconds, make sure that the ALM lamp is unlit and press the "ENT" key.
 55mV		Enter 55 mV. After 10 seconds, make sure that the ALM lamp is unlit and press the "ENT" key.
 200mV		Enter 200 mV. After 10 seconds, make sure that the ALM lamp is unlit and press the "ENT" key.
 001V		Enter 1 V. After 10 seconds, make sure that the ALM lamp is unlit and press the "ENT" key.
 005V		Enter 5 V. After 10 seconds, make sure that the ALM lamp is unlit and press the "ENT" key.
 010V		Enter 10 V. After 10 seconds, make sure that the ALM lamp is unlit and press the "ENT" key.
 Store	 	If the calibration is correct, select "Store" with the Δ key, and if incorrect, select "Abort", respectively. Then, press the "ENT" key.

Example) Calibrating the resistance temperature detector at Channel 2

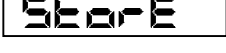Display	Operation Keys	Description
 	  	Enters the engineering mode (See the key operation in page 74). Use the Δ key to indicate " d Adj ", and press the "ENT" key.
 	 	Use the Δ key to select " rtd ", and press the "ENT" key.
 	 	Select the channel where a instrument for calibration such as dial resistor is connected, and press the "ENT" key.
 		Enter 100 Ω After 10 seconds, make sure that the ALM lamp is unlit and press the "ENT" key.
 		Enter 150 Ω After 10 seconds, make sure that the ALM lamp is unlit and press the "ENT" key.
 		Enter 300 Ω After 10 seconds, make sure that the ALM lamp is unlit and press the "ENT" key.
 	 	If the calibration is correct, select " Store " with the Δ key, and if incorrect, select " Abort ", respectively. Then, press the "ENT" key.




[Note]

 

During calibration, ALM lamp indicates following conditions below.

① When the ALM lamp is unlit,
The calibration is within the range.





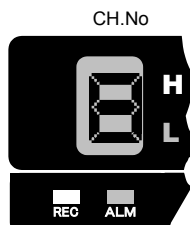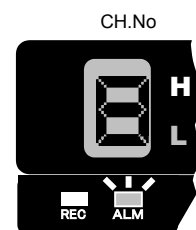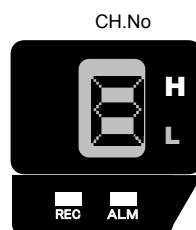














 

 


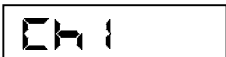
② When the ALM lamp is blinking,
Judges the input value.

③ When the ALM lamp is lit Make sure that the connection is proper and input is correct.



 






-  : The lamp is unlit.
-  : The lamp is lit.

Example) Setting the terminal temperature for Channel 1

Display	Operation Keys	Description
 	  	Enters the engineering mode (See the key operation in page 74). Use the Δ key to indicate " d Adj ", and press the "ENT" key.
 	 	Use the Δ key to select " r JC ", and press the "ENT" key.
 	 	Select the Channel to set, and press the "ENT" key.
 		Measures and indicates the current terminal temperature. Press the "ENT" key, and the display turns to temperature setting.
 	  	Use the Δ key to alter a numeral, and \triangleright key to shift a digit. Then, press the "ENT" key. See the section 9.5 "Calibration of Reference Junction Compensation" in page 99.
 	 	If the calibration is correct, select " Store " with the Δ key, and if incorrect, select " Abort ", respectively. Then, press the ENT key.

7.3 Terminating the Engineering Mode

Example) The following figure describes how to save the setting data.

Display	Operation Keys	Description
 	 	Use the Δ key to display " End ", and press the "ENT" key.
 		Use the Δ key to select " Store ", and press the "ENT" key. The settings of the engineering mode have been saved. Recording starts under the new settings.

[Note]

When terminating the Engineering mode, if you select "**End**" and turn off the power without selecting "**Store**", the settings will become invalid. Selecting "**Abort**" invalidates the settings and starts recording under the previous settings.

8. COMMUNICATIONS

8.1 General Description

8.1.1 General Description of Functions

This Recorder has the following communication functions

① Outputting the Process variable

Process variable, alarms status, etc.

② Outputting the setting value

Reading the setup data such as a range, chart feed speed, etc.

③ Inputting the setting value

Writing the setup data such as a range, chart feed speed, etc.

④ Controlling of the recorder (Partially)

Selection to print, recording start/stop and changing display etc.

For the functions ② to ④, see the separate volume Communication Command Reference Manual (sold separately). Setting the engineering mode is not possible as for communication.

8.1.2 Transmission Specifications

- | | |
|--------------------------|--|
| (1) Communication system | : Start-stop synchronous, half-duplex communications |
| (2) Connection | : One-to-one(RS-232C), One-to-N(RS-485); N = 1 to 32 |
| (3) Communication speed | : 1200, 2400, 4800, or 9600 bps |
| (4) Start bit | : 1 bit |
| (5) Stop bit | : 1 or 2 bits |
| (6) Parity | : Even, Odd, or None |
| (7) Data length | : 7 or 8 bits |

8.1.3 Data structure


(1) Character structure

In order to send 1 data (byte) in start-stop synchronous communication, character structure is as follows:

Start Bit (1) + Data Bit (7 or 8) + Parity Bit (1) + Stop Bit (1 or 2)

(2) Data format

The communication data is sent with data terminators added to multiple characters. On receiving these terminators, the recorder starts analyzing the communication data.

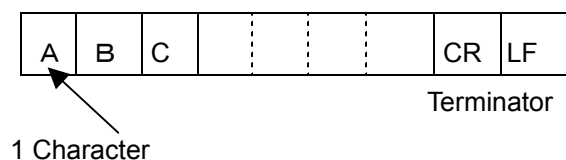

(3) Error Detection

If the recorder receives the data that has resulted in a signal error such as parity error, framing error, etc. due to the noise or hardware troubles, it will ignore that data. Consequently, a data format error results, determining that the data is not sent in the normal data format. The received function does not execute that command and the transmitted function does not reply. The data format error status can be confirmed by the ESC S command (described later).

(4) Control codes

ESC : 1B HEX(hexadecimal)

This code is used for an escape sequence such as opening/closing the link. It cannot be treated as part of the text data.

CR : 0D HEX(hexadecimal)

This data is added to the end of the text data together with the LF data. This code cannot be treated as part of the text data.


LF : 0A HEX(hexadecimal)

This data is added to the end of the text data together with the LF data. This code cannot be treated as part of the text data.

8.2 Opening/Closing the Link


To communicate with the recorder, you must establish a connection between the host computer and the recorder. In the case of one-to-N communications, it is necessary to inform each recorder to which recorder the text is being sent. If a link open command is sent to multiple recorders through their send function, all the recorders, which have received the command, will send and cannot receive the normal data.

8.2.1 Open Command

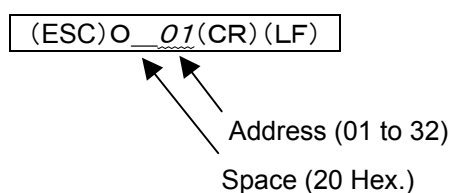

To communicate the recorder, host computer must issue this command and memorize that it has issued this command.

8.2.2 Close Command

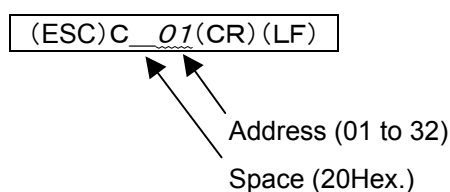

If it is required that the data is sent to the recorders other than the open command is issued, this close command must be issued to those recorders open command was issued.

8.3 Outputting the Process Variable

8.3.1 Specifying the Process Variable Output

`TS 0(CR) (LF)`

Once this command is received, the recorder transfers the process variable to the transmission buffer, when the (ESC) T command is received.

8.3.2 Updating the Data

`(ESC) T(CR) (LF)`

Once this command is received, the recorder transfers the update process variable data to the transmission buffer.

8.3.3 Specifying the Process Variable Data Output Order (At BINARY Mode Output)

`BO 0(CR) (LF)` Outputs start from the upper byte.

`BO 1(CR) (LF)` Outputs start from the lower byte.

The recorder outputs starting from the lower byte, unless specified.

8.3.4 Outputting the Data

`FM 0, S__CH, E__CH` Specifies the ASCII mode output.

`FM 1, S__CH, E__CH` Specifies the BINARY mode output.

S__CH : Output start channel 01 to 02

E__CH : Output end channel 01 to 02

※ When the number of channel is 1, specify (S_CH) = (E_CH).

8.3.5 Process Variable Data Transmission Format (ASCII)

DATE (YY) (MM) (DD) (CR) (LF)	Date
-------------------------------	------

Year Month Day

TIME (HH) (MM) (SS) (CR) (LF)	Time
-------------------------------	------

Hour Minute Second

(DS1) (DS2) (ALM1) (ALM2) (ALM3) (ALM4) (UNIT1 to 6) (CHNo.), (DATA) (CR) (LF)

(1)DS 1 : Data information 1 (1 byte)

N: Normal, D: Difference computation data, S: Sum computation data,

M: Average computation data, R: Square root computation data, C: Decade computation data,

O: Over range (Data = ± 99999), S: Skip (All the data is space)

(2)DS 2 : Data information 2 (1 byte)

E : Final data

__ (Space) : Other data

(3)ALM 1 to 4 : Alarm information (1 byte each, 4 bytes in total)

H: High limit alarm, L: Low limit alarm,

__ (Space) : Alarm OFF or alarm setting OFF.

(4)UNIT 1 to 6 : UNIT (6 bytes)

Returns the setting unit in terms of code. (When sending the 7-bit data, the higher 1 bit is missing.)

(5)CHNo. : Returns the setting unit in terms of code. (2bytes)

01 to 02

(6)DATA : Process variable

Sign(1 byte) : "+" or "-"

Data mantissa section (6 bytes) : 00000 to 99999

Data exponent section (4 bytes) : E (Sign: 1 byte) (Multiplier: 2 bytes)

<Example> +99999E-02

8.3.6 Process Variable Transmission Format (BINARY)

Output bytes	Date and time	Process variable 1	Process variable 6
--------------	---------------	--------------------	--------------------

Output bytes (2 bytes) : $5 \times n$ (specified number of channels) + 6

(1) Date and time (6 bytes):

①	②	③	④	⑤	⑥
---	---	---	---	---	---

① Year : 00H to 63H (00H for the year 2000)

② Mouth : 01H to 0CH

③ Day : 01H to 1FH

④ Hour : 00H to 17H (24-hour system)

⑤ Minute : 00H to 3BH

⑥ Second : 00H to 3BH

(2) Process variable (5 bytes)

CHNo.	A2	A1	A4	A3	DATA 1	DATA 2
-------	----	----	----	----	--------	--------

CHNo. (1 BYTE) : Channel number

01H to 02H


A1 to A4 (2 BYTE) : Alarm type activated at each alarm level.

1 : High limit alarm

2 : Low limit alarm

0 : Alarm OFF or alarm setting OFF

(Example) Bit Sequence

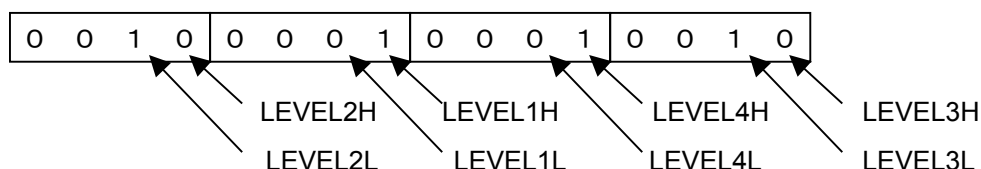

LEVELxH : High limit alarm bit at the alarm level x

LEVELxL : Low limit alarm bit at the alarm level x

DATA 1, 2 (2 BYTE) : Process variable

- 32000 ~ + 32000 (2-byte hexadecimal data)

The higher and lower bytes can be reversed by the BO command.

If Skip is specified, 8080H will be output.

[Note]

- Outputs a data over -32000 to +32000 as the overflow. An overflow 7E7E is output on plus side, and 8181 is output on minus side. (Excluding the Decade channel.)
- Data output of the Decade channel is as follows regardless of the BO command. The upper byte outputs a mantissa (10 to 99). The lower byte outputs an exponent (-19 to 19). A decimal point position is fixed on 1 digit.

8.4 Outputting the Unit and Decimal Point Position Data

8.4.1 Specifying the Unit and Decimal Point Position Data Output

`TS2(CR)(LF)`

Once this command is received, the recorder transfers the unit and decimal point position data to the transmission buffer, when the (ESC) T command is received.

8.4.2 Updating the Data

`(ESC)T(CR)(LF)`

Once this command is received, the recorder transfers the update unit and decimal point position data to the transmission buffer.

8.4.3 Outputting the Data

`LF, S__CH, E__CH`

S__CH : Output start channel 01 to 02

E__CH : Output end channel 01 to 02

※ When the number of channel is 1, specify (S_CH) = (E_CH). __ (Space)

8.4.4 Data Format

`(DS1)(DS2)(CHNo.)(UNIT1~6)(DP)`

(1) DS1 : Data information 1 (1 byte)

N : Normal

D : Difference computation data

S : Sum computation data

M : Average computation data

R : Square root computation data

C : Decade computation data,

O : Over range (Data = ± 99999)

S : Skip (All the data is space)

(2) DS2 : Data information 2 (1 byte)

E : Final data,

__ (Space) : Other data

(3) CHNo. : Channel number (2bytes); 01 to 02

(4) UNIT 1 to 6: UNIT

Returns the setting unit in terms of code. (When sending the 7-bit data, the higher 1 bit is missing.)

(5) DP: Decimal point information (1 byte); 0 to 4

[Note]

By the range setting, a decimal point position may differ from the one on a display screen.

8.5 Outputting the Status

If the open-link recorder has a data error on its link, it will save the error as a communication error in the internal status area. The (ESC S) command reads this status. Issuing this command, the on-going error is cleared.

8.5.1 Status Output Command

ESC S(CR) (LF)

Receiving this command outputs the status for the command received so far.

8.5.2 Status Output

E R X X CR LF

XX : 00~19

Table 8.1 Status output list

Status output	Status factor	Status factor		
		A/D END	Syntax error	Running out of chart paper
ER 00 C _R L _F				
ER 01 C _R L _F		○		
ER 02 C _R L _F			○	
ER 03 C _R L _F		○	○	
ER 04 C _R L _F				
ER 05 C _R L _F		○		
ER 16 C _R L _F				○
ER 17 C _R L _F		○		○
ER 18 C _R L _F			○	○
ER 19 C _R L _F		○	○	○


○ : The factor from which status is ENABLE.

A/D END : When carrying out AD conversion end, it occurs.

Syntax error : It occurs during a communication error or a command error occurs.

Running out of chart paper : When Running out of chart paper is found, it occurs.
(When running out of chart paper option has been attached)

8.6 Data Reception Example

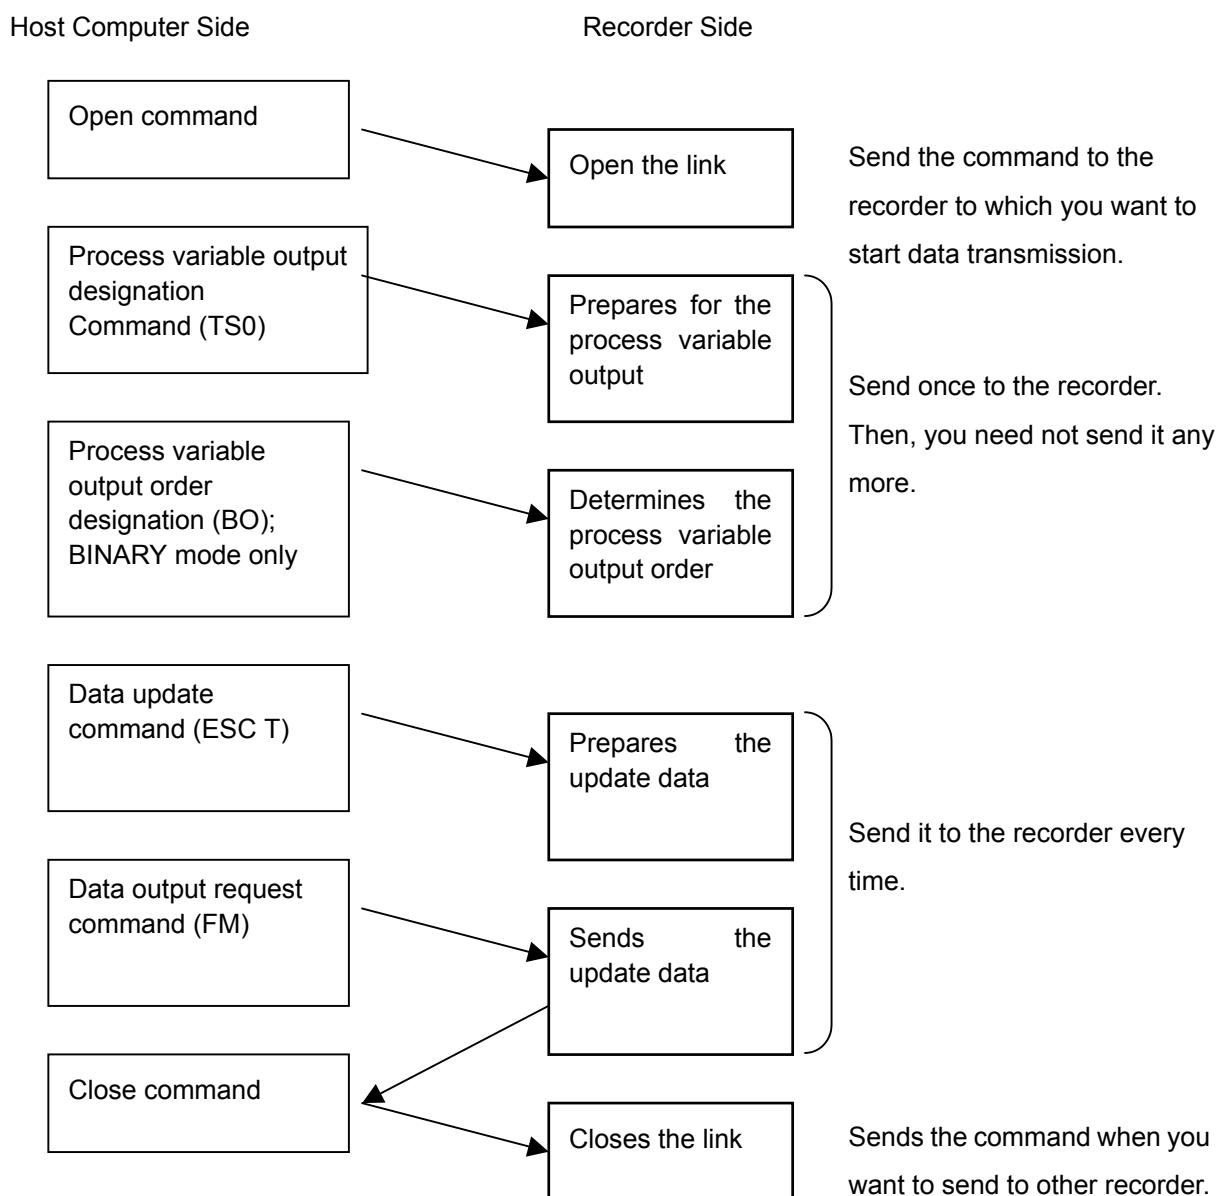

9. MAINTENANCE

Inspect the following items in order to use this instrument effectively.

- Inspection
- Cleaning
- Replacing Consumables for the new one
- Adjustment of the Pen Recording Position
- Calibration

9.1 Inspection

Inspect the condition of operation periodically to use it effectively.

When a defect is found, see Chapter 10 “Troubleshooting”.

- ◆ Is pen recording deflected?
- ◆ Is recording indication done properly?
 - Are there any big errors in indicated values or pen recording position?
 - Is there improper pen recording?
 - Are there any blurred pen recording or printout?
 - Is printout proper?
- ◆ Is the chart paper fed properly?
 - Is the chart paper fed properly?
 - Aren't the feed holes in the chart paper torn off or broken?
 - Is the chart speed normal?
- ◆ Is there any abnormal sound?

9.2 Cleaning

Many parts of this instrument are made of plastic. Use a dry cloth to wipe the parts to keep them clean.

[Note]

Do not use any organic solvent.

9.3 Replacing Consumables

Replace consumables according to the following the list.

No.	Name	Type	Period	Remarks	Quantity
1	Chart paper	H-10100	33 days	When chart feed speed is 20 mm/h	1
2	Ribbon cassette	HPSR001H0002C	6 months	When chart feed speed is 20 mm/h	1
3	Cartridge pen	WPSR196A000001A	2 months	1 pen, about 2km on beeline	1
4	Cartridge pen	WPSR196A000002A	2 months	2 pen, about 2km on beeline	1

[Note]

- ① When recording with a ribbon, a dot printing color phases out. To ensure clear recording, replace the ribbon cassette as soon as possible.
- ② Use the ribbon cassette within one year after its purchase. Due to evaporation of ink, a printing color phases out as time goes on.
- ③ When tracing faint before the changing period, change the cartridge pen ahead of the period.

9.4 Adjusting the Pen Recording Position (Point Calibration)

The following describes how to adjust a pen position on the chart paper.

You are well advised to adjust it annually in order to keep recording accurate.

How to Adjust

It is unnecessary to enter the reference. Leave the recorder as it is and adjust it according to the instructions in 7.2.11 Point calibration. (See Page 86)

9.5 Calibration (Data Calibration)

Calibrate a process variable input annually in order to keep measurement accurate.

[Note]


Prior to calibration, warm up for 30 minutes or more after power-on.

Devices required to calibrate

- Precision voltage(current) generator (Jointly use a digital voltmeter with accuracy of $\pm 0.02\%$ or less as required)
- Precision dial resistor

(1) Calibration of Voltage

Conduct calibration in the case of voltage, current or thermocouple input. For thermocouple input, calibrate reference junction compensation together.

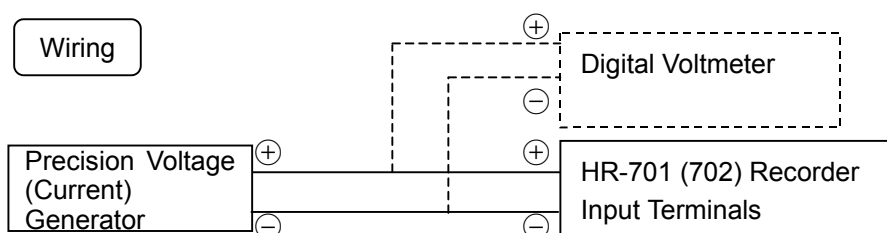


Calibrate the voltage according to the instructions in 7.2.12 Data Calibration (Calibration of the voltage). (See Page 87)

[Note]

- ① Calibrate at every channel.
- ② When a shunt resistor is attached to the input terminal block in the case of current input, detach it prior to calibration.

(2) Calibration of Resistance Temperature Detector (RTD)

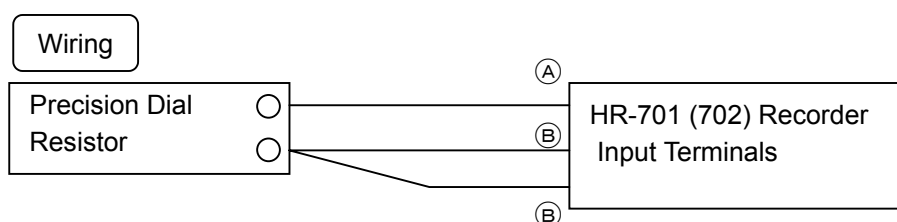


Calibrate RTD according to the instructions in 7.2.12 Data Calibration (Calibration of the resistance temperature detector). (See Page 88)

[Note]

The dispersion of resistance for each wire must be $6\text{m}\Omega$ or less.

(3) Calibration of Reference Junction Compensation

Calibrate the reference junction compensation in the case of thermocouple input.

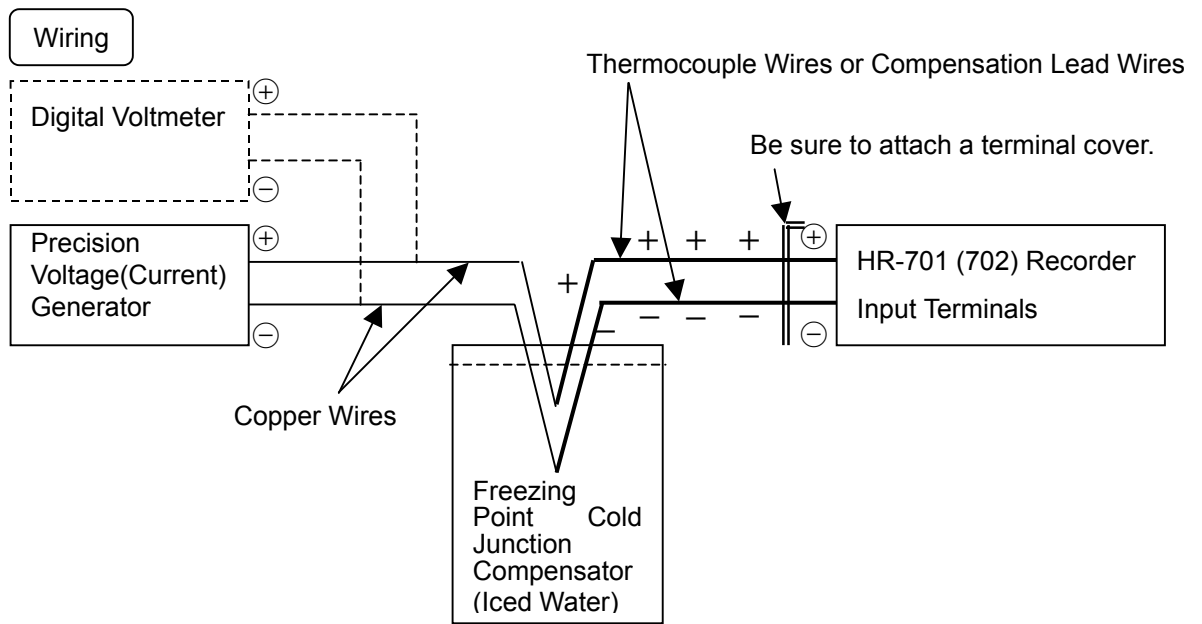

Calibration

Example) Connect the input to Channel 1 and set the calibration when the thermocouple input value (RMC measurement) is -0.5 (input 0°C), the measured RJC temperature is 24.5°C.

- 1) Check the Process variable when impressing $0.000\text{mV} \pm 2 \mu\text{V}$ to Channel 1 by the voltage generator beforehand. (In this example, it is -0.5°C.)
- 2) Check the terminal temperature of Channel 1 at the data calibration in the engineering mode (Reference junction compensation). (In this example, it is 24.5°C.)
- 3) Set the value which is added the difference (0.5°C) with true value as the right RJC temperature.

$$[24.5 - (-0.5) = 25.0^\circ\text{C}]$$

Calibrate RJC according to the instructions in 7.2.12 Data Calibration (Calibration of reference junction compensation). (See Page 89)


[Note]

- ① This calibration is conducted when compensation by the recorder's built-in temperature sensing element (INT: internal compensation) is selected as the reference junction compensation method.
- ② Wire to Channels 1 and 2 to calibrate.
- ③ After wiring, attach the terminal covers and wait for 5 minutes or more, then, calibrate it.


10. TROUBLESHOOTING

10.1 Troubleshooting


10.1.1 Trouble Items

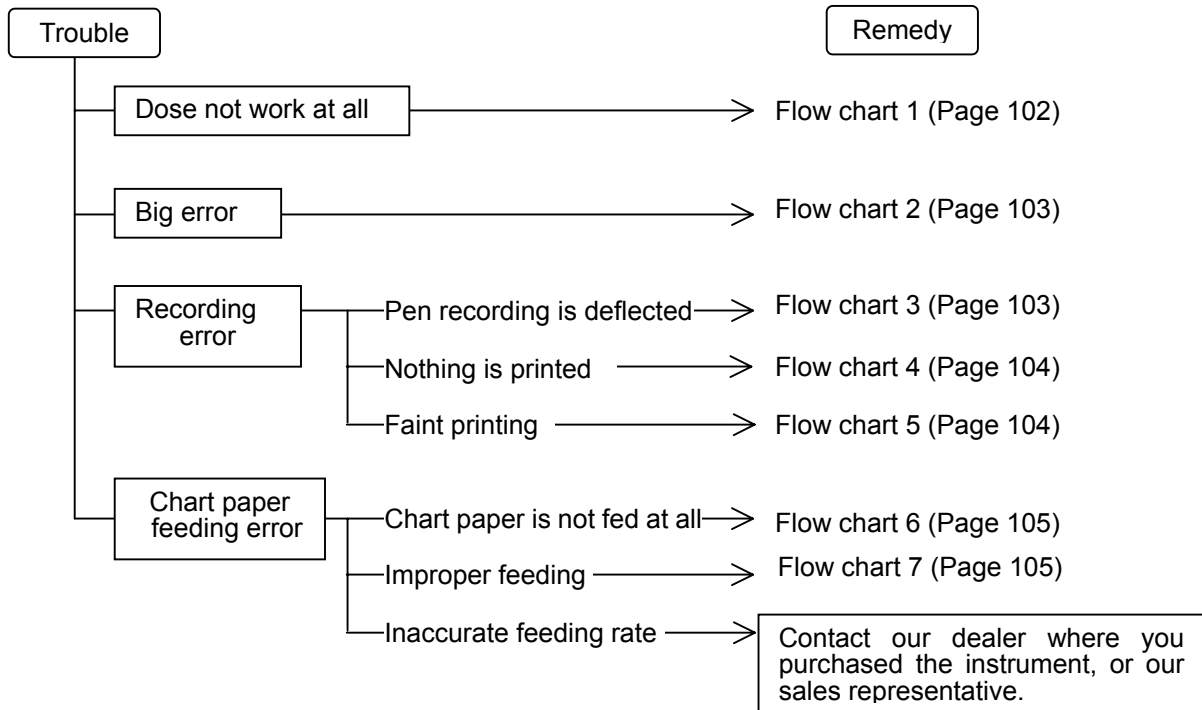


10.1.2 When the Recorder Dose not Work at All

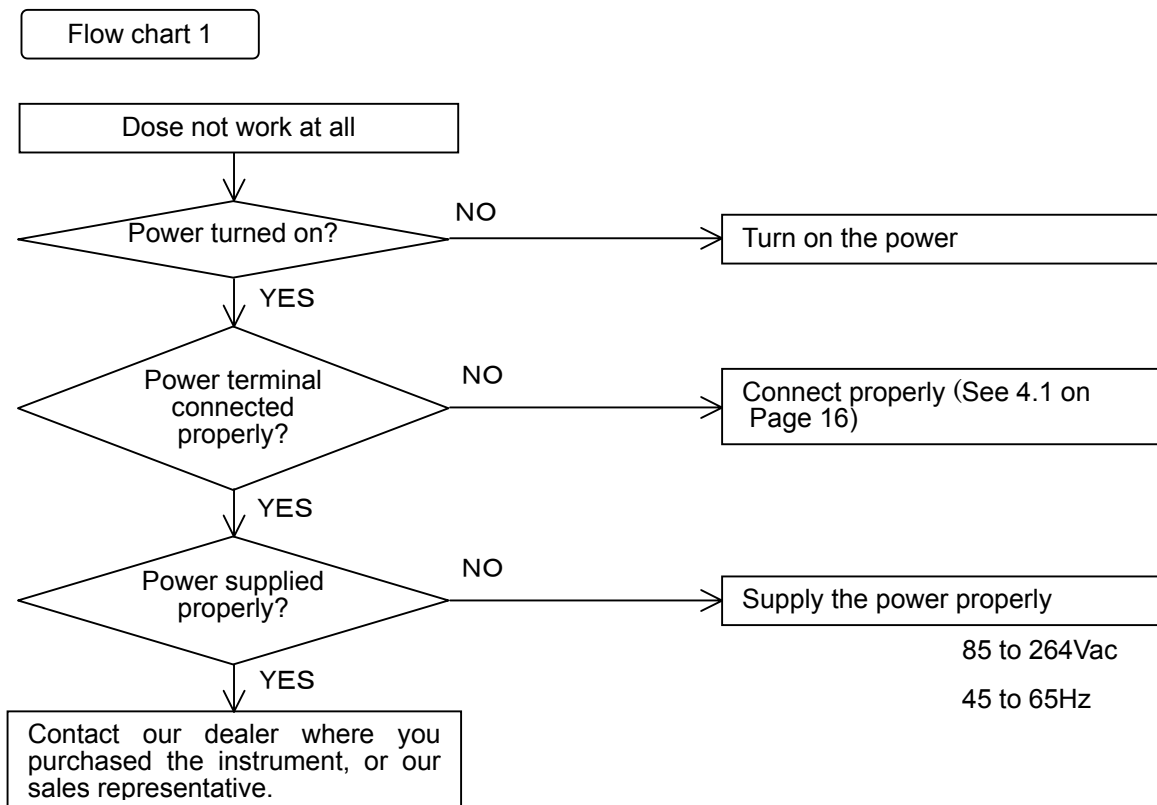


10.1.3 When There is a Big Error

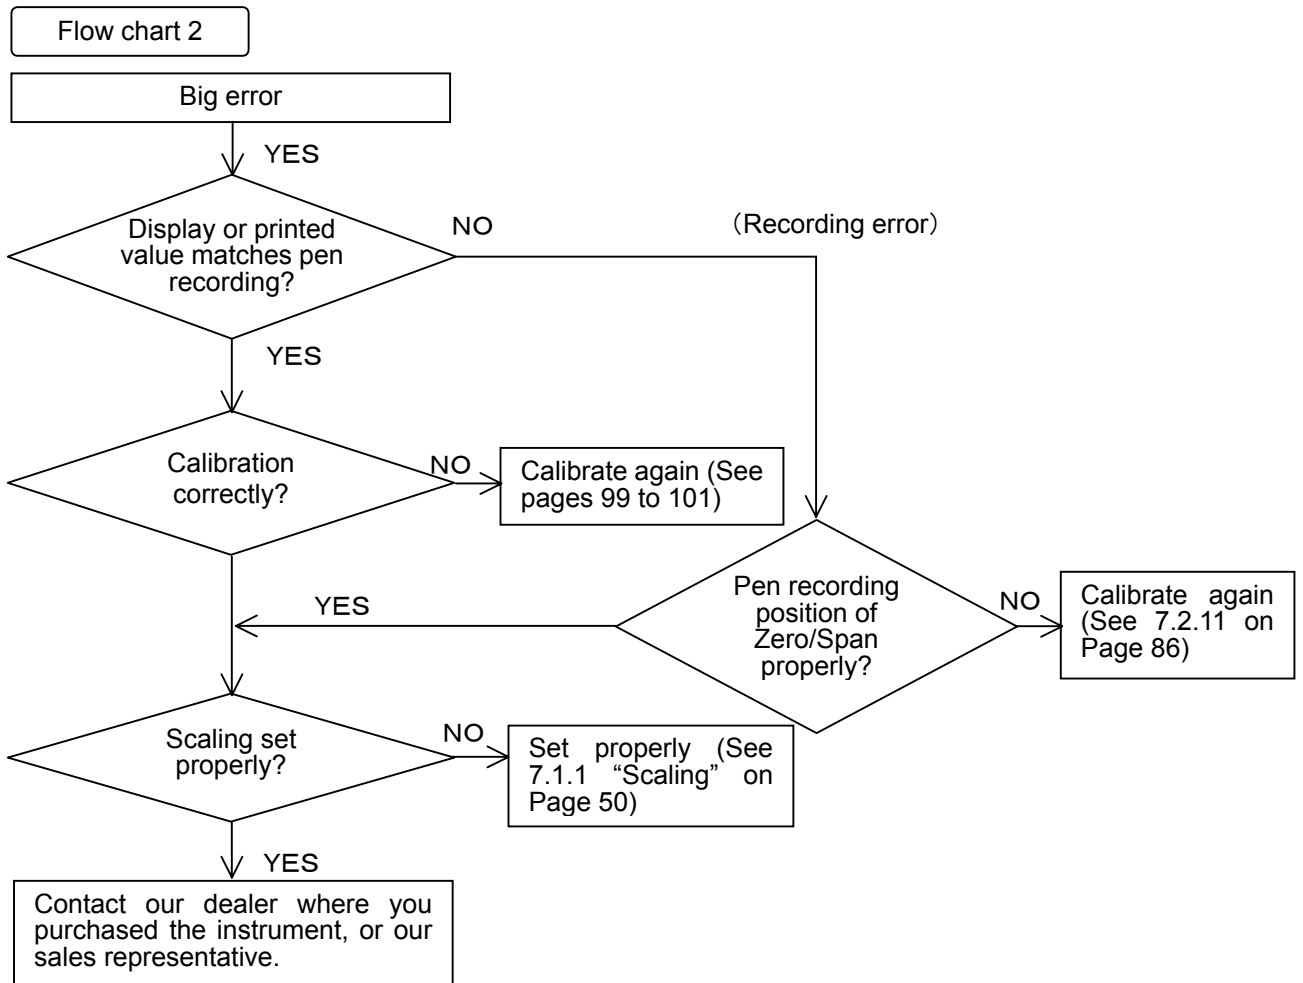


10.1.4 When the Pen Recording is Deflected

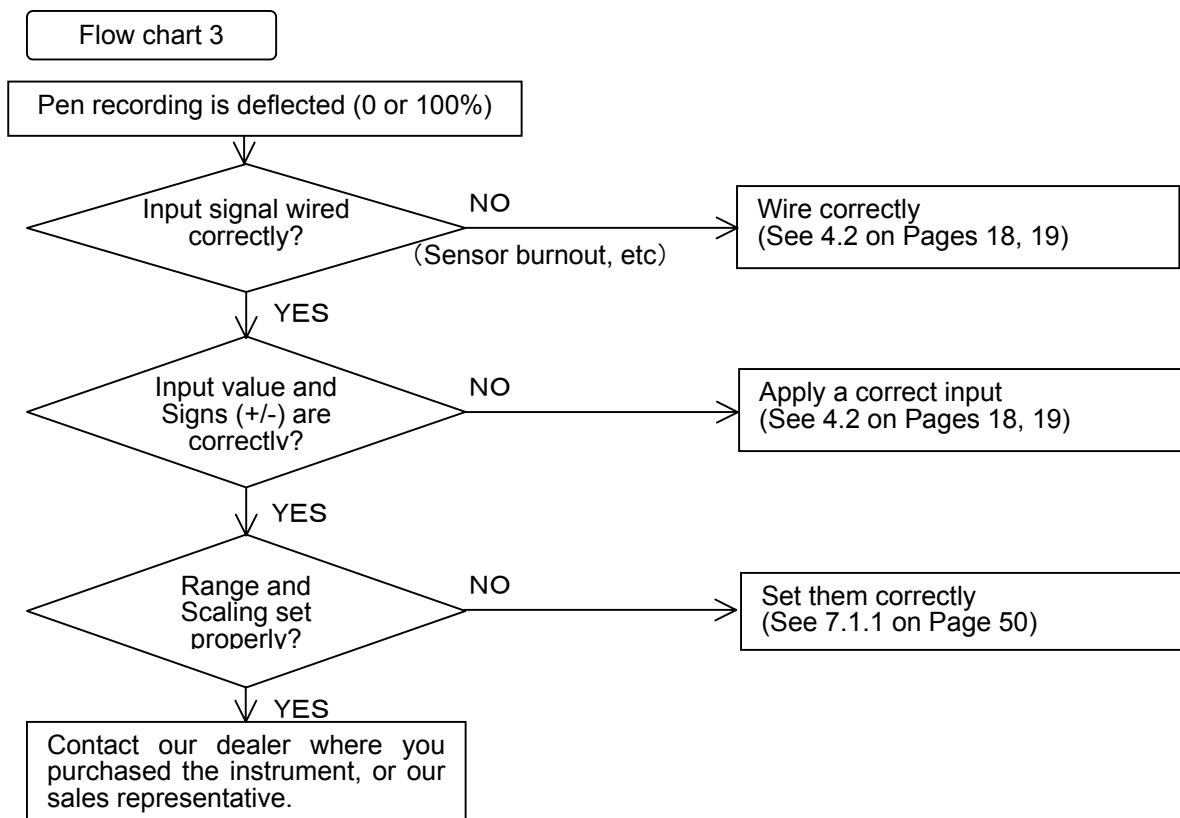


10.1.5 When Prints Nothing

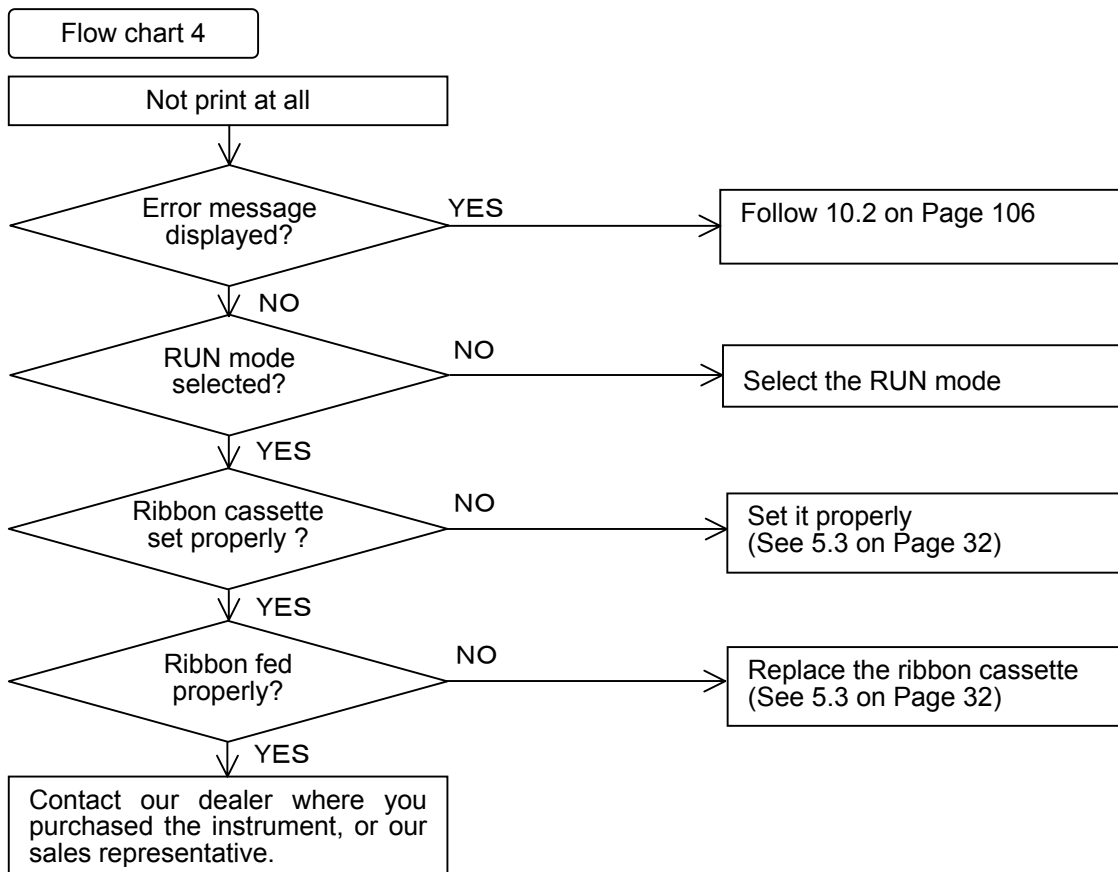


10.1.6 When Printing is Faint

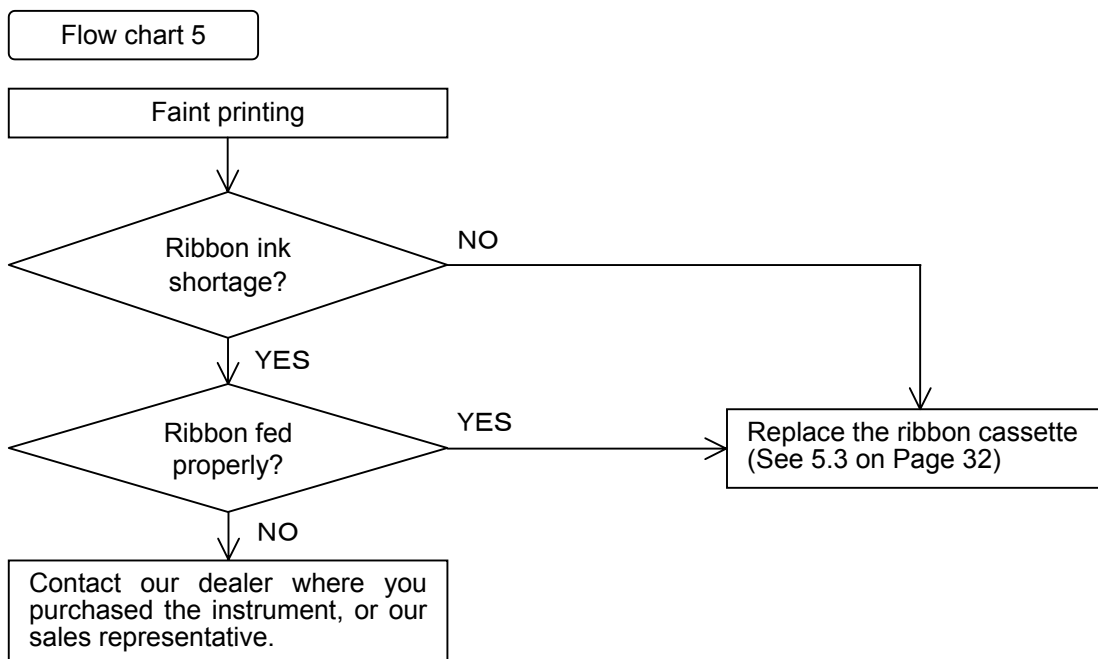

10.1.7 When the Chart Paper is not Fed at All

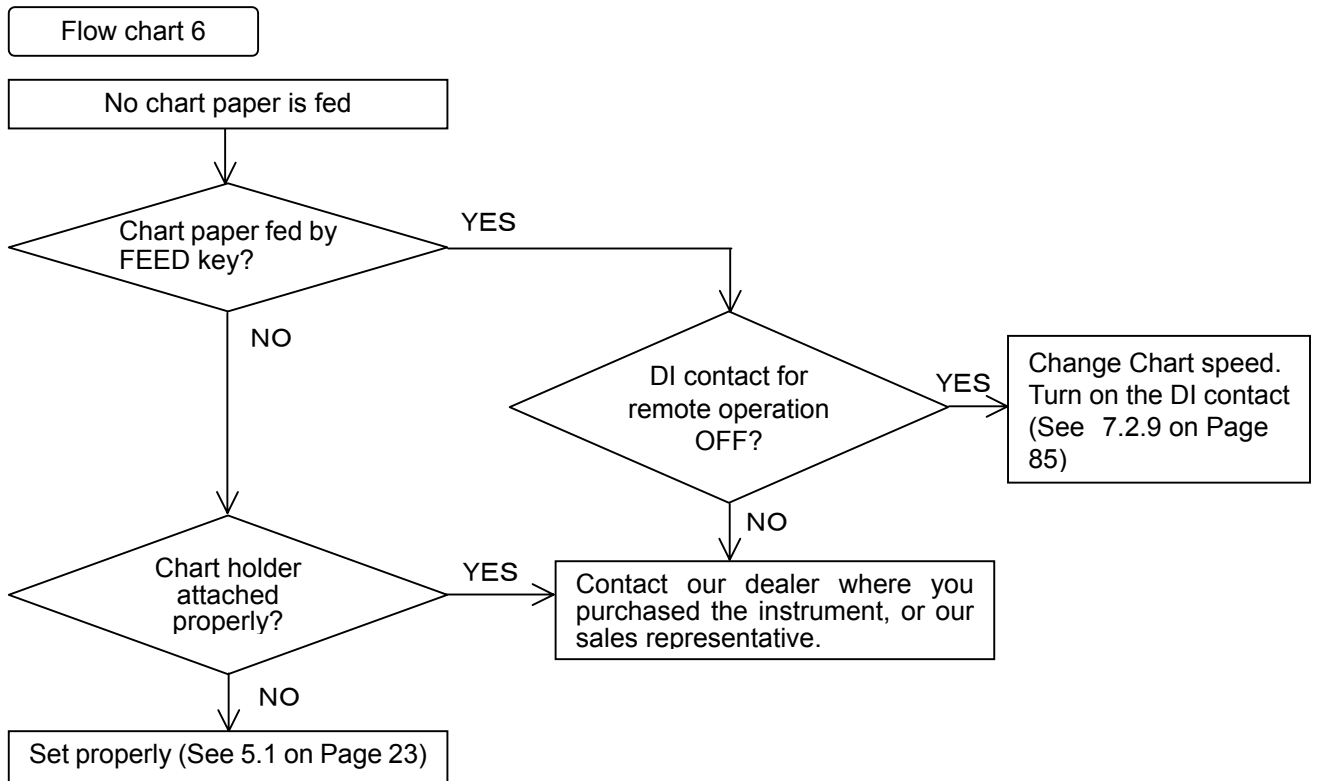

10.1.8 When the Chart Paper is not Fed Properly

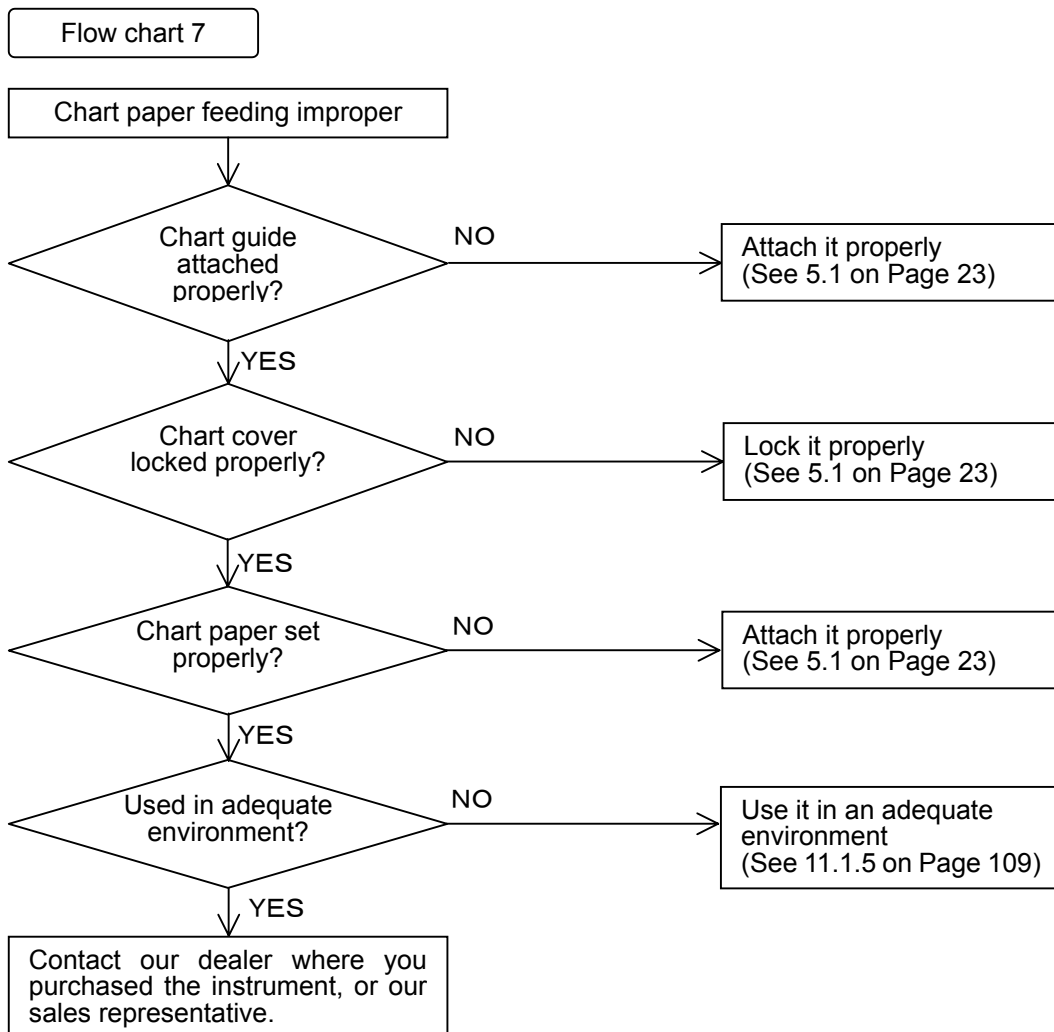

10.2 Self Diagnosis Function (ERROR)

This instrument always diagnoses itself on the items listed in the Table 10.1 below. When an error is found in the self diagnostics results, a relevant error number is displayed.

10.2.1 Self Diagnosis Items

Table 10.1 List of Diagnosis Items

Type	Error message	Parts	Diagnostic	Remedy
Hard ware error	E Err01	Zero point sensor	Zero point position of servomotor cannot be detected.	Contact our dealer where you purchased the instrument or our sales representative.
	E Err02	ADC	conversion end error, Initializing error	
	E Err03	IC for clock	The clock battery is used up[Note1]	
	E Err04	WDT	Watchdog timer error	
	E Err05	EEP WRITE	Non-volatile memory Writing error	
	E Err06	EEP READ1	Non-volatile memory Reading error (Setup data)	
	E Err07	EEP READ2	Non-volatile memory Reading error (Engineering data)	
	E Err08	EEP READ3	Non-volatile memory Reading error (ADC Calibration data)	
Operation error	E Err21	Area error	Input value is beyond the setting range.	Set properly
	E Err22	Time error	Clock time setting error	
	E Err23	Setting range error	Setting the channel (CH1) which cannot set the sum/difference/average operation.	
	E Err24	Area error	Span L \geq Span R	
	E Err25	Area error	Scale L \geq Scale R	
	E Err26	Area error	Zone L \geq Zone R or Zone R – Zone L is less than 5mm.	
	E Err27	Reference channel setting error	The reference channel range of the sum/difference/average operation is except Volt, TC, RTD and SCALE.	
	E Err28	All channels skip error	Setting the all channels to Skip.	
Other	E Err41	Other	Not calibrating with the specified input.	Calibrate it with correct input.

[Note1] The battery life is supposed to last approx. 10 years but sometimes depends on the environment it is used.

10.2.2 Error Display

- When multiple errors occur, their error serial numbers are displayed automatically.
- When an error is recovered, an error display can be cancelled by inputting the “REC” key.



CAUTION

While an error is indicated, Auto, Manual and Data/Time are not indicated.

11. SPECIFICATIONS

11.1 Common Specifications

11.1.1 Input signal

DC voltage	: ± 10 , 0 to 20, 0 to 50, ± 200 mVdc, ± 1 , 0 to 5, ± 10 Vdc
Thermocouple	: B, R, S, K, E, J, T, C, Au-Fe, N, PR40-20, PL II, U, L
Resistance temperature detector	: Pt100, JPt100
DC current	: 4 to 20mA _{dc}

(External shunt resistor: 250 Ω <sold separately: HMSU3081A11>)

11.1.2 Performance and Characteristics

Digital indication accuracy rating	: See 11.2.1
Dead band	: Within 0.2%
Input impedance	: 10M Ω min. in mV, TC input (without burnout) 200k Ω min. in mV, TC input (with burnout) 1M Ω min. in voltage input 250 Ω (shunt resistance : external < sold separately: HMSU3081A11> in mA input
Allowable signal source resistance	: 10k Ω max. in mV, TC input (without burnout) 100 Ω max. in mV, TC input (with burnout) 1k Ω max. in Voltage input 10 Ω max.(per line) in Resistance temperature detector input
Normal mode reduction ratio	: 60dB min.(50/60 \pm 0.1Hz)
Common mode reduction ratio	: 140dB min.(50/60 \pm 0.1Hz)
Isolation resistance	: 0.5kVdc 20M Ω min. between the each terminal and grounding terminal
Withstand Voltage	: 1.5kVac for 1 minute between the power terminal and grounding terminal : 0.5kVac for 1 minute between the input terminal and grounding terminal : 0.2kVac for 1 minute between the input terminals Interchannel maximum noise voltage: 200 V AC at 50/60 Hz
Vibration resistance	: 10 to 60Hz 1m/s ² max.
Shock resistance	: 2m/s ² max.
Clock precision	: ± 50 ppm max.
Chart feed accuracy	: $\pm 0.1\%$ max.

11.1.3 Structure

Mounting : Panel mount(vertical panel)
Allowable backward inclination : Within 30°
Material(Color) : Case ; Polycarbonate(Black), Glass 10% UL94-V2
Door ; Polycarbonate UL94-V2(Clear)
; Dust-proof, drip-proof (Based on IEC529-IP65)

11.1.4 Power Source

Rated supply voltage range : 100 to 240Vac
Working supply voltage range : 85 to 264Vac
Rated power frequency : 50/60Hz
Working frequency range : 45 to 65Hz

Table 11.1 Power consumption

	100Vac	Max. power consumption
1 pen	About 20VA	About 30VA
2 pen	About 25VA	About 35VA

11.1.5 Normal Operating Conditions

Ambient temperature : 0 to 50°C
Ambient humidity : 20 to 80%RH
Supply voltage : 85 to 264Vac
Supply frequency : 45 to 65Hz
Vibration : 10 to 60Hz 0.2m/s² max.
Shock : Unacceptable
Magnetic field : 400A/m max. (DC and AC: 50/60Hz)
Noise : Normal mode(50/60Hz)
DC current, Thermocouple; Peak value lower than the span width
of the measurement range
Resistance temperature detector ; 50mV max.
Common mode (50/60Hz) ; 250Vac max.
Interchannel maximum noise voltage: 200 Vac at 50/60 Hz
Posture : Allowable backward inclination : within 30°, Right-and-left level
Warming up time : 30 minutes min. from the time of a power-on

11.1.6 Alarm Output (Option : LH3)

Number of output	:3 points (Built-in option, normally open)
Alarm types	:2 types(H, L), total 4 levels/channel
Contact point capacity	:250Vac, 3A max. (Resistive load) 30Vdc, 3A max. (Resistive load) 125Vdc, 0.5A max. (Resistive load)
Hysteresis width	:0.5%
Setting accuracy	:Digital display accuracy

11.1.7 Safety Standard and EMI Standard

Electrical safety	:IEC1010-1,UL3101-1 Installation category II and pollution degree 2.
Emissions	:EN55011 Group1 Class A
Immunity	:EN50082-2

11.1.8 DI Function (Option : RE1)

A maximum of 3 points can be set.

11.1.9 Running out of paper Detecting Function (Option : FL)

Detects the Running out of paper and outputs it to an alarm.

11.2 Standard Setting Specifications

11.2.1 Measurement Range

The arbitrary setup is possible by the front key operation.

A digital accuracy rating is as Table 11.2 at Reference operating conditions. It is shown below.

Reference operating conditions : Ambient temperature	; 23 ±2°C
Ambient humidity	; 55 ±10%RH
Power source voltage	; 85 to 264Vac
Electric wave frequency	; 50/60Hz ±1%
Warming up time	; 30 minutes min.

The performance in the state where there is no vibration and shock.

Terminal block reference junction compensation accuracy is not included in the digital accuracy rating.

Terminal block reference junction compensation accuracy is shown below.

- ◆ B, R, S, PR40-20, Au-Fe : ±1°C
- ◆ K, E, J, T, C, N, PL II, U, L : ±0.5°C

Table 11.2 Measurement Range

Type	RANGE	Measurement range	Measurement		
			Indication (Digital)		Recording (Analog)
			Accuracy	Max. resolution	Accuracy
DC voltage DC current input		-10 to 10mV	±(0.2% of rdg + 3digits)	10 μ V	Digital display accuracy ±(0.3% of span)
		0 to 20mV	±(0.2% of rdg + 3digits)	10 μ V	
		0 to 50mV	±(0.2% of rdg + 2digits)	10 μ V	
		-200 to 200mV	±(0.2% of rdg + 3digits)	100 μ V	
		-1 to 1V	±(0.1% of rdg + 3digits)	1mV	
		0 to 5V	±(0.2% of rdg + 2digits)	1mV	
		-10 to 10V	±(0.3% of rdg + 3digits)	10mV	
		4 to 20mA	±(0.2% of rdg + 2digits)	0.01mA	
Thermocouple	B	0.0 to 1820.0°C	±(0.15% of rdg + 1°C) 400 to 600°C, ±2°C An accuracy is not guaranteed within a range of 0 to less than 400°C	0.1°C	Digital display accuracy ±(0.3% of span)
		32.0 to 3308.0°F	±(0.15% of rdg + 1.8°F) 752 to 1112°C, ±3.6°F An accuracy is not guaranteed within a range of 32 to less than 752°F		
	R1	0.0 to 1760.0°C	±(0.15% of rdg + 1°C) ※0 to 100°C, ±3.7°C 100 to 300°C, ±1.5°C		
		32.0 to 3200.0°F	±(0.15% of rdg + 1.8°F) ※32 to 212°C, ±6.7°F 212 to 572°F, ±2.7°F		

Type	RANGE	Measurement range	Measurement		
			Indication (Digital)		Recording (Analog)
			Accuracy	Max. resolution	Accuracy
Thermocouple	R2	0.0 to 1200.0°C	±(0.15% of rdg + 0.8°C) ※0 to 100°C, ±3.7°C 100 to 300°C, ±1.5°C	0.1°C	Digital display accuracy ±(0.3% of span)
		32.0 to 2192.0°F	±(0.15% of rdg + 1.44°F) ※32 to 212°F, ±6.7°F 212 to 572°F, ±2.7°F		
	S	0.0 to 1760.0°C	±(0.15% of rdg + 1°C) ※0 to 100°C, ±3.7°C 100 to 300°C, ±1.5°C		
		32.0 to 3200.0°F	±(0.15% of rdg + 1.8°F) ※32 to 212°F, ±6.7°F 212 to 572°F, ±2.7°F		
	K1	-200.0 to 1370.0°C	±(0.15% of rdg + 0.7°C) ※-200 to -100°C, ±(0.15% of rdg + 1°C)		
		-328.0 to 2498.0°F	±(0.15% of rdg + 1.3°F) ※-328 to -148°F, ±(0.15% of rdg + 1.8°F)		
	K2	-200.0 to 600.0°C	±(0.15% of rdg + 0.4°C) ※-200 to -100°C, ±(0.15% of rdg + 1°C)		
		-328.0 to 1112.0°F	±(0.15% of rdg + 0.7°F) ※-328 to -148°F, ±(0.15% of rdg + 1.8°F)		
	K3	-200.0 to 300.0°C	±(0.15% of rdg + 0.3°C) ※-200 to -100°C, ±(0.15% of rdg + 1°C)		
		-328.0 to 572.0°F	±(0.15% of rdg + 0.5°F) ※-328 to -148°F, ±(0.15% of rdg + 1.8°F)		
	E1	-200.0 to 800.0°C	±(0.15% of rdg + 0.5°C)		
		-328.0 to 1472.0°F	±(0.15% of rdg + 0.9°F)		
	E2	-200.0 to 300.0°C	±(0.15% of rdg + 0.4°C)		
		-328.0 to 572.0°F	±(0.15% of rdg + 0.7°F)		
	E3	-200.0 to 150.0°C	±(0.15% of rdg + 0.3°C)		
		-328.0 to 302.0°F	±(0.15% of rdg + 0.5°F)		
	J1	-200.0 to 1100.0°C	±(0.15% of rdg + 0.5°C) ※-200 to -100°C, ±(0.15% of rdg + 0.7°C)		
		-328.0 to 2012.0°F	±(0.15% of rdg + 0.9°F) ※-328 to -1480°F, ±(0.15% of rdg + 1.3°F)		
	J2	-200.0 to 400.0°C	±(0.15% of rdg + 0.4°C) ※-200 to -100°C, ±(0.15% of rdg + 0.7°C)		
		-328.0 to 752.0°F	±(0.15% of rdg + 0.7°F) ※-328 to -1480°F, ±(0.15% of rdg + 1.3°F)		
	J3	-200.0 to 200.0°C	±(0.15% of rdg + 0.3°C) ※-200 to -100°C, ±(0.15% of rdg + 0.7°C)		
		-328.0 to 360.0°F	±(0.15% of rdg + 0.5°F) ※-328 to -1480°F, ±(0.15% of rdg + 1.3°F)		

Type	RANGE	Measurement range	Measurement		
			Indication (Digital)		Recording (Analog)
			Accuracy	Max. resolution	Accuracy
Thermocouple	T1	-200.0 to 400.0°C	±(0.15% of rdg + 0.5°C) ※-200 to -100°C, ±(0.15% of rdg + 0.7°C)	0.1°C	Digital display accuracy ±(0.3% of span)
		-328.0 to 752.0°F	±(0.15% of rdg + 0.9°F) ※-328 to -1480°F, ±(0.15% of rdg + 1.3°F)		
	T2	-200.0 to 200.0°C	±(0.15% of rdg + 0.4°C) ※-200 to -100°C, ±(0.15% of rdg + 0.7°C)		
		-328.0 to 392.0°F	±(0.15% of rdg + 0.7°F) ※-328 to -148°F, ±(0.15% of rdg + 1.3°F)		
	C	0.0 to 2320.0°C	±(0.15% of rdg + 1°C)		
		32.0 to 4208.0°F	±(0.15% of rdg + 1.8°F)		
	Au-Fe	1.0 to 300.0K	±(0.15% of rdg + 1K) ※1 to 20 K, ±2.4 K	0.1K	
	N	0.0 to 1300.0°C	±(0.15% of rdg + 0.7°C)	0.1°C	
		32.0 to 2372.0°F	±(0.15% of rdg + 1.3°F)		
	PR40-20	0.0 to 1880.0°C	±(0.15% of rdg + 1°C) ※0 to 300°C, ±37.6°C 300 to 800°C, ±18.8°C		
		32.0 to 3416.0°F	±(0.15% of rdg + 1.8°F) ※32 to 572°F, ±67.7°F 572 to 1472°F, ±33.8°F		
	PL II	0.0 to 1390.0°C	±(0.15% of rdg + 0.7°C)		
		32.0 to 2534.0°F	±(0.15% of rdg + 1.3°F)		
	U	-200.0 to 400.0°C	±(0.15% of rdg + 0.5°C) ※-200 to -100°C, ±(0.15% of rdg + 0.7°C)		
		-328.0 to 752.0°F	±(0.15% of rdg + 0.9°F) ※-328 to -148°F, ±(0.15% of rdg + 1.3°F)		
	L	-200.0 to 900.0°C	±(0.15% of rdg + 0.5°C) ※-200 to -100°C, ±(0.15% of rdg + 0.7°C)		
		-328.0 to 1652.0°F	±(0.15% of rdg + 0.9°F) ※-328 to -148°F, ±(0.15% of rdg + 1.3°F)		
Resistance temperature detector	Pt100-1	-200.0 to 650.0°C	±(0.15% of rdg + 0.3°C)		
		-328.0 to 1202.0°F	±(0.15% of rdg + 0.6°F)		
	Pt100-2	-200.0 to 200.0°C	±(0.15% of rdg + 0.2°C)		
		-328.0 to 392.0°F	±(0.15% of rdg + 0.4°F)		
	JPt100-1	-200.0 to 630.0°C	±(0.15% of rdg + 0.3°C)		
		-328.0 to 1166.0°F	±(0.15% of rdg + 0.6°F)		
JPt100-2	-200.0 to 200.0°C	±(0.15% of rdg + 0.2°C)			
	-328.0 to 392.0°F	±(0.15% of rdg + 0.4°F)			

B,R,S,K,E,J,T,N : JIS C 1602-1995(IEC584-1)
 C : Made by "Hoskins" (WRe5-26)
 Au-Fe : ASTM COMMITTEE-20 ON TEMPERATURE MEASUREMENT
 PR40-20 : ASTM E1751-1995
 PL II : ASTM E1751-1995
 U : DIN43710 : 1985(Cu-CuNi)
 L : DIN43710 : 1985(Fe-CuNi)
 Pt100 : JIS C 1604-1997(IEC751)
 JPt100 : (JIS C 1604-1981)

11.2.2 The Accuracy at the Computation

(1) Scaling

The accuracy rating at the scaling is shown as following formula.

Scaling accuracy (digits) = (Range accuracy rating (digits) × Scaling factor + 2 digits)

$$\text{But, Scaling factor} = \frac{\text{Scaling span (digits)}}{\text{Measurement range span (digits)}}$$

Example 1) When VOLT range is -1.000 to 1.000V and Scaling range is 0.00 to 100.00 .

Range accuracy rating $= 0.1\% \times 1.000\text{V} + 3$ digits

(Input $+1.000\text{V}$) $= 4$ digits

$$\text{Scaling factor} = \frac{10000 - 0}{1000 - (-1000)} = 5$$

$$\begin{aligned}\text{Therefore, Scaling accuracy} &= \pm (4 \times 5 + 2) \\ &= \pm 22 \text{ digits}\end{aligned}$$

$$\begin{aligned}\text{Analog recording accuracy} &= \pm \left[4 + \{1000 - (-1000)\} \times \frac{0.3}{100} \right] \\ &= \pm 10 \text{ digits} \\ &= \pm 0.01\text{V}\end{aligned}$$

Example 2) When Type K is 0.0 to 200.0°C and Scaling is 0.00 to 200.00 .

Range accuracy rating $= 0.15\% \times 200.0 + 0.3^\circ\text{C}$

(Input 200°C) $= 0.6^\circ\text{C}$

$= 6$ digits

$$\text{Scaling factor} = \frac{20000 - 0}{2000 - 0} = 10$$

$$\begin{aligned}\text{Therefore, Scaling accuracy} &= \pm (6 \times 10 + 2) \\ &= \pm 62 \text{ digits} \\ &= \pm 0.62^\circ\text{C}\end{aligned}$$

(2) Square root computation

The square root computation is shown as following formula.

Display value $= 10 \sqrt{\text{Process variable}}$

Display value accuracy rating: ε , Process variable accuracy: e , and Process variable: x (convert into %).

$$\text{Display value} = 10 \sqrt{x \pm e} \div 10 \sqrt{x} \pm \frac{10e}{2\sqrt{x}}$$

$$\text{Therefore, Display value accuracy } \varepsilon = \frac{5e}{\sqrt{x}}$$

When input 4 to 20mA, the square root computation accuracy: ε is as following formula.

$$\text{Measuring 100\%} \quad \varepsilon_{100} = \frac{5e}{\sqrt{100}} = \frac{5(0.2+0.125)}{10} = 0.16\% \text{ rdg}$$

$$\text{Measuring 50\%} \quad \varepsilon_{50} = \frac{5e}{\sqrt{50}} = \frac{5(0.1+0.167)}{7.07} = 0.19\% \text{ rdg}$$

$$\text{Measuring 9\%} \quad \varepsilon_9 = \frac{5e}{\sqrt{9}} = \frac{5(0.018+1.39)}{3} = 2.3\% \text{ rdg}$$

$$\text{Measuring 1\%} \quad \varepsilon_1 = \frac{5e}{\sqrt{1}} = 5(0.002+12.5) = 62.5\% \text{ rdg}$$

If the process variable is low as above, its accuracy rating is incorrect.

(3) Decade

The accuracy rating at the decade computation is defined the logarithm of display value.

Normally, the accuracy rating is less than 1 digit and you cannot read by significant digit.

(4) Difference, Sum, and Average

The accuracy rating of Difference, Sum, and Average is shown as following formula.

Difference and Sum : Reference channel accuracy rating $\times 2$

Average : Reference channel accuracy rating

Example) When Reference channel VOLT is 00.00 to 10.00V and Difference is -10.00 to 10.00 .

Reference channel accuracy rating = $\pm (0.3\% \times 10.00V + 3 \text{ digits})$

= $\pm (1000 \times 0.003 + 3)$

= $\pm 6 \text{ digits}$

Difference accuracy rating = $\pm 6 \times 2$

= $\pm 12 \text{ digits}$

11.2.3 Individual Specifications

Table 11.3 Specification Items

Block	Item	Specification
Input Unit	Measuring Point	1,2
	Input Sampling	120ms
	Display Interval	2.4 s (Data renewal period 120ms)
Record & Printer	Recording Form	Disposable felt pen
	Printing Form	Wire dot (one color ink ribbon)
	Recording Width	100 mm
	Step Response Time	1.0 s max. (95% response to IEC 1143)
	Chart Paper	Length : 16m, Width : 114 mm, Folding width : 40 mm The length of the Clean Chart is 12 m.
	Chart feed Speed	5, 10, 15, 20, 25, 30, 40, 50, 60, 75, 80, 90, 100, 120, 150, 160, 180, 200, 240, 300, 360, 375, 450, 600, 720, 750, 900, 1200, 1500, 1800, 2400, 3000, 3600, 4500, 4800, 5400, 6000, 7200, 9000, 10800, 12000 mm/h
	Recording Color	1 pen (Red), 2 pen (Green)
	Printing Color	Purple
Weight		2.5 kg max.
Power Consumption		35VA max.

11.2.4 Standard Functions

Table 11.4 Standard Functions

Item	Description
Analog indication	None
Analog recording	Analog recording by the pen.
Engineering unit indication	None
Digital display	Indicates Channel No., Process variable, Chart feed speed, Alarm setting value on the display.
Logging print	Prints Date, Time, Chart feed speed, Process variable and Engineering unit at a programmed interval. With the setting, it is possible to choose synchronous print/Asynchronous print.
List print	Prints Chart feed speed, Sensor type, Measurement range, Engineering unit, Alarm setting value, Comment, Printing description, Logging print ON/OFF, Zone, Partial Compression/Expansion
Engineering list print	Prints Channel or Tag print, Alarm function, Logging print ON/OFF, Reference time, Interval, Logging print Sync./ASync., Print gap correction ON/OFF, Alarm hysteresis, Burn out, DI function (Option)
Manual print	Prints Measurement result by the key input.
Programming	Programs Chart feed speed, Alarm setting value, Logging, Date and Time.
Memory Back Up	A built-in lithium battery protects the clock function. The battery life is 10 years. (total power off period of the instrument : 5 years)A non-volatile memory stores setting data and calibration data.
Alarm	Sets 2 types (H, L) of alarms per channel. Sets a total of 4 level.
Chart Speed	Selects Chart feed speed from 41 types.
Clock Indication	Indicates Year, Month, Day, Hour and Minute. Sets the year in A.D, and adjusts leap year automatically.
Self Diagnostics	When malfunctions occur, "E Err * *" is indicated. (* *: type of the defect).
Scaling	Indicates and record the input of a unification signal etc. is converted into the engineering scales.

11.3 Standard Setting Functions

11.3.1 Standard Setting Functions

Table 11.5 Standard Setting Functions

Function	Description
Burnout	To deflect over toward 100% with disconnecting input. Possible to specify the every channel's burnout. (DC voltage of $\pm 50\text{mV}$ max., TC input)
Tag Number setting	Sets a tag number up to 5 characters every channel. (Prints at a logging print)
Reference Junction Compensation	Specifies an inside/outside of the reference junction compensation.
Copy Function	Copies a channel setting.
Input Offset setting	Sets the input offset each channel.
Zone Recording (Track Recording)	Specifies a recording area per channel to separate the record into Tracks.
Partial Compression/Expansion	Records Partial Compression/Expansion to 1-crease line every channel.
Decade Recording Indication	Records and indicates by 5 decades. It is 2 digits that the effective number to indicate and print.
Alarm Print	Prints Occurrence time, Occurrence channel, Setting No. and Alarm type in purple when alarm activates.
Alarm Recovery Print	Prints Recovery time, Recovery channel, Setting No. and Alarm type in purple when alarm recovers.
Computation	Computes Square root.
Interchannel Computation	Computes Sum, Difference and Average between channels.
Alarm Hysteresis Width	Sets an alarm hysteresis width 0% FS or 0.5% FS.
Digital Filter	Records the first order lag with the filtering Process variable.

11.4 Optional Functions

11.4.1 Remote Function by DI function

Function	Description
Chart Feed Start/Stop	Starts with tuning to ON. Stops with tuning to OFF.
Changing Chart feed Speed	Changes 1st with turning to ON and 2nd with OFF.
Comment Print (Sync./Async.)	Prints Comment with turning to ON.
Manual Print (Sync./Async.)	Prints Manual Print with turning to ON.
Date and Time Print (Sync./Async.)	Prints Date and Time with turning to ON.

11.4.2 Alarm output function

3 relays

11.4.3 Communication Unit

RS-232C(Standard)

RS-485(Optional)

Shinko North America Limited

Office	: 25 Whitefriars Drive, Toronto, Ontario, Canada M3A 2L2	
Mail Address	: 25 Whitefriars Drive, Toronto, Ontario, Canada M3A 2L2	
URL	: http://www.shinkona.com	Tel : 416 444-0817
Toll Free	: 1 866-4SHINKO	Fax: 416 444-2361

No.HR 7 2 E 3 2001.10