



# BF100 & PA100 Series Control Modules


## Burst Firing Control HCQ & HVQ

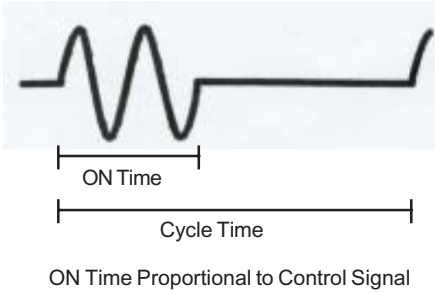

## Phase Angle Control HCP & HVP

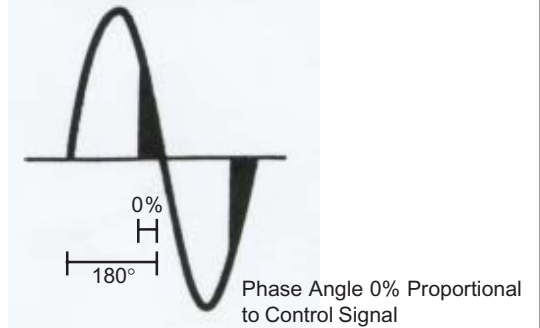

For 3-Phase Applications Using Phase Angle Control, Auxillary Supply  
Must Be In Phase With LOAD Being Controlled

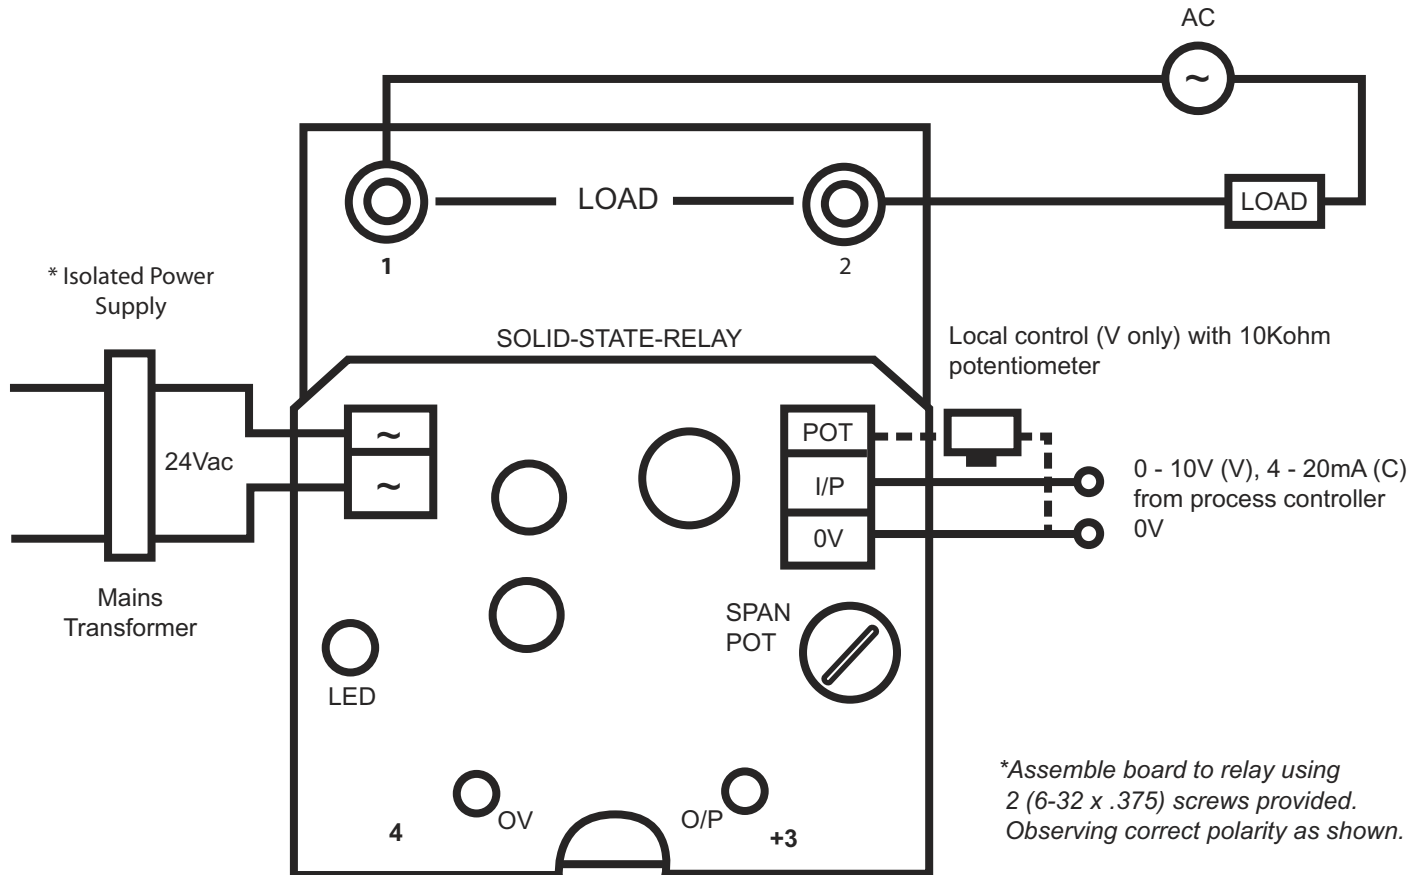

\* **WARNING** - Grounding power supply and control signal will result in ground loop condition and damage control board.